

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Potaroma](#) /

> [Potaroma Flopping Fish Cat Toy Instruction Manual - Model Potaroma_Pet_025](#)

Potaroma Potaroma_Pet_025

Potaroma Flopping Fish Cat Toy Instruction Manual

Model: Potaroma_Pet_025

Brand: Potaroma

INTRODUCTION

The Potaroma Flopping Fish Cat Toy is designed to provide interactive entertainment for your feline companion. Featuring realistic fish simulation, motion-activated flopping, and a catnip pouch, this toy encourages natural hunting instincts and promotes physical activity. It is USB rechargeable and made from soft, durable, and washable plush material for long-lasting enjoyment.

PACKAGE CONTENTS

- 1 x Flopping Fish Toy
- 1 x Catnip Pouch
- 1 x USB Charging Cable



Image: The product packaging displaying the flopping fish toy, a catnip pouch, and a USB charging cable.

SETUP

1. **Charging the Toy:** Locate the zipper on the fish's belly. Unzip it to reveal the built-in motor. Connect the provided USB charging cable to the motor's port and to a suitable USB power source. A red light will illuminate during charging and turn off when fully charged.

USB Rechargeable

Lasting fun without hassle to replace batteries

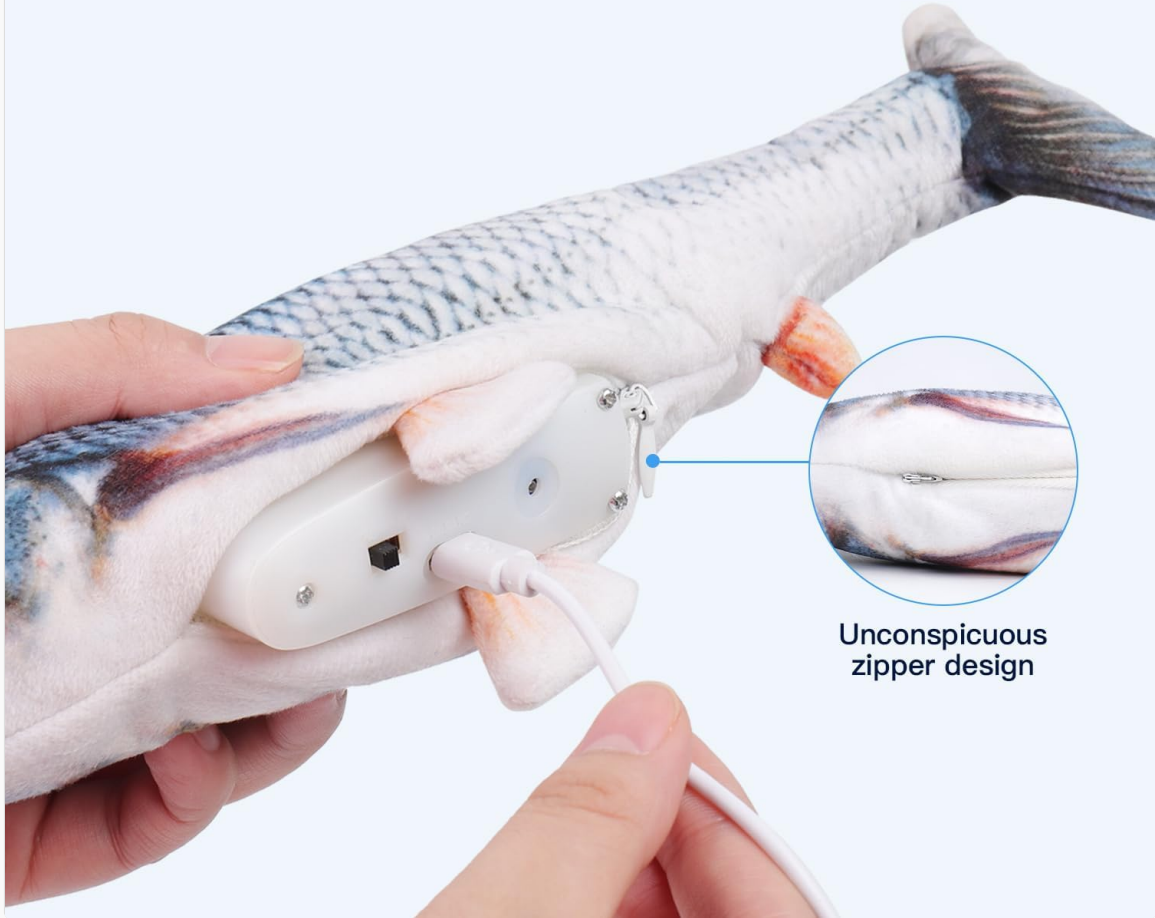


Image: A hand connecting the USB charging cable to the internal mechanism of the fish toy, located inside a zippered compartment.

- 2. Inserting Catnip:** Open the catnip pouch and place it inside the fish toy's internal compartment, alongside the motor. This enhances the toy's appeal to cats.



Image: A hand placing a catnip pouch into the zippered compartment of the fish toy, next to the motor.

- 3. Securing the Motor:** Once charged and with catnip inserted, ensure the motor's switch is in the 'ON' position. Close the zipper securely.

OPERATING INSTRUCTIONS

- 1. Activation:** The toy features an automatic built-in motion sensor. When your cat touches or interacts with the toy, the sensor activates, causing the fish to move in a wiggling motion.

Flops Like A Real Fish

Activated by a paw touch, stimulate cat's hunting instinct with realistic fish and lifelike flopping



Image: A cat engaging with the flopping fish toy, which is actively wiggling on a rug, simulating real fish movement.

2. **Flopping Modes:** The toy offers three distinct flopping modes (Gentle, Normal, Active) to maintain your cat's interest and prevent boredom. These modes are designed to simulate realistic fish movements.

3 Flopping Modes

3 flopping modes stop cats getting bored



Gentle



Normal



Active

Image: A visual representation of the three flopping modes (Gentle, Normal, Active) that the fish toy can perform.

3. **Standby Mode:** To conserve battery, the toy will enter a standby mode after a period of inactivity. It will reactivate upon touch.

MAINTENANCE

- **Cleaning the Plush Cover:** The internal motor is detachable. Unzip the fish belly, remove the motor, and then the plush cover can be machine washed for convenient cleaning.

Bite Resistant & Washable

Easily removable for washing, keeping cats healthy



Take out the inside motor



Soft and durable fabric

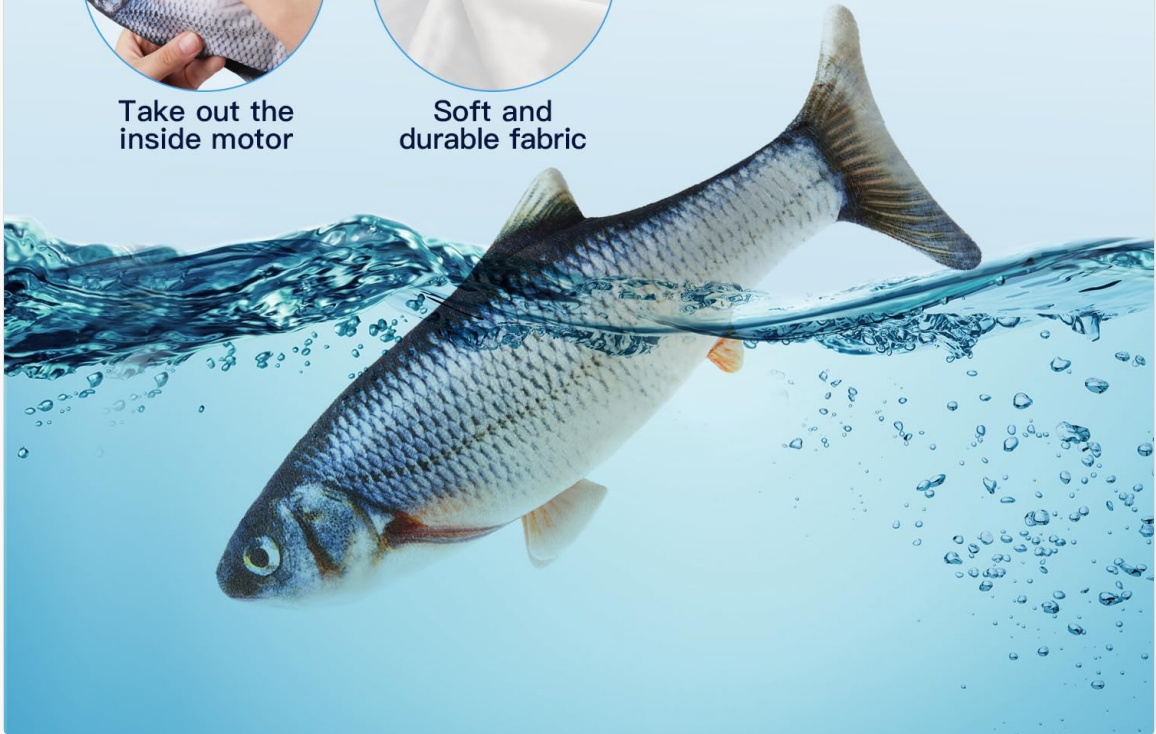


Image: Hands demonstrating the removal of the internal motor from the fish toy, allowing the plush exterior to be washed.

- **Reassembly:** After cleaning and drying the plush cover, reinsert the motor and close the zipper.

TROUBLESHOOTING

- **Toy not flopping:** Ensure the motor is fully charged and the power switch inside the fish belly is in the 'ON' position. Tap the fish belly to activate the motion sensor.
- **Reduced activity:** If the toy's movement seems sluggish, it may require recharging.
- **Cat not interested:** Try adding fresh catnip to the internal pouch. Some cats may take time to adjust to new toys.

SPECIFICATIONS

Feature	Detail
Model Number	Potaroma_Pet_025
Item Weight	3.5 ounces
Item Dimensions (LxWxH)	10.5 x 10.5 x 4.7 inches

Material	Plush
Battery	1 Lithium Ion battery (included)
Charging	USB Chargeable
Care Instructions	Machine Washable (after motor removal)

WARRANTY & SUPPORT

This Potaroma product comes with a **1-month warranty** from the date of purchase. For any product-related issues, questions, or support needs, please contact Potaroma customer service. Refer to the product packaging or the official Potaroma website for contact details.
