

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Gazeled](#) /
- > [Gazeled Portable D-Cell Battery Powered Desk Fan Instruction Manual](#)

Gazeled F24

Gazeled Portable D-Cell Battery Powered Desk Fan

INSTRUCTION MANUAL

Brand: Gazeled | Model: F24

Introduction

Thank you for choosing the Gazeled Portable D-Cell Battery Powered Desk Fan. This versatile 5-inch fan is designed to provide powerful and quiet airflow for various environments, including offices, bedrooms, and outdoor activities like camping. With its long-lasting battery life, multiple speed settings, timer function, and portable design, it ensures comfort and convenience wherever you go.

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your fan. Please read it thoroughly before use and retain it for future reference.

Setup

1. Battery Installation (D-Cell)



The Gazeled fan operates on 4 D-cell batteries (not included). To install, locate the battery compartment on the underside of the fan. Open the cover and insert the batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the cover securely. The fan is designed for super long-lasting operation, providing up to 214 hours on low speed, 46 hours on medium speed, and 12 hours on high speed with fresh D-cell batteries.

2. USB Power Connection



Alternatively, the fan can be powered via USB. Connect the included USB cable to the fan's USB port and plug the other end into a power source such as a power bank, car charger, computer, or a 5V wall USB charger. This allows for continuous operation without relying on batteries. Note: A power supply above 1A is required for the 3rd gear (high speed) to function optimally.

Operating Instructions

1. Power On/Off and Speed Settings



To turn the fan on, press the **POWER** button. The fan will start at the lowest speed setting. Press the **POWER** button repeatedly to cycle through the 3 available speeds: Low (1150 RPM), Medium (1800 RPM), and High (2750 RPM). To turn the fan off, continue pressing the **POWER** button until the fan stops. The fan operates quietly, with a noise level of approximately 50dB, making it suitable for quiet environments.

2. Timer Function



The fan features a convenient timer function. Press the **TIMER** button to set the fan to automatically turn off after 1, 3, or 5 hours. The corresponding LED indicator will light up to show the selected timer duration. This feature is ideal for use during sleep or when you need the fan to operate for a specific period.

3. 180° Vertical Rotation



The fan head can be manually adjusted 180 degrees vertically. This allows you to direct the airflow precisely where you need it, providing instant cooling and comfort. Simply tilt the fan head to your desired angle.

4. Official Product Video: Save it for Hurricane Seasons

Your browser does not support the video tag.

This video demonstrates the fan's utility during power outages, highlighting its battery-operated functionality and portability for emergency situations like hurricane seasons.

Maintenance

Cleaning the Fan



To ensure optimal performance and pure airflow, regular cleaning of your fan is recommended. The front cover of the fan is removable for easy cleaning. Simply twist the cover counter-clockwise to detach it. Once removed, you can wipe down the fan blades and rinse the cover with water. Ensure all parts are completely dry before reattaching the cover by twisting it clockwise until it locks into place.

Troubleshooting

- **Fan not turning on:** Ensure batteries are correctly installed with proper polarity or that the USB cable is securely connected to a working power source. Check if the power source (e.g., USB adapter, power bank) is active.
- **Fan not reaching highest speed:** If using USB power, ensure your power supply provides at least 1A output. Some lower-power USB ports may not provide sufficient current for the highest speed setting.
- **Weak airflow:** Check if the fan blades or grille are obstructed by dust or debris. Refer to the Maintenance section for cleaning instructions. Ensure the fan is placed on a stable, flat surface.
- **Unusual noise:** If the fan produces unusual noises, ensure it is on a stable surface and that no foreign objects are obstructing the blades. If the noise persists after cleaning, contact customer support.

Specifications

Feature	Detail
Brand	Gazeled
Model Name	F24
Color	Blue
Product Dimensions	10.31"D x 7.64"W x 3.39"H
Item Weight	1.17 Pounds
Power Source	Battery Powered (4 D-cell batteries, not included) / USB Powered
Number of Speeds	3 (Low, Medium, High)
Noise Level	50 dB
Rotation	180° Vertical
Timer Settings	1, 3, or 5 hours
Blade Length	5 Inches
Material	Plastic
Indoor/Outdoor Usage	Outdoor

Warranty

Gazeled offers a 1-year warranty from the purchase date. Please retain your proof of purchase for warranty claims. For any issues or questions regarding the warranty, please contact Gazeled customer support.

Support

For further assistance or detailed information, please refer to the official user guide:

[Download User Guide
\(PDF\)](#)