

Manuals.plus /

› Lukovee /

› Lukovee Automatic Fish Feeder Instruction Manual

Lukovee A- Scheduled Time Display

Lukovee Automatic Fish Feeder Instruction Manual

Brand: **Lukovee**

Model: **A- Scheduled Time Display**

1. PRODUCT OVERVIEW

The Lukovee Automatic Fish Feeder is designed to provide convenient and reliable feeding for your aquarium or fish tank inhabitants. This new generation feeder features an accurate time display, USB rechargeable battery, and a large capacity food dispenser, making it ideal for daily use or during vacations.

Key features include:

- **Accurate Time Display:** Shows current time (Hour:Minute) and scheduled feeding times.
- **USB Rechargeable:** 700mAh battery, 3-4 hours for full charge, lasts 3-6 months.
- **Easy to Operate:** Top-fill design, adjustable food amount, disassemblable silo for easy cleaning.
- **Large Capacity:** 6.8 Ounces / 200ML, suitable for 10-150 gallon tanks.
- **Two Fixing Methods:** Securely attach to tank cover with double-sided sticker or to tank glass with adjustable clamp.



Figure 1: Lukovee Automatic Fish Feeder

2. SETUP GUIDE

2.1 Charging the Feeder

Before first use, fully charge the feeder using the provided USB cable. The battery capacity is 700mAh and typically takes 3-4 hours to fully charge. A full charge can last for 3-6 months depending on usage frequency.

700mAh Battery Capacity

USB Charge Can be Used for **3-6 Months**
After Fully Charged (**3-4 Hours**)



Memory Function

No need to disassemble
the machine when
recharging

Figure 2: USB Charging Port

2.2 Installation Methods

The Lukovee Automatic Fish Feeder offers two primary installation methods to suit various tank types:

1. **Plane Fixing Method (for tank covers):** Use the included double-sided sticker to fix the feeder on the flat surface of your tank cover. Ensure the feeder is positioned directly over the water level and cannot fall into the water.
2. **Vertical Fixing Method (for open fish tanks):** Attach the fixing bracket to the main body and rotate the screw knob tightly to secure it to the tank glass. This method is suitable for glass thickness ranging from 0 to 24 mm (0.94 inch). The feeder can be rotated 360 degrees for optimal positioning.

2 METHODS TO INSTALL

1 Plane Fixing Method:

Use Double-side Sticker fixed on the tank cover

Make sure the fish feeder is fixed over the water level and not make it fall into the water



2 Vertical Fixing Method:

Suitable for Open Fish Tanks Without Top Cover

you need to attach the fixing bracket to the main body and then rotate the screw knob tightly. It can be fixed in glass $\leq 24\text{mm} / 0.94\text{inch}$ thick.



(Rotatable Base)



Figure 3: Installation Options

3. OPERATING INSTRUCTIONS

3.1 Setting the Clock

To set the current time (Hour:Minute) on the feeder's display:

1. Long press the **Setting Button** (gear icon) for 3 seconds until the hour/minute numbers flash.
2. Use the "**▲**" or "**▼**" buttons to adjust the hour and minute.
3. Press the **Setting Button** again to save the time. The clock display will stop flashing.

Don't Worry About Fish, Enjoy You Vacation



Accurate Time Display

Display the accurate feeding time (Hour : Minute)



Our

X
Other



Figure 4: Accurate Time Display

3.2 Setting Feeding Times and Laps

The feeder can be programmed for up to 3 feedings per day, with 1-3 rotations (laps) per feeding. To set the feeding schedule:

1. After setting the clock, press the **Setting Button** (gear icon) briefly to enter feeding time setting mode. The first feeding time will flash.
2. Use the "▲" or "▼" buttons to adjust the desired feeding hour and minute.
3. Press the **Setting Button** again to move to the feeding laps setting for that time. Use "▲" or "▼" to select 1, 2, or 3 rotations.
4. Repeat steps 2 and 3 for the second and third feeding times if desired.
5. Once all settings are complete, long press the **Manual Button** (hand icon) to save the settings and exit.



Long Press the button for 5 seconds to set the Feeding setting: Feed at 8 a.m. and 8 p.m



Figure 5: How to Use - Setting Parameters

3.3 Manual Feeding


To dispense food manually at any time, simply press the **Manual Button** (hand icon) once. The feeder will perform one rotation and dispense food.

3.4 Adjusting Food Output

The feeder features an adjustable feeding slider to control the amount of food dispensed per rotation. This allows you to customize the portion size based on your fish's needs and the type of food used (e.g., pellets, flakes).

- Locate the adjustable slider on the food drum.
- Slide it to increase or decrease the opening size, thereby controlling the amount of food released.
- It is recommended to test the output a few times to find the perfect amount for your tank.

Adjustable Feeding Slider

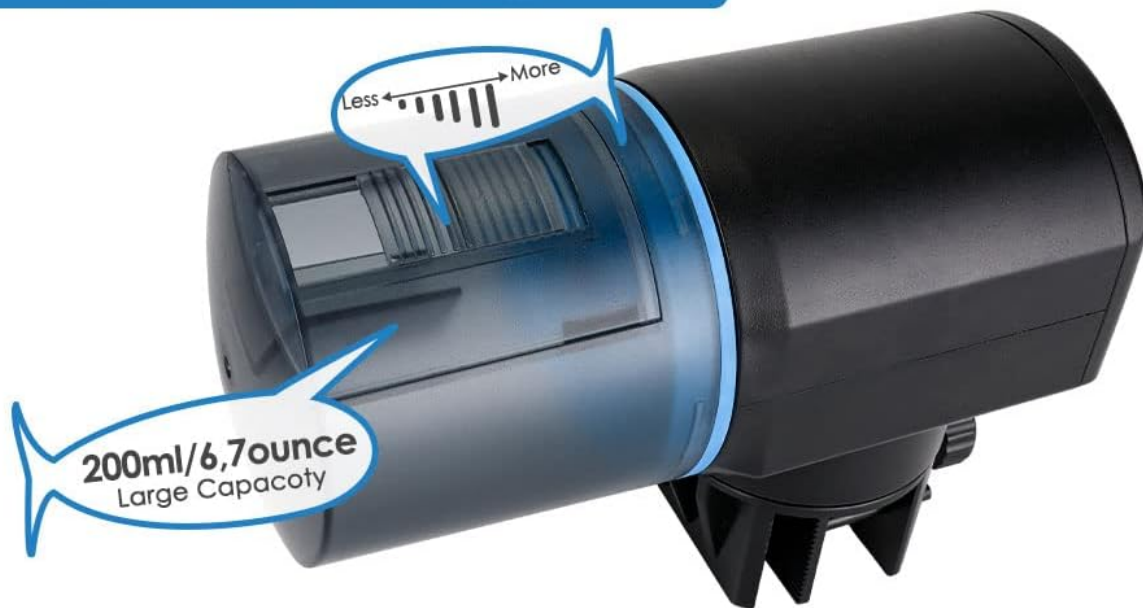

Suitable for a variety of shapes of feed



Suitable for a variety of fish and turtles



Figure 6: Adjustable Feeding Slider

3.5 Official Operating Video

For a visual guide on setting up and operating your Lukovee Automatic Fish Feeder, please watch the official operating instruction video below:

Your browser does not support the video tag.

Video 1: Lukovee Automatic Fish Feeder - OPERATING INSTRUCTION. This video demonstrates how to set the clock, feeding times, and adjust the food output.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your fish feeder:

- **Cleaning the Silo:** The food silo can be easily disassembled for cleaning. It is recommended to hand wash the silo regularly to prevent food buildup and maintain hygiene.
- **Moisture Prevention:** Ensure the feeder is positioned to prevent moisture from entering the food hopper, which can cause food to clump or mold.
- **Battery Care:** Recharge the feeder when the battery indicator is low to ensure continuous operation.

5. TROUBLESHOOTING

If you encounter issues with your Lukovee Automatic Fish Feeder, consider the following common problems and solutions:

- **Feeder Not Dispensing Food:**

- Check if the food silo is empty.
- Ensure the adjustable feeding slider is open sufficiently for the type of food being used. Flakes may need a larger opening than pellets.
- Verify the battery level and recharge if necessary.
- Check for any clogs in the dispensing mechanism. Disassemble and clean the silo if needed.

- **Feeder Dispensing Continuously or Not Stopping:**

- This can sometimes occur if the unit experiences a glitch after charging or setting changes. Try to reset the settings by long pressing the "▼" button for 5 seconds to delete all settings, then re-program.
- Ensure the manual feed button is not stuck.
- If the issue persists, contact customer support.

- **Display Not Working or Flashing:**

- The display may flash briefly when the battery is low. Fully charge the device.
- If the display remains blank or unresponsive after charging, try resetting the device.

6. SPECIFICATIONS

Feature	Detail
Brand	Lukovee
Model	A- Scheduled Time Display
Item Weight	7.7 Ounces
Product Dimensions (LxWxH)	6.69 x 3.74 x 4.92 inches
Battery	1 Lithium Ion (included)
Food Capacity	200ML / 6.8 Ounces
Material	Acrylonitrile Butadiene Styrene
Care Instructions	Hand Wash Only
Target Species	Fish, Turtle
Special Features	Accurate Time Display, Feeding Control, USB Rechargeable

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact the seller directly. You can also visit the official Lukovee store on Amazon for more information and assistance:

Visit the Lukovee
Store