

Delimano MultiCooker 18-in-1

Delimano MultiCooker 18-in-1 User Manual

Model: MultiCooker 18-in-1

1. INTRODUCTION

Thank you for choosing the Delimano MultiCooker 18-in-1. This versatile appliance is designed to simplify your cooking process, offering a wide range of functions from slow cooking to baking, all in one compact unit. Please read this manual carefully before first use to ensure safe and optimal operation of your new multicooker.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children. The multicooker features an automatic child safety lock.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

- Ensure proper ventilation around the appliance during operation.
- The multicooker is equipped with overheating protection.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Delimano MultiCooker 18-in-1.



Figure 3.1: Front view of the Delimano MultiCooker 18-in-1, showcasing its compact design and control panel.



Figure 3.2: The multicooker positioned in a typical kitchen environment, highlighting its sleek appearance.



Figure 3.3: The multicooker shown alongside a prepared dish, demonstrating its cooking capabilities.



Figure 3.4: A detailed view of the LED touchscreen control panel, showing various program options and settings.



Figure 3.5: The removable non-stick inner pot, designed for easy cooking and cleaning.



Figure 3.6: Included accessories: a steam attachment, measuring cup, spatula, and serving spoon.

4. SETUP AND FIRST USE

Before using your multicooker for the first time, follow these steps:

1. **Unpack:** Carefully remove the multicooker and all accessories from the packaging.
2. **Clean:** Wash the removable inner pot, steam attachment, measuring cup, spatula, and serving spoon with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the multicooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.
4. **Insert Inner Pot:** Place the clean and dry inner pot into the main unit. Ensure it is seated correctly.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240V). The LED display will light up, indicating the unit is in standby mode.

5. OPERATING INSTRUCTIONS

The Delimano MultiCooker 18-in-1 offers 18 pre-set programs and a custom setting for versatile cooking.

5.1. Control Panel Overview

The touchscreen LED display allows for easy selection of programs and settings. Key buttons include:

- **Keep Warm/Cancel:** Activates the keep warm function or cancels the current program.
- **Delay:** Sets a delayed start time for cooking.
- **Menu:** Navigates through the pre-set programs.
- **+/- Hour/Min:** Adjusts cooking time or delay time.
- **Temperature/Time:** Toggles between temperature and time adjustment for custom programs.
- **Start:** Begins the selected cooking program.

5.2. Pre-set Programs

Select the desired program by pressing the 'Menu' button and navigating through the options. Each program is optimized for specific dishes:

Program	Description
Soup	For preparing various types of soups and broths.

Program	Description
Rice	Ideal for cooking all types of rice to perfection.
Fry	For frying ingredients with minimal oil.
Pasta	Cooks pasta quickly and efficiently.
Cake	Bakes cakes and other desserts.
Bread	For baking homemade bread.
Risotto	Prepares creamy risotto dishes.
Pizza	Cooks pizza with a crispy crust.
Saute	For sautéing vegetables or browning meat.
Wine	Specific program for mulled wine or similar preparations.
Dumpling	Cooks dumplings perfectly.
Reheat	Warms up previously cooked food.
Oatmeal	Prepares creamy oatmeal or porridge.
Slow Cook	For slow-cooked stews, roasts, and other dishes.
Bake	General baking function for various recipes.
Steam	Steams vegetables, fish, and other foods using the steam attachment.
Meat	Optimized for cooking various types of meat.
Custom	Allows manual adjustment of cooking time and temperature.

5.3. Delay Start Function

The multicooker features a 24-hour delay start function, allowing you to prepare ingredients and set the cooking to begin at a later time. This ensures your meal is ready when you need it.

1. Add ingredients to the inner pot.
2. Select your desired cooking program.
3. Press the 'Delay' button.
4. Use the '+/- Hour/Min' buttons to set the desired delay time (up to 24 hours).
5. Press 'Start' to confirm. The multicooker will begin cooking after the set delay time.

5.4. Keep Warm Function

After most cooking programs are complete, the multicooker will automatically switch to a 'Keep Warm' mode. This function maintains the food at an optimal serving temperature without overcooking. You can also manually activate or cancel this function by pressing the 'Keep Warm/Cancel' button.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your multicooker.

1. **Unplug and Cool:** Always unplug the multicooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot is removable and can be washed with warm soapy water. Use a soft sponge or cloth to avoid damaging the non-stick coating. Rinse thoroughly and dry completely before reinserting.
3. **Steam Attachment and Accessories:** The steam attachment, measuring cup, spatula, and serving spoon can also be washed with warm soapy water, rinsed, and dried.
4. **Main Unit:** Wipe the exterior of the multicooker with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
5. **Lid:** Clean the inside of the lid with a damp cloth. Ensure any food residue is removed.
6. **Storage:** Store the multicooker in a dry place when not in use.

7. TROUBLESHOOTING

If you encounter any issues with your Delimano MultiCooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged in. Check household circuit breaker. Try a different outlet.
Cooking program does not start.	'Start' button not pressed; lid not properly closed; delay timer active.	Press 'Start' after selecting program. Ensure lid is fully closed and locked. Check if delay timer is set.
Food is undercooked/overcooked.	Incorrect program selected; insufficient/excessive liquid; lid not sealed.	Refer to recipe for correct program and cooking time. Adjust liquid amount. Ensure lid is properly sealed.
Steam leaking from lid.	Lid not properly closed; sealing gasket dirty or damaged.	Ensure lid is securely closed. Clean or replace the sealing gasket if necessary.
Display shows an error code.	Internal malfunction.	Unplug the unit, wait a few minutes, then plug it back in. If the error persists, contact customer support.

If the problem persists after trying these solutions, please contact Delimano customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Delimano

Feature	Specification
Model	MultiCooker 18-in-1
Capacity	4 Liters
Power	700 Watts
Voltage	220-240 V
Dimensions (L x W x H)	28 x 27.5 x 27.5 cm
Control Method	Touchscreen LED Display
Special Features	18 Pre-set Programs, Programmable Delay Start (24h), Keep Warm Function, Non-stick Inner Pot, Automatic Child Safety, Overheating Protection

9. WARRANTY AND SUPPORT

Your Delimano MultiCooker 18-in-1 comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Delimano customer service through their official website or the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question