

[manuals.plus](#) /

› [Skyworth](#) /

› [Skyworth 40 Inch Standard LED TV \(Model 40E2A12G\) User Manual](#)

Skyworth 40E2A12G

Skyworth 40 Inch Standard LED TV (Model 40E2A12G) User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. SETUP GUIDE

1.1 Unpacking

Carefully remove the television from its packaging. Ensure all components are present before discarding packaging materials. The package should include the TV unit, remote control, power cable, and TV stand components.

1.2 Attaching the Stand

To attach the stand to your Skyworth 40E2A12G TV, follow these steps:

1. Place the TV face-down on a soft, flat surface to prevent screen damage.
2. Align the stand bases with the corresponding slots on the bottom of the TV.
3. Secure the stand bases using the provided screws. Ensure they are tightened firmly but do not overtighten.



Figure 1.1: Front view of the Skyworth 40E2A12G TV with the stand correctly attached.



Figure 1.2: Side view illustrating the profile of the Skyworth 40E2A12G TV with its stand.

1.3 Wall Mounting (Optional)

If you choose to wall mount your TV, ensure you use a VESA-compatible wall mount kit (not included) appropriate for a 40-inch television. Consult a professional for installation to ensure safety and proper mounting.

1.4 Connecting Peripherals

Before connecting any cables, ensure the TV and all devices are powered off.

1.4.1 Power Connection

Connect the power cable to the TV's power input and then to a wall outlet.

1.4.2 HDMI Devices

Use HDMI cables to connect devices such as Blu-ray players, game consoles, or set-top boxes to the HDMI ports on the TV.

1.4.3 USB Devices

Insert USB drives for media playback into the USB ports.

1.4.4 Antenna/Cable Connection

Connect your antenna or cable TV coaxial cable to the 'ANT/CABLE IN' port on the TV.



Figure 1.3: Rear view of the Skyworth 40E2A12G TV, highlighting the various input and output ports for connectivity.

2. OPERATING INSTRUCTIONS

2.1 First Time Setup Wizard

Upon first power-on, the TV will guide you through an initial setup wizard. This includes selecting your language, country, time zone, and scanning for available channels.

2.2 Basic Functions

2.2.1 Power On/Off

Press the **POWER** button on the remote control or on the TV to turn the TV on or off.

2.2.2 Channel Selection

Use the **CH+/-** buttons to navigate through channels or enter channel numbers directly using the numeric keypad on the remote.

2.2.3 Volume Control

Adjust the volume using the **VOL+/-** buttons on the remote control.

2.2.4 Input Source Selection

Press the **SOURCE** or **INPUT** button on the remote to switch between connected devices (e.g., HDMI 1, USB, TV).

2.3 Remote Control Overview

The included remote control allows access to all TV functions. Familiarize yourself with the button layout for easy navigation. It includes buttons for power, volume, channel, input selection, menu, and navigation.

3. MAINTENANCE AND CARE

3.1 Cleaning the Screen

To clean the TV screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

3.2 Cleaning the TV Body

Use a soft, dry cloth to wipe the TV's frame and back panel. Avoid using abrasive cleaners or solvents.

3.3 Storage

If storing the TV for an extended period, disconnect it from power, pack it in its original packaging if possible, and store it in a dry, dust-free environment.

4. TROUBLESHOOTING GUIDE

This section addresses common issues you might encounter with your Skyworth TV.

4.1 No Power

- Ensure the power cable is securely connected to both the TV and the wall outlet.
- Check if the wall outlet is functioning by plugging in another device.
- Press the power button on the TV itself, not just the remote.

4.2 No Picture/Sound

- Verify that the correct input source is selected (e.g., HDMI 1, TV).
- Check all cable connections between the TV and external devices.
- Ensure the volume is not muted or set to zero.

4.3 Poor Picture Quality

- Check the antenna or cable connection for looseness or damage.
- Adjust picture settings (brightness, contrast, sharpness) in the TV menu.

- If using an external device, check its output resolution settings.

4.4 Remote Control Not Working

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the TV's IR sensor.
- Point the remote directly at the TV.

5. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	40E2A12G
Brand	Skyworth
Screen Size	40 Inches
Display Type	LED
Resolution	720p
Refresh Rate	60 Hz
Connectivity Technology	HDMI, USB
Included Components	Power Cable, Remote Control
Special Features	Flat Screen
Colour	Black
Package Dimensions	94.8 x 31.8 x 14 cm
Item Weight	9.32 kg

6. WARRANTY AND SUPPORT INFORMATION

This Skyworth television comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. For technical support, service, or warranty claims, please contact Skyworth customer service through their official channels. Keep your purchase receipt as proof of purchase.

Related Documents - 40E2A12G

	<p>Skyworth 4K Ultra HD STB HP4500-CL (IPTV) User Manual</p> <p>User manual for the Skyworth 4K Ultra HD STB, model HP4500-CL (IPTV), detailing specifications, unpacking, connections, and safety instructions.</p>
 <p>Operation Instruction Request of customers, sincerely thank you for purchasing SKYWORTH equipped with wireless WiFi NTUD-U20 - type USB peripheral products. This product can support IEEE802.11 protocol, based on the IEEE802.11b/g/n standard, with the maximum transmission rate of up to 300Mbps. Ensure that users know and understand data flow, security and stability. NTUD-U20 - type WiFi peripheral products can support Windows XP/Vista / 7 / Linux operating system. In SKYWORTH TV, have complete embedded in the product and the driver, without need to install, and at the same time support Linux and Android. Used in TV production operation is as follows: 1. Turn on the TV, switch to the "Setup" page; interface. 2. Select "Network setup", "OK" to enter; 3. Select "Network setup" function, "OK" to enter; 4. Choose the "Wireless network", "OK" to enter;</p>	<p>Skyworth NTUD-U20 Wireless USB Peripheral Operation Manual</p> <p>Operation instructions and FCC compliance information for the Skyworth NTUD-U20 wireless USB peripheral, supporting Wi-Fi and Bluetooth connectivity.</p>
	<p>Skyworth 70UC6200 Quick Start Guide</p> <p>A quick start guide for the Skyworth 70UC6200 television, covering unpacking, installation, safety precautions, remote control usage, basic operations, troubleshooting, specifications, and terminal connections.</p>
	<p>Skyworth 55XC9000 & 65XC9000 Quick Start Guide</p> <p>A comprehensive quick start guide for the Skyworth 55XC9000 and 65XC9000 televisions, covering unpacking, installation, safety precautions, remote control usage, troubleshooting, and specifications.</p>
	<p>Skyworth 32E10/32S3G Quick Start Guide</p> <p>This guide provides essential information for setting up and operating your Skyworth 32E10/32S3G television, including unpacking, installation, safety precautions, basic operations, troubleshooting, and specifications.</p>
 <p>Operation Instruction Request of customers, sincerely thank you for purchasing SKYWORTH equipped with wireless WiFi NTUD-T4 - type USB peripheral products. This product can support IEEE802.11 protocol, based on the IEEE802.11b/g/n standard, with the maximum transmission rate of up to 300Mbps. Ensure that users know and understand data flow, security and stability. NTUD-T4 - type WiFi peripheral products can support Windows XP/Vista / 7 / Linux operating system. In SKYWORTH TV, have complete embedded in the product and the driver, without need to install, and at the same time support Linux and Android. Used in TV production operation is as follows: 1. Turn on the TV, switch to the "Setup" page; interface. 2. Select "Network setup", "OK" to enter; 3. Select "Network setup" function, "OK" to enter; 4. Choose the "Wireless network", "OK" to enter;</p>	<p>Skyworth NTUD-T4 Wireless WIFI USB Peripheral Operation Instruction and Technical Details</p> <p>Comprehensive operation instructions, technical specifications, FCC compliance information, and test modes for the Skyworth NTUD-T4 wireless WIFI USB peripheral. Learn how to connect and integrate this device.</p>