

ICON US-ICBAF12

ICON 12-inch Bluetooth Speaker User Manual

Model: US-ICBAF12

1. INTRODUCTION

Thank you for purchasing the ICON 12-inch Bluetooth Speaker. This manual provides detailed instructions for the safe and efficient operation of your new speaker. Please read this manual thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

- ICON 12-inch Bluetooth Speaker
- Power Cable
- Wireless Microphone
- Remote Control
- User Manual

Incluye micrófono y control remoto



Image: The ICON Bluetooth speaker shown with its included wireless microphone and remote control, highlighting the complete package contents.

3. PRODUCT OVERVIEW

The ICON 12-inch Bluetooth Speaker is a versatile audio system designed for various applications, offering powerful sound output and multiple connectivity options. It features a built-in rechargeable battery for portability and integrated wheels and a retractable handle for easy transport.



Image: Front view of the ICON 12-inch Bluetooth Speaker, showcasing its robust design and blue illuminated woofer.



Image: Rear view of the ICON 12-inch Bluetooth Speaker, displaying the main control panel and retractable handle.

Key Features:

- Powerful 6000W PMPO Output
- Bluetooth Connectivity for Wireless Streaming
- USB and SD Card Playback
- 3.5mm AUX Input
- Built-in FM Radio
- Microphone and Guitar Inputs
- Rechargeable Battery for Extended Playtime
- Integrated Equalizer for Sound Customization

- TWS (True Wireless Stereo) Functionality for connecting multiple speakers
- LED Light Effects



Image: Visual representation of the ICON Bluetooth Speaker's key features, including excellent sound quality, Bluetooth compatibility, AUX input, rechargeable battery, FM radio, and equalizer.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the speaker's internal battery. Connect the power cable to the AC INPUT port on the rear panel and plug it into a standard wall outlet. The charging indicator will illuminate. Charging time may vary.

4.2 Control Panel Overview

Familiarize yourself with the control panel located on the rear of the speaker.



Image: Detailed view of the ICON speaker's rear control panel, showing various inputs, volume, treble, and bass controls.



Image: Diagram illustrating key controls on the ICON speaker, including the power switch, light switch, input ports (SD Card, USB, AUX), and playback control buttons (Mode Switch, Record, Repeat, Previous, Play/Pause, Next).

- **POWER Switch:** Turns the speaker On or Off.
- **LIGHT SW:** Toggles the LED light effects On or Off.
- **SD CARD / USB / AUX Inputs:** For connecting external media or devices.
- **MODE Switch:** Cycles through input modes (Bluetooth, USB, SD, AUX, FM).
- **RECORD Button:** Initiates recording (e.g., microphone input to USB/SD).
- **REPEAT Button:** Repeats the current track or playlist.
- **PREVIOUS / PLAY/PAUSE / NEXT Buttons:** Standard media playback controls.
- **VOLUME Knob:** Adjusts the master volume.
- **TREBLE / BASS Knobs:** Adjusts high and low frequencies.
- **MIC INPUT / GUITAR INPUT:** For connecting microphones and guitars.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

To turn the speaker ON, flip the **POWER** switch to the 'ON' position. To turn it OFF, flip the switch to 'OFF'.

5.2 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "ICON Speaker" (or similar name) from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the Bluetooth icon will stop flashing. You can now play audio wirelessly from your device.

5.3 USB/SD Card Playback

1. Insert a USB flash drive or SD card (with MP3 audio files) into the respective port.
2. The speaker will automatically switch to USB/SD mode and begin playing the first compatible track. If not, press the **MODE** button to select USB/SD mode.
3. Use the **PREVIOUS**, **PLAY/PAUSE**, and **NEXT** buttons to control playback.

5.4 AUX Input

Connect an external audio device (e.g., MP3 player, computer) to the **AUX** input using a 3.5mm audio cable. Press the **MODE** button until AUX mode is selected.

5.5 FM Radio Operation

1. Press the **MODE** button to switch to FM Radio mode.
2. Press and hold the **PLAY/PAUSE** button to automatically scan and save available FM stations.
3. Use the **PREVIOUS** and **NEXT** buttons to navigate between saved stations.

5.6 Microphone and Guitar Usage

Plug your microphone or guitar into the respective **MIC INPUT** or **GUITAR INPUT** jacks. Adjust the volume using the main **VOLUME** knob and any dedicated microphone/guitar volume controls if present.

5.7 TWS (True Wireless Stereo) Function

The TWS function allows you to connect two ICON speakers wirelessly for a true stereo sound experience.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the master), press and hold the TWS button (if available, or a combination of buttons as per specific model instructions, often the 'Mode' button or a dedicated TWS button).
3. The speaker will search for another TWS-compatible speaker. Once connected, you will hear a confirmation sound.
4. Now, connect your mobile device to the master speaker via Bluetooth as described in section 5.2. Audio will play through both speakers in stereo.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure no liquids enter the speaker's openings.

6.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Recharge the battery regularly, even if the speaker is not in use for extended periods (e.g., every 3 months).
- Store the speaker in a cool, dry place when not in use.

6.3 Storage

When storing the speaker for a long time, ensure it is turned off and disconnected from the power source. Store it in a clean, dry environment away from extreme temperatures and direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted; Power cable not connected; Power switch is OFF.	Charge the speaker; Ensure power cable is securely connected; Flip POWER switch to ON.
No sound.	Volume is too low; Incorrect input mode selected; Device not connected properly.	Increase volume; Press MODE button to select correct input; Reconnect device/re-pair Bluetooth.
Bluetooth connection fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in pairing mode; Move device closer; Turn off other Bluetooth devices.
Distorted sound.	Volume too high; Audio source quality is poor.	Reduce volume; Try a different audio source.
Microphone not working.	Microphone not plugged in correctly; Microphone volume too low; Microphone batteries dead (if wireless).	Ensure microphone is fully inserted; Adjust microphone volume; Replace microphone batteries.

8. SPECIFICATIONS

Feature	Specification
Model Number	US-ICBAF12
Output Power	6000 Watts PMPO
Speaker Size	12 inches
Connectivity Technology	Bluetooth, USB, AUX, SD Card
Compatible Devices	Laptop, Smartphone
Power Source	Rechargeable Battery, AC Input

Feature	Specification
Product Dimensions (L x W x H)	38 x 36.5 x 54 cm
Product Weight	7.62 kg
Special Features	Bluetooth, FM Radio, Microphone Input, Guitar Input, TWS Function, LED Lights

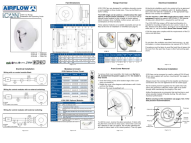







Image: Packaging of the ICON Bluetooth Speaker, displaying key features and product dimensions (37.5 cm x 36 cm x 54 cm).

9. WARRANTY AND SUPPORT

This product is covered by a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer's customer service department. Keep your purchase receipt as proof of purchase. For more information, visit the official ICON store on Amazon:[ICON Store](#)

Related Documents - US-ICBAF12

	<p>Airflow iCON 230V Fan Range: Installation and Operating Guide</p> <p>Comprehensive installation and operating guide for the Airflow iCON 230V fan range, detailing electrical and mechanical installation, optional modules, maintenance, and warranty information.</p>
	<p>ICON 2100 Lumen Rechargeable Floodlight Owner's Manual & Safety Instructions</p> <p>Owner's manual and safety instructions for the ICON 2100 Lumen Rechargeable Floodlight. Includes specifications, important safety information, charging instructions, operation, battery removal, and a 90-day limited warranty.</p>
	<p>ICON 2100 Lumen Rechargeable Floodlight Owner's Manual & Safety Instructions</p> <p>Comprehensive owner's manual and safety guide for the ICON 2100 Lumen Rechargeable Floodlight (Model 59170), covering specifications, operation, charging, safety precautions, and warranty information from Harbor Freight Tools.</p>
	<p>Toyota Price List December 2021: Explore Models, Options & Pricing</p> <p>View the official Toyota price list effective December 2021. Discover pricing for new Toyota cars, including Aygo X, Yaris, Corolla, RAV4, and more, along with available options and customer services.</p>
	<p>PROFORM CROSSWALK LS PFTL40580 User Manual</p> <p>This user manual provides comprehensive instructions for the PROFORM CROSSWALK LS treadmill (Model PFTL40580). It covers assembly, operation, maintenance, troubleshooting, and conditioning guidelines for optimal home fitness.</p>
	<p>NordicTrack ELITE 3200 Treadmill User Manual</p> <p>Comprehensive user manual for the NordicTrack ELITE 3200 treadmill, covering assembly, operation, safety precautions, troubleshooting, and exercise guidelines.</p>