

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [White-Westinghouse House](#) /
- › [White-Westinghouse House Top Load Washing Machine User Manual](#)

White-Westinghouse House WW600MT9

White-Westinghouse House WW600MT9 Top Load Washing Machine User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your White-Westinghouse House WW600MT9 Top Load Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine if the power cord is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable liquids.
- Unplug the machine before cleaning or performing any maintenance.

PRODUCT OVERVIEW

Familiarize yourself with the components of your washing machine.



Image: White-Westinghouse House WW600MT9 Top Load Washing Machine. This image shows the top-loading washing machine in white, with a grey transparent lid covering two compartments. The control panel with three rotary knobs is visible on the top left.

Control Panel

The control panel features push buttons and rotary knobs for selecting wash cycles and settings. The user interface input type is buttons and phone contact.

SETUP

1. **Unpacking:** Carefully remove all packaging materials. Inspect the machine for any damage.

2. **Location:** Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access.
3. **Leveling:** Adjust the leveling feet to ensure the machine is stable and does not wobble.
4. **Water Connection:** Connect the water inlet hoses to the appropriate hot and cold water taps. Ensure connections are secure to prevent leaks.
5. **Drainage:** Position the drain hose securely into a standpipe or laundry tub, ensuring it is not kinked.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for optimal washing performance.

1. **Load Laundry:** Open the top lid and place laundry loosely into the wash tub. Do not overload the machine.
2. **Add Detergent:** Add the appropriate amount of detergent to the dispenser.
3. **Select Wash Cycle:** Use the control knobs to select one of the 6 standard wash cycles. Available cycle options include rotation.
4. **Start Cycle:** Press the start button to begin the wash cycle.
5. **End of Cycle:** The machine will signal when the cycle is complete. Remove laundry promptly.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine.

- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Interior Cleaning:** Periodically run a cleaning cycle with a washing machine cleaner or a mixture of vinegar and baking soda to prevent odor and residue buildup.
- **Lint Filter:** Clean the lint filter regularly to maintain drainage efficiency.
- **Water Inlet Filters:** Check and clean the water inlet filters periodically to prevent blockages.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; No water supply.	Check power connection; Ensure lid is fully closed; Check water taps.
Excessive vibration/noise	Machine not level; Uneven load; Shipping bolts not removed.	Adjust leveling feet; Redistribute laundry; Ensure shipping bolts are removed (if applicable).
Water leakage	Loose hose connections; Drain hose improperly positioned.	Tighten hose connections; Secure drain hose.

SPECIFICATIONS

Detailed technical specifications for the WW600MT9 model.

Brand Name	White-Westinghouse House
Model Information	WW600MT9
Product Dimensions	72.3 x 40.6 x 93.2 cm
Item Weight	8 Kilograms
Part Number	6287000537871
Color	White
Control Type	Push Button
Standard Cycles	6
Access Location	Top Load
Compatible Device	Top Load
Material Type	Mixed
Included Components	1
Batteries Required?	No
Cycle Options	Rotation
User Interface Input	Buttons, Phone Contact
Number of Programs	6

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact White-Westinghouse House customer service. Keep your purchase receipt as proof of purchase.

First available date: January 13, 2020.

