

manuals.plus /

› [Maserati](#) /

› [Maserati R8821108039 Mechanical Self-Winding Watch User Manual](#)

Maserati R8821108039

Maserati R8821108039 Mechanical Self-Winding Watch User Manual

Model: R8821108039

INTRODUCTION

Thank you for choosing the Maserati R8821108039 Mechanical Self-Winding Watch. This timepiece features a sophisticated automatic movement that harnesses the motion of your wrist to power itself, eliminating the need for a battery. This manual provides essential information for the proper setup, operation, maintenance, and care of your watch to ensure its longevity and accurate performance.



Image: The Maserati R8821108039 watch, showcasing its black steel case and intricate dial.

SETUP

1. Unboxing

Carefully remove your watch from its packaging. Inspect the watch for any visible damage. The watch is typically presented in a protective box.



Image: The Maserati watch box, designed to protect and present your timepiece.

2. Initial Winding

As a mechanical self-winding watch, it may not be running when first unboxed. To initiate the movement, manually wind the watch by rotating the crown clockwise approximately 20-30 times while it is in its normal, pushed-in position. This provides an initial power reserve.

3. Setting the Time

1. Gently pull the crown out to its outermost position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its normal, pushed-in position to engage the movement and start the watch.

OPERATING YOUR WATCH

1. Self-Winding Mechanism

Your Maserati R8821108039 watch is equipped with an automatic mechanical movement. This means that the natural motion of your wrist while wearing the watch will continuously wind the mainspring, providing power to the movement. For optimal performance, wear the watch regularly. If the watch is not worn for an extended period (typically 36-40 hours), it may stop and require manual winding to restart.

2. Water Resistance

This watch has a water resistance rating of 100 meters (10 ATM). This makes it suitable for swimming, showering, and snorkeling. However, it is not recommended for diving. Always ensure the crown is fully pushed in before any contact with water. Do not operate the crown while the watch is wet or submerged.

3. Wearing and Adjusting the Strap

The watch features a leather strap with a tang buckle closure. Adjust the strap to a comfortable fit on your wrist. It should be snug enough to prevent excessive movement but not so tight as to restrict circulation. The strap length is 120 + 80 mm, suitable for a 6-7 inch wrist circumference.



Image: Illustration of the watch on a wrist, indicating a suitable wrist circumference of 6-7 inches.

MAINTENANCE

1. Cleaning

To clean your watch, wipe the case and crystal with a soft, dry, lint-free cloth. For the leather strap, avoid excessive moisture and harsh chemicals. If the strap becomes wet, allow it to air dry naturally, away from direct heat or sunlight.

2. Storage

When not wearing your watch, store it in its original box or a watch winder to maintain its power reserve. Keep it away from extreme temperatures, strong magnetic fields, and direct sunlight, which can affect the movement and materials.

3. Water Exposure Precautions

While water resistant, prolonged exposure to hot water (e.g., hot tubs, saunas) or chemical substances (e.g., detergents, perfumes) can compromise the watch's seals and materials. Always rinse the watch with fresh water after exposure to salt water and dry it thoroughly.

4. Professional Servicing

Mechanical watches benefit from periodic professional servicing, typically every 3-5 years. This includes cleaning, lubrication, and adjustment of the movement, as well as checking and replacing seals to maintain water resistance.

TROUBLESHOOTING

- **Watch Not Running:** If the watch has stopped, it likely needs to be wound. Manually wind the watch by rotating the crown clockwise 20-30 times. If it still does not start, ensure the crown is fully pushed in.
- **Time Inaccuracy:** Mechanical watches are not as precise as quartz watches. A deviation of +/- 10-30 seconds per day is generally considered acceptable. If the watch is consistently losing or gaining significant time, it may require professional adjustment or servicing.
- **Condensation Under Crystal:** If you notice condensation under the crystal, this indicates a breach in the watch's water resistance. Immediately take the watch to a qualified watchmaker for inspection and repair to prevent further damage to the movement.

SPECIFICATIONS

Detailed technical specifications for the Maserati R8821108039 watch:



Image: Diagram illustrating the 42mm dial diameter of the watch.

Feature	Detail
Model Name	R8821108039
Brand	Maserati
Movement Type	Mechanical Self-Winding (Automatic)
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	42 mm
Case Thickness	13.3 mm
Band Material	Leather
Band Color	Black
Band Width	2.4 Centimeters
Strap Length	120 + 80 mm
Clasp Type	Tang Buckle
Crystal Material	Mineral
Dial Color	Black
Water Resistance Depth	100 Meters (10 ATM)
Item Weight	100 Grams
Product Dimensions	7.87 x 5.91 x 1.97 inches

WARRANTY INFORMATION

This Maserati R8821108039 watch is covered by a manufacturer's warranty. The specific terms and duration of the warranty are typically provided on a warranty card included with your purchase. Please refer to this document for detailed information regarding coverage, exclusions, and how to make a warranty claim. Retain your proof of purchase for warranty validation.

SUPPORT

For further assistance, technical support, or inquiries regarding your Maserati R8821108039 watch, please contact the authorized Maserati watch dealer or the official Maserati customer service channels. Contact information can usually be found on the manufacturer's website or in the documentation provided with your watch.

