

[manuals.plus](#) /

- › [PowerColor](#) /
- › [PowerColor Radeon RX 5600 XT 6GB Graphics Card User Manual](#)

PowerColor AXRX 5600XT 6GBD6-3DH/OC

PowerColor Radeon RX 5600 XT 6GB Graphics Card User Manual

Model: AXRX 5600XT 6GBD6-3DH/OC

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your PowerColor Radeon RX 5600 XT 6GB graphics card. Please read this guide thoroughly before proceeding with installation to ensure optimal performance and longevity of your product.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- PowerColor Radeon RX 5600 XT 6GB Graphics Card
- Installation Guide



Image: The PowerColor Radeon RX 5600 XT graphics card shown alongside its retail packaging.

3. PRODUCT OVERVIEW

3.1 Key Features

- Graphics Engine: RX 5600 XT
- Video Memory: 6 GB GDDR6
- Stream Processors: 2304 Units
- Engine Clock: 1420 MHz
- Boost Clock: Up to 1620 MHz
- Memory Clock: 14.0 Gbps
- Memory Interface: 192-bit
- Bus Standard: PCIE 4.0
- Display Connectors: HDMI x1, DisplayPort x3
- Power Connector: 8-pin

3.2 Specifications

Specification	Value
Graphics Coprocessor	AMD Radeon RX 5600 XT
Memory Speed	14 GHz
Graphics Card RAM Size	6 GB

Specification	Value
Video Output Interface	DisplayPort, HDMI
Item Model Number	AXRX 5600XT 6GBD6-3DH/OC
Item Weight	2.14 pounds (approx. 0.97 kg)
Product Dimensions (LxWxH)	9.06 x 5.51 x 1.18 inches (approx. 23 x 14 x 3 cm)

4. SETUP AND INSTALLATION

4.1 Pre-installation Checklist

- Ensure your computer's power supply unit (PSU) has sufficient wattage and a free 8-pin PCIe power connector.
- Verify your motherboard has an available PCI Express 4.0 x16 slot (or compatible PCI Express 3.0 x16 slot).
- Back up important data before making hardware changes.
- Turn off your computer and disconnect the power cable from the wall outlet.
- Ground yourself to discharge any static electricity.

4.2 Physical Installation

1. Open your computer case.
2. Locate an empty PCI Express x16 slot on your motherboard.
3. Remove any expansion slot covers that correspond to the graphics card's size.
4. Carefully align the graphics card with the PCIe slot and press it down firmly until it is securely seated. A click may be heard.
5. Secure the graphics card to the computer case with screws.
6. Connect the 8-pin PCIe power connector from your power supply to the corresponding port on the graphics card. Ensure a secure connection.
7. Close your computer case.



Image: A close-up view of the PowerColor Radeon RX 5600 XT graphics card, highlighting its dual-fan cooling system and heat pipes.

4.3 Driver Installation

1. Connect your display cable (HDMI or DisplayPort) from the graphics card to your monitor.
2. Reconnect the power cable to your computer and turn it on.

3. Once your operating system loads, download the latest AMD Radeon drivers from the official AMD website (www.amd.com/en/support).
4. Follow the on-screen instructions to install the drivers. A restart may be required.

5. OPERATING INSTRUCTIONS

5.1 Connecting Displays

The PowerColor Radeon RX 5600 XT 6GB graphics card supports up to four displays simultaneously. Use the available HDMI and DisplayPort connectors to connect your monitors. Ensure your display cables are securely connected to both the graphics card and the monitor.

5.2 Software and Settings

After driver installation, you can access the AMD Radeon Software to configure various settings, including display resolution, refresh rate, gaming profiles, and performance monitoring. Refer to the AMD Radeon Software documentation for detailed instructions on using these features.

6. MAINTENANCE

6.1 Cleaning

Regularly clean your graphics card to prevent dust buildup, which can affect cooling performance. Use compressed air to gently clear dust from the fans and heatsink fins. Ensure the computer is powered off and unplugged before cleaning.

6.2 Driver Updates

Periodically check the official AMD website for updated graphics drivers. Keeping your drivers current ensures optimal performance, stability, and access to the latest features and bug fixes.

7. TROUBLESHOOTING

7.1 Common Issues

- No Display Output:** Ensure the graphics card is fully seated in the PCIe slot and the 8-pin power connector is securely attached. Verify that your monitor is connected to the graphics card, not the motherboard's integrated graphics port.
- Driver Installation Issues:** If you encounter problems installing drivers, try using AMD's Clean Uninstall Utility to remove any previous graphics drivers before attempting a fresh installation.
- Performance Problems:** Ensure your drivers are up to date. Check system temperatures to rule out overheating. Verify that your power supply meets the minimum requirements for the graphics card.
- System Instability/Crashes:** This can be caused by outdated drivers, insufficient power, or overheating. Ensure proper ventilation within your PC case.

For further troubleshooting or technical assistance, please refer to the support section of the PowerColor or AMD official websites.

8. WARRANTY AND SUPPORT

For detailed information regarding warranty coverage, terms, and conditions for your PowerColor Radeon RX 5600 XT 6GB graphics card, please visit the official PowerColor website. You can find support resources, FAQs, and contact information for technical assistance there.

PowerColor Official Website: www.powercolor.com

