



Manuals.plus /

› Better Homes & Gardens /

› Better Homes & Gardens Farmhouse Grey Wood and Metal Garment Rack Instruction Manual

Better Homes & Gardens B083V69WM1

Better Homes & Gardens Farmhouse Grey Wood and Metal Garment Rack Instruction Manual

INTRODUCTION

Thank you for choosing the Better Homes & Gardens Farmhouse Grey Wood and Metal Garment Rack. This manual provides essential information for the safe and effective use of your new garment rack. Please read these instructions carefully before using the product and retain them for future reference.

SAFETY INFORMATION

- Ensure the garment rack is placed on a flat, stable, and level surface to prevent tipping.
- Do not overload the rack. Distribute weight evenly to maintain stability.
- Keep children and pets away from the rack during initial placement to avoid accidents.
- Avoid climbing on or hanging from the rack, as this may cause damage or injury.
- Regularly inspect the rack for any loose parts or damage. Do not use if damaged.

PRODUCT OVERVIEW

The Better Homes & Gardens Farmhouse Garment Rack features a sturdy metal frame combined with wood accents, offering both functionality and a rustic aesthetic. It includes a hanging rod for garments and multiple shelves for additional storage.



Image: The Better Homes & Gardens Farmhouse Grey Wood and Metal Garment Rack, showcasing its metal frame, wooden shelves, and hanging rod. This image illustrates the overall design and storage capabilities of the unit.

PLACEMENT AND SETUP

This garment rack is designed for easy setup and does not require complex assembly. Follow these steps for initial placement:

1. **Unpack:** Carefully remove all packaging materials and inspect the rack for any signs of damage during transit.
2. **Choose Location:** Select a suitable location for your garment rack. Ensure the surface is flat, stable, and can support the weight of the rack and its contents. Avoid placing it in high-traffic areas where it might be easily bumped.
3. **Position:** Place the garment rack in your desired location. Verify its stability by gently rocking it. If it wobbles, adjust its position or ensure all feet are firmly on the ground.

OPERATING INSTRUCTIONS / USAGE

The garment rack is designed for organizing clothing and accessories. To use your rack effectively:

- **Hanging Garments:** Use the top rod to hang clothes such as shirts, dresses, jackets, and pants on hangers. Distribute the weight evenly along the rod.
- **Shelf Storage:** Utilize the wooden shelves for folded clothing, shoes, bags, hats, or other accessories. Place heavier items on lower shelves for better stability.

- **Weight Distribution:** Always distribute items evenly across the hanging rod and shelves to prevent the rack from becoming unbalanced or tipping.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your garment rack:

- **Cleaning:** Wipe the metal and wood surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Dusting:** Regularly dust the rack to prevent buildup.
- **Inspection:** Periodically check all connections and structural components to ensure they remain secure.
- **Avoid Moisture:** Keep the rack in a dry environment. Prolonged exposure to moisture can damage the wood and metal.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack wobbles or is unstable	Uneven surface; uneven weight distribution	Move the rack to a flat, level surface. Redistribute items evenly across the rod and shelves.
Damage to wood or metal finish	Impact; harsh cleaning agents; moisture exposure	Avoid impacts. Use only soft, damp cloths for cleaning. Keep in a dry environment.

SPECIFICATIONS

- **Brand:** Better Homes & Gardens
- **Model:** B083V69WM1
- **Material:** Metal, Wood
- **Color:** Grey
- **Installation Type:** Free Standing
- **Number of Shelves:** 3
- **Assembly Required:** No
- **Recommended Uses:** Bags, Clothes, Coats, Dresses, Handbag, Hats, Jackets, Pants, Purse, Shirts, Tie

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Better Homes & Gardens customer service directly. Keep your purchase receipt for warranty claims.

