

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Little People Caring for Animals Farm Playset GLT78 Instruction Manual

Fisher-Price GLT78

Fisher-Price Little People Caring for Animals Farm Playset GLT78 Instruction Manual

Brand: Fisher-Price | **Model:** GLT78

INTRODUCTION

This manual provides comprehensive instructions for the Fisher-Price Little People Caring for Animals Farm Playset, Model GLT78. Designed for toddlers and preschoolers aged 1-5 years, this interactive playset encourages imaginative play and early learning through songs, sounds, and phrases. Please read these instructions carefully before use to ensure safe and optimal enjoyment of the product.

PRODUCT OVERVIEW

The Fisher-Price Little People Caring for Animals Farm Playset is an engaging toy designed to introduce young children to farm life and animal care. It features interactive elements and learning content tailored for developmental stages.



Image: A young child interacting with the Fisher-Price Little People Caring for Animals Farm Playset, showing the main barn structure, silo, and various animal figures.

Key Features:

- Designed for toddlers and preschoolers aged 1-5 years.
- Includes 1 farmer figure, 4 animal figures (cow, pig, horse, chicken), and 2 food play pieces (hay, corn).
- Features 3 Smart Stages learning levels with songs, sounds, and phrases that teach counting, colors, and animal sounds.
- Multiple interactive play points, including opening barn doors, a bell, and a silo.



Comes with 5 figures and 2 food accessories

Image: The complete Fisher-Price Little People Caring for Animals Farm Playset, showcasing the barn, silo, and all included figures: a farmer, cow, pig, horse, chicken, and two food accessories.

SETUP

Unboxing:

1. Carefully remove all components from the packaging.
2. Discard all packaging materials responsibly.
3. Ensure all included figures and accessories are present: 1 farmer figure, 4 animal figures, and 2 food play pieces.

Battery Installation:

The playset requires 3 AAA batteries, which are included. If replacement is needed:

1. Locate the battery compartment, usually on the underside or back of the main barn unit.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.

4. Insert 3 new AAA batteries, ensuring correct polarity (+/-).

5. Replace the cover and tighten the screw securely.

Note: No assembly is required for the main playset unit.

OPERATING INSTRUCTIONS

The Little People Caring for Animals Farm is designed for intuitive play. Here's how to interact with its features:

Interactive Play Points:

- **Press Buttons:** Locate the red buttons on the playset floor. Pressing these buttons activates music, sounds, lights, and actions, such as opening stall doors or triggering phrases.
- **Smart Stages Switch:** On the side of the barn, you will find a switch labeled "Smart Stages" with numbers 1, 2, and 3. This switch allows you to select the learning level, adapting the content (songs, sounds, phrases) to your child's developmental stage.
- **Silo:** Turn the silo to engage with additional sounds and actions.
- **Barn Doors:** Open the main barn doors for drop-through fun, allowing figures to be placed inside and retrieved.
- **Bell:** Ring the bell located at the top of the barn for additional sound effects.



**Press the buttons for music,
sounds, light and actions**

Image: A child's hand pressing one of the interactive red buttons on the playset floor, which activates music, sounds, and lights.



45+ songs, sounds & phrases teach counting, opposites & more

Image: A detailed view of the Smart Stages switch, showing the three learning levels (1, 2, 3) and musical notes, indicating adjustable educational content.

MAINTENANCE

Cleaning:

To clean the playset, wipe surfaces with a damp cloth using mild soap and water. Do not immerse the electronic components in water. Allow to air dry completely before storage or next use.

Battery Care:

- Always use fresh batteries of the recommended type.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the toy will not be used for an extended period.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

No Sound or Intermittent Functionality:

- **Check Batteries:** Ensure batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary.
- **Battery Compartment:** Verify the battery compartment cover is securely closed.
- **Power Cycle:** Turn the playset off and then on again.

Figures Not Activating Sounds:

- Ensure figures are placed correctly on the designated interactive spots.
- Check for any debris or obstructions on the interactive spots or the bottom of the figures.

SPECIFICATIONS

Feature	Detail
Model Number	GLT78
Product Dimensions	59.51 x 13.51 x 18.49 cm
Product Weight	453.59 grams
Recommended Age	1-5 years
Material Type	Plastic
Batteries Required	3 AAA (included)
Language	English

SAFETY INFORMATION

- Always supervise children during play.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if damage is found.
- Keep batteries out of reach of small children. If swallowed, seek immediate medical attention.
- This toy is not intended for use in water.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Fisher-Price website. You can also visit the [Fisher-Price Store on Amazon](#) for more product details and contact options.