

[Manuals.plus](#) /

› [Supershieldz](#) /

› Supershieldz Screen Protector User Manual for RCA 10 Endeavor (10 inch)

Supershieldz B083W2T4BH

Supershieldz Screen Protector User Manual for RCA 10 Endeavor (10 inch)

Model: B083W2T4BH

INTRODUCTION

This manual provides comprehensive instructions for the proper installation, use, and maintenance of your Supershieldz High Definition Clear Screen Protector designed for the RCA 10 Endeavor (10 inch) tablet. Please read these instructions carefully before proceeding with installation to ensure optimal performance and longevity of your screen protector.

PACKAGE CONTENTS

- 3 x Supershieldz Screen Protectors (PET Film)
- 1 x Microfiber Cleaning Cloth
- 1 x Dust Removal Sticker
- 1 x Squeegee Card (for bubble removal)



Image: Supershieldz screen protector packaging alongside an RCA 10 Endeavor tablet, illustrating the product and its intended device.

SETUP: INSTALLATION GUIDE

Follow these steps carefully for a bubble-free installation.

1. **Prepare Your Workspace:** Choose a clean, dust-free environment. Wash your hands thoroughly to avoid transferring oils or dirt to the screen or protector.
2. **Clean the Device Screen:**
 - Use the provided microfiber cloth to gently wipe the tablet screen, removing any smudges or fingerprints.
 - Utilize the dust removal sticker to lift any remaining dust particles from the screen. Ensure the screen is completely free of dust before proceeding.
3. **Align the Screen Protector:**

- Carefully peel back a small portion of the protective layer labeled "Step 1" or similar, exposing the adhesive side.
- Align the screen protector with the edges of your tablet screen, paying close attention to cutouts for the camera or sensors. Do not fully remove the backing yet.

4. Apply the Protector:

- Once aligned, slowly and steadily peel off the rest of the "Step 1" protective layer while simultaneously applying the screen protector to the tablet screen.
- Use the squeegee card to gently push out any air bubbles towards the edges as you apply. Start from the center and move outwards.

5. **Remove Top Layer:** After the protector is fully applied and bubbles are removed, carefully peel off the top protective layer, usually labeled "Step 2" or similar.

6. **Final Touches:** Use the microfiber cloth to gently wipe the newly installed screen protector. Small bubbles may disappear over 24-48 hours.



Image: Icons representing "Bubble-Free" installation and "Real Touch" sensitivity, highlighting key features of the screen protector.

OPERATING: TOUCH SENSITIVITY

The Supershieldz screen protector is designed to maintain the original touch sensitivity of your RCA 10 Endeavor tablet. You should experience flawless touch screen accuracy and a natural feel, as if no protector is present.

MAINTENANCE AND CARE

To ensure the longevity and clarity of your screen protector:

- **Cleaning:** Use a soft, lint-free cloth (like the provided microfiber cloth) to gently wipe the screen protector. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics. Avoid harsh chemicals or abrasive materials.
- **Protection:** While the protector offers scratch resistance, avoid placing your tablet with sharp objects (keys, coins) in the same bag or pocket to prevent excessive damage.
- **Replacement:** If the screen protector becomes heavily scratched or damaged, replace it with one of the additional protectors provided in the pack to maintain optimal screen clarity and protection.

TROUBLESHOOTING

Common Issues and Solutions:

Issue	Solution
Bubbles after installation	Small bubbles often disappear within 24-48 hours. For larger bubbles, gently lift the nearest edge of the protector and re-apply, using the squeegee card to push the air out. Ensure no dust is trapped underneath.

Issue	Solution
Dust trapped under protector	Carefully lift the corner of the protector closest to the dust particle. Use a dust removal sticker or a piece of tape to gently dab and lift the dust from the adhesive side of the protector or the tablet screen. Re-apply slowly.
Protector not adhering properly	Ensure the screen was thoroughly cleaned and free of oils or residues before application. If the issue persists, the protector may be damaged or a new one from the pack may be needed.

SPECIFICATIONS

Key technical details of the Supershieldz Screen Protector:

- **Material:** High Quality Japanese PET Film (Polyethylene Terephthalate)
- **Compatibility:** Specifically designed for RCA 10 Endeavor (10 inch) tablet
- **Features:** High Definition Transparency, Real Touch Sensitivity, Scratch Resistant, Bubble-Free Application (when installed correctly), No Residue upon removal
- **Item Hardness:** 3H
- **Unit Count:** 3 pieces per pack
- **Water Resistance Level:** Water Resistant


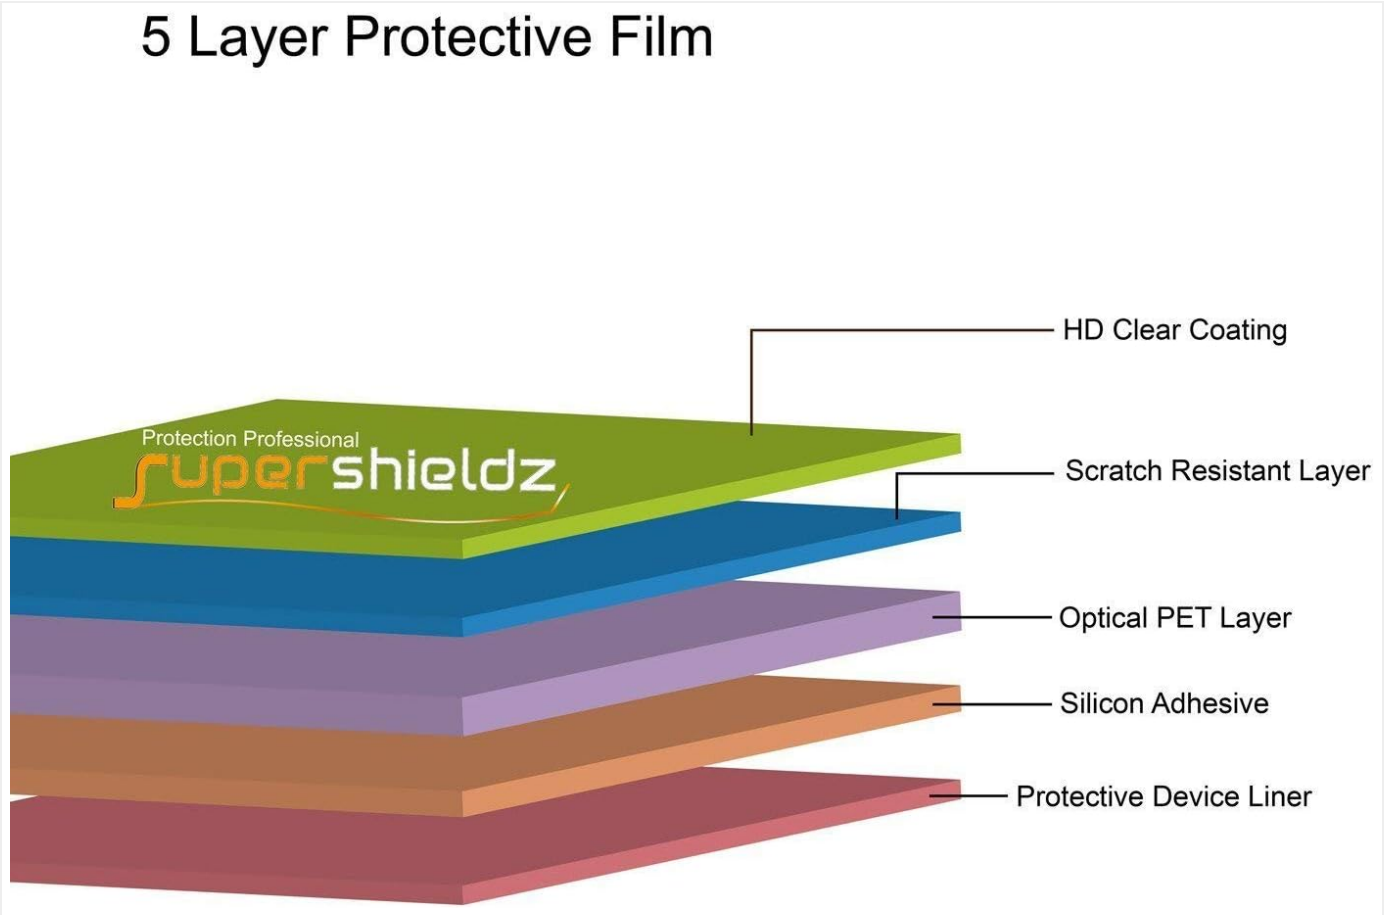


Image: Diagram illustrating the 5-layer structure of the protective film, including HD Clear Coating, Scratch Resistant Layer, Optical PET Layer, Silicon Adhesive, and Protective Device Liner.

Premium High Definition Film

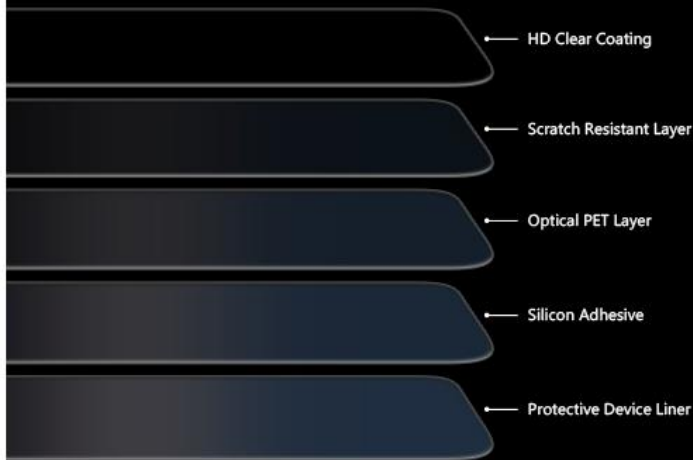

Each layer is designed to help maintain original sensitivity and clarity of the screen while offering scratch protection for your device.

Image: Detailed diagram explaining the layers of the Premium High Definition Film, emphasizing how each layer contributes to maintaining original sensitivity, clarity, and scratch protection.

WARRANTY AND SUPPORT

For specific warranty information or customer support regarding your Supershieldz screen protector, please refer to the official Supershieldz website or contact their customer service directly. Contact details are typically found on the product packaging or the brand's official online presence.

You can visit the Supershieldz store for more information: [Supershieldz Store](#)

© 2025 Supershieldz. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B083W2T4BH>

More documents and user manuals: <https://manuals.plus/>