

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit Replacement Remote Control for Westinghouse TV Models WD32HKB1001, WD24HB6101 User Manual](#)

## ZdalaMit WD32HKB1001, WD24HB6101

### ZdalaMit Replacement Remote Control for Westinghouse TV Models WD32HKB1001, WD24HB6101

Instruction Manual

#### 1. INTRODUCTION

This manual provides instructions for the ZdalaMit replacement remote control, designed for use with specific Westinghouse TV models. This remote control offers direct functionality without the need for complex programming or pairing procedures.

##### Compatible Westinghouse TV Models:

- WD32HKB1001
- WD24HB6101

#### 2. SETUP

The remote control requires two AAA alkaline batteries (not included). No programming or pairing is necessary for operation.

##### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Front view of the remote control showing button layout.

Once batteries are installed, the remote control is ready for immediate use with compatible Westinghouse TV models.

### 3. OPERATING INSTRUCTIONS

---

Point the remote control directly at your Westinghouse TV. Ensure there are no obstructions between the remote and the TV's infrared receiver.

#### 3.1 Key Functions

- **Power (Red Button):** Turns the TV on or off.
- **P.MODE / S.MODE:** Picture Mode / Sound Mode selection.
- **SLEEP:** Sets the TV sleep timer.
- **ASPECT:** Adjusts the screen aspect ratio.
- **Number Buttons (0-9, -/-/10+):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **MENU:** Accesses the TV's main menu.
- **INFO:** Displays current channel information.
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **OK:** Confirms selections in menus.
- **RETURN:** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu.
- **CH.LIST / DVD.SETUP:** Displays channel list or accesses DVD setup (if applicable).
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Control media playback (if applicable).
- **SUBTITLE / C.C / V-CHIP:** Accesses subtitle options, closed captions, or V-Chip settings.
- **REPEAT / AUTO / GOTO / SLOW / TITLE / ADD/ERASE / DVD.MENU / FAV / A-B** Additional functions for media playback or specific TV features.



Figure 3.1: Angled view of the remote control, highlighting its ergonomic design.

## 4. MAINTENANCE

### 4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones.

## 4.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

## 4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## 5. TROUBLESHOOTING

---

### 5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted with the correct polarity (+/-). Replace old batteries with new 1.5V AAA alkaline batteries.
- **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the TV's infrared sensor.
- **Distance:** Ensure you are within an effective range of the TV.
- **TV Compatibility:** Verify that your Westinghouse TV model is listed as compatible (WD32HKB1001 or WD24HB6101).

### 5.2 Intermittent Operation

- This often indicates low battery power. Replace the batteries.
- Ensure the remote's infrared emitter is clean and free from dust or debris.

## 6. SPECIFICATIONS

---

- **Brand:** ZdalaMit
- **Manufacturer:** ZdalaMit Factory
- **Compatible Devices:** Television (Westinghouse TV models WD32HKB1001, WD24HB6101)
- **Max Number of Supported Devices:** 1
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Product Dimensions:** 6.5 x 1.4 x 0.5 inches (approximately)
- **Item Weight:** 1.41 ounces (approximately)
- **Color:** Black
- **Special Feature:** Ergonomic design

## 7. WARRANTY INFORMATION

---

Specific warranty details for this product are not provided in the available information. Please refer to the seller or your purchase documentation for any applicable warranty terms and conditions.

## 8. SUPPORT

---

If you encounter any issues or have questions regarding the ZdalaMit replacement remote control that are not addressed in this manual, please contact the seller directly for assistance.

