

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [MAGNIFYING AIDS](#) /
- › [User Manual for Large Button Phone with Bright Flashing Ringer Light](#)

MAGNIFYING AIDS P-581

User Manual

Large Button Phone with Bright Flashing Ringer Light

Model: P-581

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your MAGNIFYING AIDS Large Button Desktop Telephone, Model P-581. This phone is designed with large 1" x 1" buttons for easy dialing, voice amplification, and a speakerphone function, making it suitable for users who may have difficulty with standard phone buttons. It features adjustable ringer and speaker volume, and can be desk or wall mounted. The phone is also designed to function during power outages for emergency use.

PACKAGE CONTENTS

- Large Button Desktop Telephone (Model P-581)
- Handset
- Coiled Handset Cord
- Line Cord
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: MAGNIFYING AIDS Large Button Desktop Telephone (Model P-581)

This image displays the white corded telephone. The handset is on the left, connected by a coiled cord to the main base unit. The base unit features oversized, high-contrast black numbers on white buttons, making them easy to read. Key function buttons such as "AUTO", "STORE", "HOLD", "FLASH", "REDIAL", and "SP-PHONE" are also visible.

Key Features:

- Large 1" x 1" button numbers for easy dialing.
- Voice amplification for clearer conversations.
- Hands-free speakerphone with adjustable volume control.
- Bright LED ringer light for visual call notification.
- Adjustable ringer volume (HI/LO).
- Functions during power outages for emergency use.
- Desk and wall mountable design.
- 10 two-touch memory dial locations.
- Flash, Redial, and Hold functions.

SETUP

1. Connecting the Handset:

Connect one end of the coiled handset cord into the jack on the side of the telephone base and the other end into the jack on the handset.

2. Connecting to the Telephone Line:

Plug one end of the provided line cord into the "LINE" jack on the back of the telephone base. Plug the other end into a standard telephone wall jack (RJ11).

3. Desk or Wall Mounting:

- **Desk Mount:** Place the phone on a flat, stable surface.
- **Wall Mount:** The phone is designed with keyhole slots on the back for wall mounting. Secure two screws (not included) into the wall, spaced appropriately for the keyhole slots, and hang the phone. Ensure the handset cradle is reversed to securely hold the handset when wall-mounted.

OPERATING INSTRUCTIONS

Making a Call:

1. Lift the handset or press the **SP-PHONE** button to activate the speakerphone.
2. Listen for a dial tone.
3. Dial the desired telephone number using the large numeric buttons.
4. If using the speakerphone, press **SP-PHONE** again to end the call. If using the handset, replace the handset in the cradle.

Answering a Call:

When the phone rings and the LED ringer light flashes:

- Lift the handset to answer the call.
- Alternatively, press the **SP-PHONE** button to answer the call using the speakerphone.

Adjusting Volume:

- **Speaker Volume:** Use the **HI/LO** switch located on the side or back of the phone to adjust the speakerphone volume.
- **Ringer Volume:** Use the **HI/LO** switch for the ringer, also located on the side or back of the phone, to adjust the ringing volume. There is also an **On/Off** ringer switch.

Using Special Functions:

- **Redial:** Press the **REDIAL** button to automatically dial the last number called.
- **Flash:** Press the **FLASH** button to access call waiting or transfer calls (requires service from your telephone provider).
- **Hold:** Press the **HOLD** button to put a call on hold. Press it again or lift the handset to resume the call.
- **Memory Dialing (10 Two-Touch Memory):**
 - a. **To Store a Number:**
 - Lift the handset or press **SP-PHONE**.
 - Press **STORE**.
 - Dial the phone number you wish to store.
 - Press **STORE** again.
 - Press the memory location button (0-9) where you want to save the number.
 - b. **To Dial a Stored Number:**
 - Lift the handset or press **SP-PHONE**.
 - Press **AUTO**.
 - Press the memory location button (0-9) where the number is stored. The phone will automatically dial the number.

MAINTENANCE

- **Cleaning:** Wipe the phone's surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cord Care:** Avoid kinking or stretching the telephone cords excessively to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is not properly connected.	Ensure the line cord is securely plugged into both the phone and the wall jack. Test the wall jack with another phone if available.
Cannot hear caller or caller cannot hear me.	Volume settings are too low or connection issue.	Adjust the speaker volume switch. Check handset cord connection. Ensure the phone is properly connected to the telephone line.
Phone does not ring.	Ringer switch is set to OFF or LO.	Set the ringer switch to HI or ON.
LED ringer light does not flash.	Ringer switch is set to OFF or LO.	Ensure the ringer switch is set to HI or ON.

SPECIFICATIONS

Feature	Detail
Model	P-581
Color	White
Dimensions (W x L x H)	6.5" x 9" x 2.5" (approximately)
Weight	3.1 lbs (Shipping Weight)
Power Source	Corded Electric (operates during power outages)
Telephone Type	Corded
Memory Dialing	10 Two-Touch Memory Locations
Ringer	Bright LED Ringer Light, HI/LO/OFF Switch
Speakerphone	Hands-free with Volume Control
Mounting Options	Desk or Wall Mountable

WARRANTY AND SUPPORT

For warranty information or technical support, please contact MAGNIFYING AIDS directly. Refer to the product packaging or the seller's information for specific contact details. Keep your purchase receipt as proof of purchase for warranty claims. This product is designed for reliable operation. Should you encounter any issues not covered in the troubleshooting section, please reach out to customer support for assistance.

