

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [mooas](#) /

› [mooas Multi Cube Timer MT-C2 Instruction Manual](#)

## mooas MT-C2

# mooas Multi Cube Timer (Model MT-C2) Instruction Manual

Your guide to effective time management and productivity.

## 1. INTRODUCTION

The mooas Multi Cube Timer is a versatile device designed to assist with time management, functioning as both a digital clock and a preset timer. Its intuitive rotating design allows for quick selection of common time intervals, making it ideal for various activities such as cooking, studying, exercising, or managing short breaks.

## 2. SAFETY INFORMATION

- Keep the device away from water and high humidity to prevent damage.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if issues arise.
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

## 3. PACKAGE CONTENTS

- mooas Multi Cube Timer (Violet, Model MT-C2)
- Instruction Manual

*Note: 2 AAA batteries are required and not included in the package.*

#### 4. PRODUCT OVERVIEW

The mooas Multi Cube Timer features a compact, cube-shaped design with an LCD display on one side and preset time intervals (5, 10, 20, 30 minutes) on its other four sides. The back panel contains control buttons for mode selection and time setting.



Image: The mooas Multi Cube Timer in Violet, showcasing its sleek design.



Image: Diagram illustrating the dimensions of the cube timer: 2.36"D x 2.36"W x 2.17"H.

If you turn the cube timer sideways on the time mode, you can easily check the time by turning on the backlight.

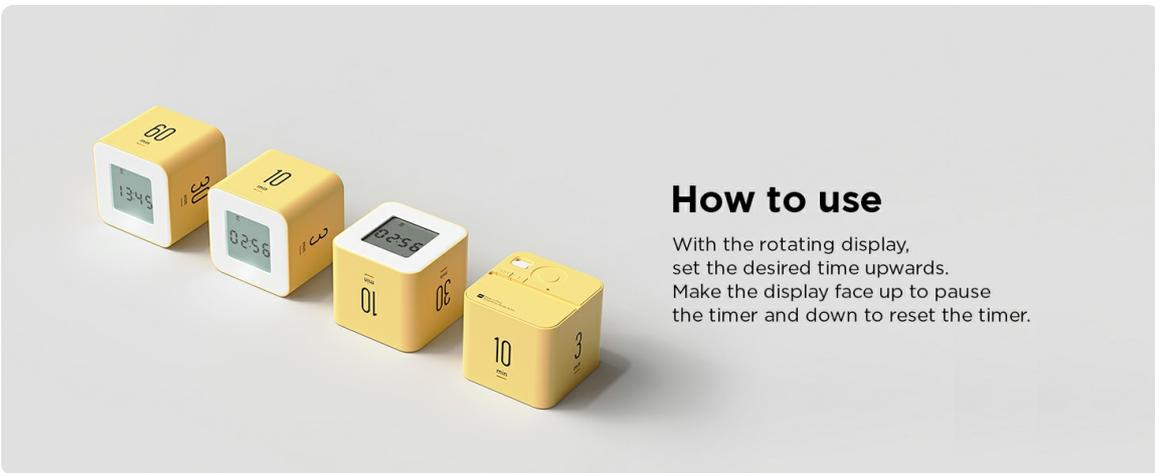


Image: The back panel of the timer, showing the Timer/Clock mode switch, SET button, and arrow button for adjustments.

## 5. SETUP

### 5.1 Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



## How to use

With the rotating display, set the desired time upwards. Make the display face up to pause the timer and down to reset the timer.

Image: The back of the timer showing the battery compartment and control buttons for setting the clock and switching modes.

## 6. OPERATING INSTRUCTIONS

### 6.1 Switching Between Clock and Timer Mode

On the back of the timer, locate the switch labeled "TIMER" and "CLOCK".

- To use as a timer, slide the switch to "TIMER".
- To use as a clock, slide the switch to "CLOCK".

### 6.2 Setting the Clock

Ensure the timer is in "CLOCK" mode.

1. Press and hold the "SET" button until the hour display starts blinking.
2. Use the "UP" arrow button to adjust the hour.
3. Press "SET" again to move to minute setting. Use the "UP" arrow button to adjust the minutes.
4. Press "SET" a third time to switch between 12/24 hour format. Use the "UP" arrow button to select.
5. Press "SET" one last time to confirm and exit setting mode.

### 6.3 Using the Timer

Ensure the timer is in "TIMER" mode.

1. **To Start a Timer:** Simply flip the cube so that the desired preset time (5, 10, 20, or 30 minutes) faces upwards. The timer will start automatically with a beep, and the countdown will be displayed.
2. **To Pause the Timer:** Turn the timer so that the LCD display faces upwards. The countdown will pause.
3. **To Resume the Timer:** Turn the timer so that the side with the time number faces upwards again. The countdown will resume from where it left off.
4. **To Reset the Timer:** To reset the current countdown and start fresh with the selected time, turn the timer so the LCD screen faces downwards. Then, flip it back to the desired time face up.



## Different color Different time

- Mint : 1/3/5/10 minutes
- Yellow : 3/10/30/60 minutes
- White : 5/15/30/60 minutes
- Violet : 5/10/20/30 minutes
- Neon coral : 10/30/50/60 minutes

Image: The moos Multi Cube Timer showing its various preset time options (5, 10, 20, 30 minutes) on different faces.



## Timer with clock

As the consumer needs, the timer is combined with the clock.  
Pick the desired feature for each purpose.

Image: The timer displaying the current time in clock mode, indicating its dual functionality.



## How to use

With the rotating display, set the desired time upwards.  
Make the display face up to pause the timer and down to reset the timer.

Image: A hand flipping the cube timer to activate a preset countdown, illustrating the simple operation.

### 6.4 LED Indicator

An LED indicator on each side of the cube blinks every second to visually show how much time has passed, even without looking directly at the display.

### 6.5 Timer Alarm & Backlight

When the timer reaches zero:

- The backlight turns on for 10 seconds.

- An alarm will sound for 1 minute.

Video: Official product video demonstrating the mooas Multi Cube Timer's features, including its rotating functionality, clock mode, and timer settings. The video shows how to activate and pause the timer by simply flipping the cube.

## 7. FEATURES

- **Pre-set Time:** 5, 10, 20, 30 minutes.
- **Clock & Timer:** Multi-functional device for convenience and effective time management.
- **LED Indicator:** Blinks each second to show elapsed time without needing to see the display.
- **Easy to Use:** Simple flip-and-turn operation to start, pause, and resume timers.
- **Timer Alarm & Backlight:** Clear audio alarm and illuminated display when time is up.
- **Simple Design:** Compact cube design, suitable for various environments.

## 8. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store in a cool, dry place when not in use.
- Avoid exposing the device to extreme temperatures.

## 9. TROUBLESHOOTING

- **Device not turning on:** Check if batteries are inserted correctly and are not depleted. Replace with new AAA batteries if necessary.
- **Timer not starting:** Ensure the mode switch on the back is set to "TIMER" and the desired time face is clearly facing upwards.
- **Display issues:** Low battery power can affect display clarity. Replace batteries.
- **Alarm not sounding:** Check if the device is in a quiet environment or if the sound is too low. Ensure no obstructions are covering the speaker.

## 10. SPECIFICATIONS

Model Number	MT-C2
--------------	-------

<b>Color</b>	Violet
<b>Material</b>	Plastic
<b>Product Dimensions</b>	2.36"D x 2.36"W x 2.17"H
<b>Item Weight</b>	2.43 ounces (69 Grams)
<b>Pre-set Time Settings</b>	5, 10, 20, 30 minutes
<b>Power Source</b>	2 AAA Batteries (Not included)

## 11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact mooas customer service directly. Keep your purchase receipt as proof of purchase.