

[Manuals.plus](#) /

› [Seneca River Trading](#) /

› Seneca River Trading 6 Qt Lid Assembly for Crock-Pot Lift & Serve Slow Cooker (Model 187530000000) Instruction Manual

Seneca River Trading 187530000000

Seneca River Trading 6 Qt Lid Assembly for Crock-Pot Lift & Serve Slow Cooker (Model 187530000000) Instruction Manual

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Seneca River Trading 6-quart lid assembly, model 187530000000. This lid is specifically designed for Crock-Pot Lift & Serve Slow Cookers. Please read this manual thoroughly before use to ensure correct installation and to maximize the lifespan of your product.

SETUP AND INSTALLATION

The 6-quart lid assembly is designed for easy replacement on compatible Crock-Pot Lift & Serve Slow Cooker models, such as SCCPVC600LH-S. Ensure your slow cooker is unplugged and cool before attempting installation.



Figure 1: Top view of the 6-quart lid assembly. This image displays the clear glass lid with its integrated black handles, designed for the Lift & Serve functionality. A caution label is visible on the glass.

1. **Unpack:** Carefully remove the new lid assembly from its packaging. Inspect for any damage.
2. **Remove Old Lid (if applicable):** If replacing an existing lid, ensure it is completely removed from the slow cooker.
3. **Positioning:** Align the new lid assembly over the slow cooker's ceramic insert. The handles are designed to rest on the rim of the slow cooker.
4. **Secure:** Gently lower the lid into place. The "Lift & Serve" handles should securely engage with the slow cooker's body, allowing for easy lifting and resting.



Figure 2: Bottom view of the 6-quart lid assembly. This image shows the underside of the glass lid, revealing the secure attachment points and screws for the black handles. This view is helpful for understanding how the handles are integrated.

The lid is designed to fit snugly to retain heat and moisture during cooking. Do not force the lid if it does not sit correctly; re-align it carefully.

OPERATING INSTRUCTIONS

This lid assembly functions as a direct replacement for the original Crock-Pot Lift & Serve Slow Cooker lid. Its primary purpose is to cover the slow cooker during operation and facilitate easy serving.

- **Covering:** Place the lid securely on the slow cooker before turning on the appliance.
- **Monitoring:** The clear glass allows for monitoring of food without lifting the lid, which helps maintain cooking temperature.
- **Lift & Serve Function:** The integrated handles are designed to allow you to lift the lid and rest it securely on the side of the slow cooker, preventing condensation from dripping onto your countertop. Always use caution when lifting the lid, as steam will be hot.
- **Caution:** Do not use the lid to lift or carry the entire slow cooker. The lid is designed for covering and serving only.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your lid assembly.

- **Before Cleaning:** Always allow the lid to cool completely before cleaning.
- **Hand Washing:** Wash the lid assembly by hand using warm, soapy water. Use a soft sponge or cloth to avoid scratching the glass or plastic components.
- **Dishwasher Safe:** The lid assembly is generally dishwasher safe (top rack recommended). However, hand washing is often preferred to preserve the finish and integrity of the plastic handles over time.
- **Drying:** Dry thoroughly with a soft cloth to prevent water spots.
- **Storage:** Store the lid in a safe place where it will not be chipped or broken.

TROUBLESHOOTING

If you encounter issues with your lid assembly, consider the following:

- **Lid Does Not Fit:**
 - Ensure you have the correct 6-quart size lid for your slow cooker model (e.g., SCCPVC600LH-S).
 - Check for any debris on the rim of the slow cooker or the lid that might prevent a proper seal.
 - Verify the lid is oriented correctly.
- **Condensation Drips:**
 - The Lift & Serve design is intended to minimize drips when resting the lid. Ensure the lid is properly seated on its handles when resting.
 - Excessive condensation is normal during slow cooking; the design helps manage it.
- **Handles Feel Loose:**
 - Inspect the screws on the underside of the handles (refer to Figure 2). If they appear loose, gently tighten them with a screwdriver. Do not overtighten.

SPECIFICATIONS

Feature	Detail
Brand	Seneca River Trading
Model Number	187530000000
Compatible Slow Cooker Models	SCCPVC600LH-S (and similar 6-quart Crock-Pot Lift & Serve models)
Capacity	6 Quarts (540 Cubic Inches)
Material	Glass, Plastic (Handles)
Color	Black (Handles)
Product Dimensions	Approximately 38.1 x 30.48 x 7.62 cm (15 x 12 x 3 inches)
Item Weight	Approximately 1.19 kg (2.62 lbs)

WARRANTY AND SUPPORT

Specific warranty details for this replacement lid assembly are not provided within this manual. For warranty information or product support, please refer to the documentation that came with your original slow cooker or contact Seneca River Trading directly through their official website or customer service channels.

© 2023 Seneca River Trading. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question