

## VISION 861ZTS-GRN-MEX

# VISION Talking Analog and Digital Watch User Manual

Model: 861ZTS-GRN-MEX

## INTRODUCTION

Thank you for choosing the VISION Talking Analog and Digital Watch. This watch is designed to provide clear time announcements in Spanish, making it ideal for individuals with visual impairments, children, and the elderly. It features both an analog display for traditional time-telling and a digital display for precise readings, along with an alarm function.



Figure 1: Front view of the VISION Talking Analog and Digital Watch.

## SETUP

### 1. Unpacking and Initial Inspection

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. The watch comes with a battery pre-installed and is ready for initial setup.



Figure 2: The watch as it appears in its original clear plastic case.

## 2. Initial Time Setting (Digital)

The digital time needs to be set first. Refer to the 'Operating Instructions' section for detailed steps on setting the digital time using the 'MODE', 'HOUR', and 'MINUTE' buttons.

## 3. Initial Time Setting (Analog)

The analog hands are set independently using the crown (small knob) on the side of the watch. Pull out the crown and rotate it to adjust the analog hands to match the digital time. Push the crown back in to secure the setting.

## OPERATING INSTRUCTIONS

### Button Functions

- **MODE Button:** Used to cycle through different modes (Time, Alarm Setting).
- **TALKING Button:** Press to hear the current time announced in Spanish.

- **HOURL Button:** Used to adjust the hour in setting modes.
- **MINUTE Button:** Used to adjust the minute in setting modes.
- **Crown:** Used to set the analog hands.

## Telling Time

- **Voice Announcement:** Press the **TALKING** button to hear the current time spoken aloud in Spanish.
- **Digital Display:** The digital display shows the time in a 12-hour format (AM/PM).
- **Analog Display:** The traditional hands indicate the hour and minute.

## Setting Digital Time

1. Press the **MODE** button repeatedly until the digital display shows the time setting mode (often indicated by flashing digits).
2. Use the **HOURL** button to adjust the hour. Pay attention to AM/PM indicators.
3. Use the **MINUTE** button to adjust the minutes.
4. Press the **MODE** button again to confirm and exit the time setting mode.

## Setting Alarm

1. Press the **MODE** button until the alarm setting mode is displayed (often indicated by an alarm icon or 'AL').
2. Use the **HOURL** button to set the desired alarm hour.
3. Use the **MINUTE** button to set the desired alarm minutes.
4. Press the **MODE** button to activate the alarm and exit the setting mode.
5. To turn off a sounding alarm, press any button.

## MAINTENANCE

---

### Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the watch. Avoid using harsh chemicals or abrasive materials.

### Battery Replacement

The watch uses a Lithium-metal battery. When the voice announcement becomes faint or the digital display dims, it's time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and function.

### Water Resistance

This watch is marked as "WATER RESISTANT." This typically means it can withstand splashes, rain, or brief immersion in water, such as washing hands. It is **not** suitable for swimming, showering, or diving. Prolonged exposure to water or submersion may cause damage.

## TROUBLESHOOTING

---

- **No Voice Announcement:**
  - Check battery level. Replace if low.
  - Ensure the TALKING button is pressed firmly.
- **Digital Display is Blank or Dim:**
  - Battery may be depleted. Replace the battery.
- **Time is Inaccurate:**
  - Re-set the digital time following the instructions in the 'Operating Instructions' section.
  - Ensure the analog hands are synchronized with the digital time by adjusting the crown.
  - Low battery can affect timekeeping accuracy. Consider battery replacement.
- **Alarm Not Sounding:**
  - Ensure the alarm is set correctly and activated.
  - Check battery level.

## SPECIFICATIONS

Feature	Description
Brand	VISION
Model	861ZTS-GRN-MEX
Dial Type	Analog and Digital
Movement	Electronic Digital and Analog
Voice Function	Yes (Spanish)
Alarm Function	Yes
Case Material	Plastic
Case Diameter	40 mm (1.57 inches)
Strap Width	18 mm (0.71 inches)
Case Thickness	16 mm (0.63 inches)
Battery Type	1 Lithium-metal (included)
Water Resistance	Water Resistant (Splash/Rain proof, not for submersion)



Figure 3: Watch face diameter measurement (40 mm).





Figure 4: Watch case thickness measurement (16 mm).

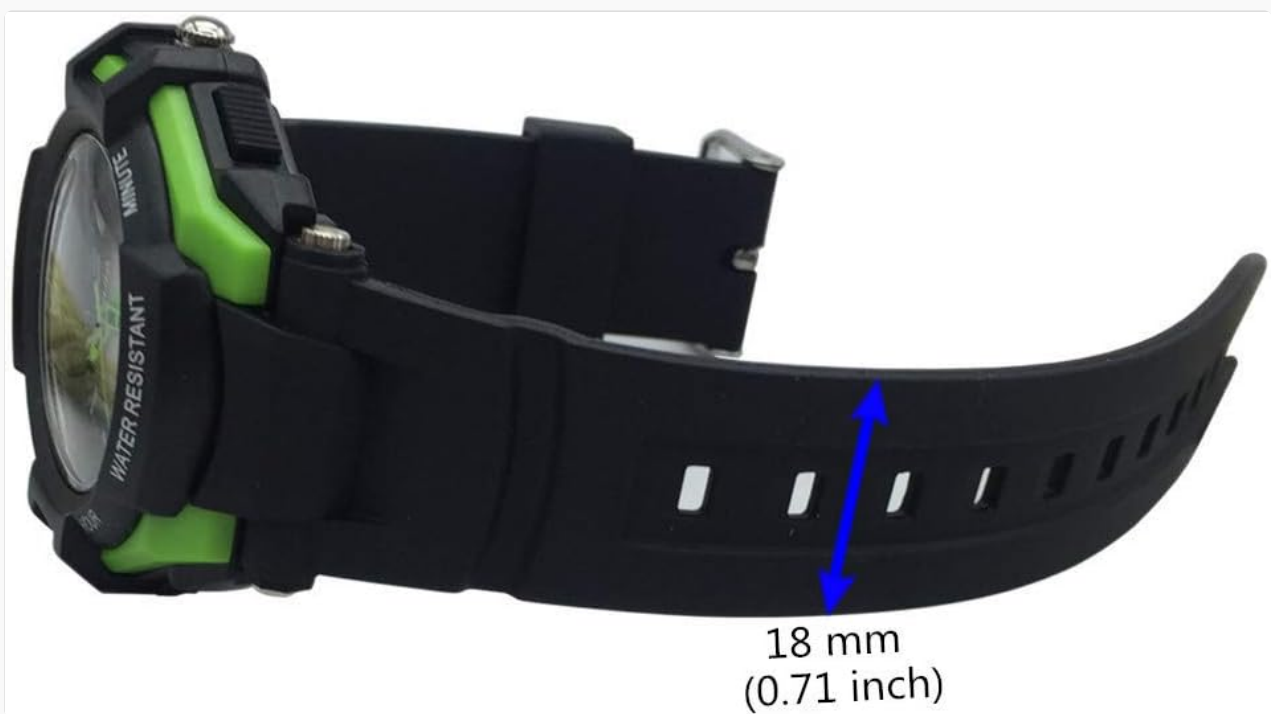


Figure 5: Watch strap width measurement (18 mm).



Figure 6: Examples of wrist circumference fit (20 cm and 12 cm).

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the seller/manufacturer directly. Keep your proof of purchase for any warranty claims.