

**CREATE 43479\_88375**

# CREATE WINDCALM DC Ceiling Fan User Manual

Model: 43479\_88375

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before installation and use. Keep this manual for future reference.

### General Safety

- Ensure the power supply is disconnected before installation, maintenance, or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

### Electrical Safety

- All electrical connections must be made by a qualified electrician and conform to local codes and regulations.
- Ensure the voltage and frequency of your power supply match the specifications of the fan.
- The fan must be properly grounded to prevent electric shock.

### Installation Safety

- Mount the fan to a ceiling structure capable of supporting a minimum of 15 kg (33 lbs).
- Ensure there is adequate clearance between the fan blades and any obstacles (walls, furniture) and the floor. A minimum distance of 2.3 meters (7.5 feet) from the floor to the blades is recommended.
- Do not install the fan in a location where it can be easily reached by children or pets.

## 2. PRODUCT OVERVIEW

---

The CREATE WINDCALM DC Ceiling Fan is designed for efficient and quiet air circulation in various indoor spaces. It features a durable aluminum body, a silent DC motor, and three lightweight blades, ensuring minimal noise operation. The fan offers 6 adjustable speeds and a programmable timer for convenience.



The CREATE WINDCALM DC Ceiling Fan in white, shown with its accompanying remote control. The fan features a sleek, modern design with three blades.



The ceiling fan seamlessly integrated into a modern living space, demonstrating its aesthetic appeal and functional placement.



A detailed view of the fan's motor housing, highlighting the CREATE branding and ventilation slots, indicative of its DC motor design.

### 3. TECHNICAL SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	CREATE
Model Number	43479_88375
Dimensions (L x W x H)	132 x 132 x 29 cm
Weight	6.38 kg
Fan Design	Ceiling Fan
Power Source	Electric Cable
Special Feature	High Speed, Silent DC Motor, Timer, Summer/Winter Function
Recommended Use	Ventilation
Room Type	Living Room (suitable for 13m <sup>2</sup> to 25m <sup>2</sup> rooms)
Color	White Blades



Diagram illustrating the fan's dimensions, including the 18 cm diameter of the motor housing and the 29 cm total height from ceiling to blade tip.

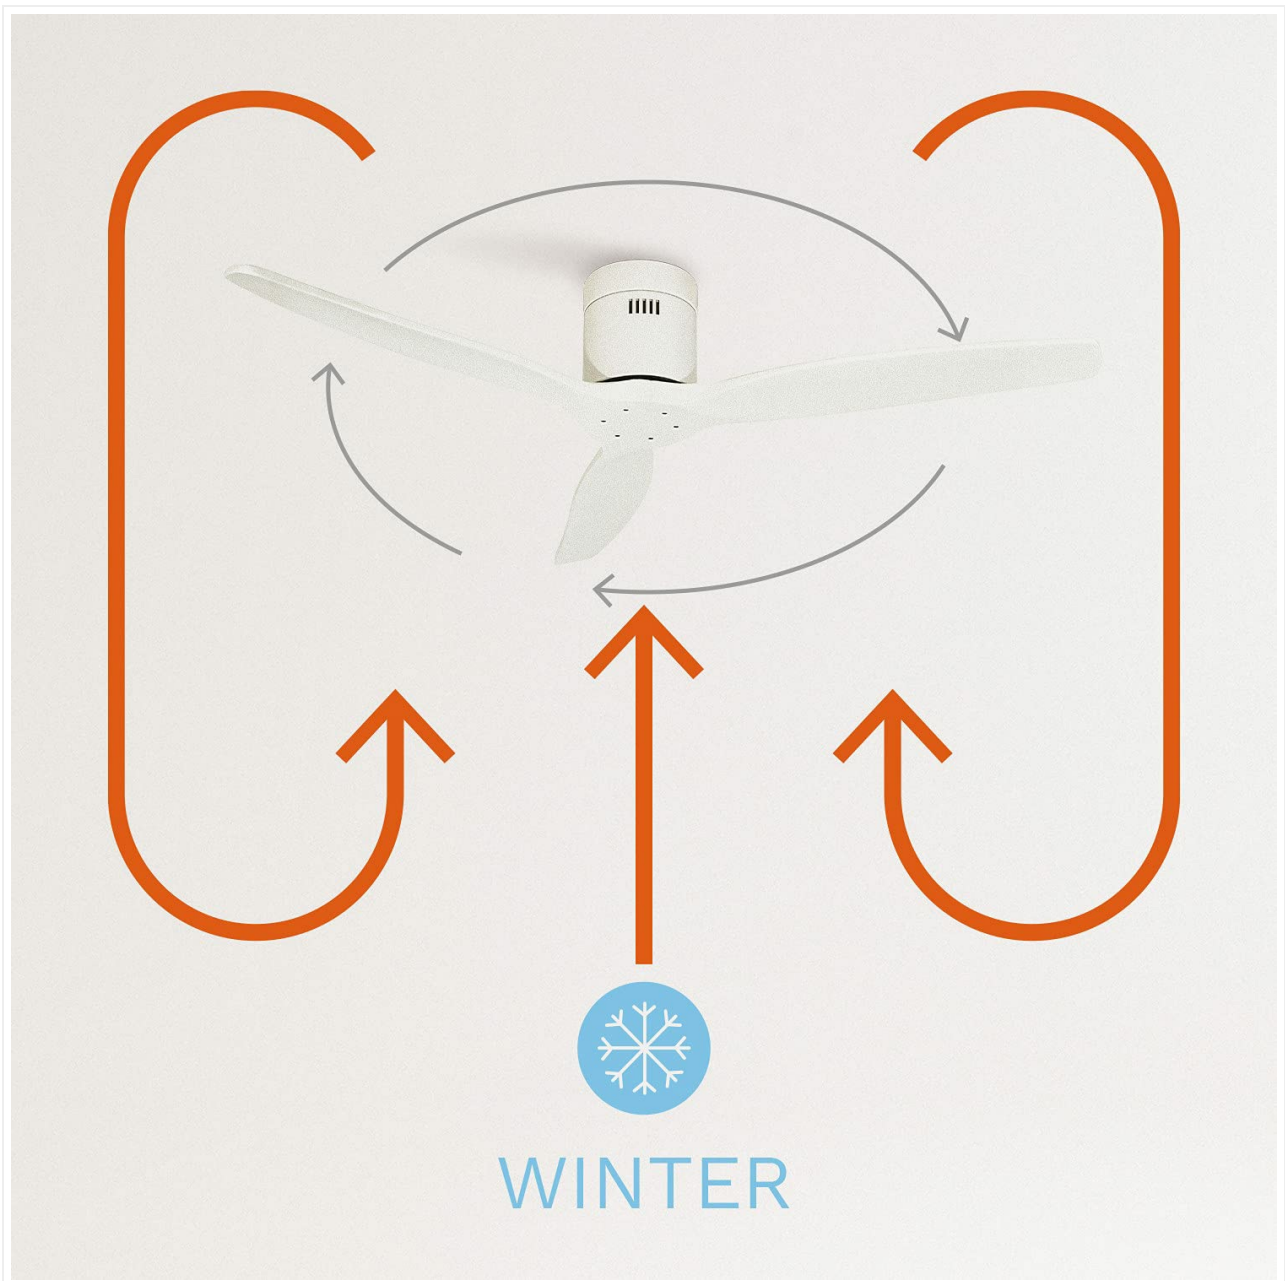 


Diagram detailing the fan blade dimensions, showing a total diameter of 132 cm, a blade length of 66 cm, and a blade width of 12 cm.

## 4. INSTALLATION GUIDE

---

Proper installation is crucial for the safe and efficient operation of your ceiling fan. It is highly recommended that installation be performed by a qualified electrician.

### Pre-Installation Checks

- Unpack all components and verify against the packing list.
- Ensure the ceiling joist or support structure is strong enough to hold the fan's weight.
- Turn off power at the main circuit breaker before starting any electrical work.

### Mounting the Fan

1. Secure the mounting bracket to the ceiling outlet box using appropriate screws and washers.
2. Carefully lift the fan motor assembly and attach it to the mounting bracket.

### Wiring Connections



Connect the electrical wires according to the wiring diagram provided in the separate detailed installation manual (not included in this general overview). Ensure all connections are secure and insulated.

## Attaching Blades

Attach the fan blades to the motor hub using the provided screws. Ensure all screws are tightened securely.



The central hub of the fan, showing the attachment points for the blades. Icons indicate key features: 1-4 hour timer, ultra-silent operation, and 6 speed settings.

## 5. OPERATING INSTRUCTIONS

Your CREATE WINDCALM DC Ceiling Fan comes with a remote control for convenient operation of all its functions.

### Remote Control Functions

The remote control allows you to:

- **Power On/Off:** Turn the fan on or off.
- **Speed Adjustment:** Select from 6 different fan speeds to control airflow intensity.
- **Timer Setting:** Program the fan to automatically turn off after 1, 2, or 4 hours.



- **Summer/Winter Mode:** Change the direction of blade rotation to optimize air circulation for different seasons.



The remote control for the CREATE WINDCALM DC Ceiling Fan, featuring buttons for power, speed settings (1-6), timer (1H, 2H, 4H), and seasonal mode selection.

## Summer Mode

In summer mode, the fan blades rotate counter-clockwise, pushing air downwards. This creates a cooling breeze effect, helping to dissipate heat and refresh the room.

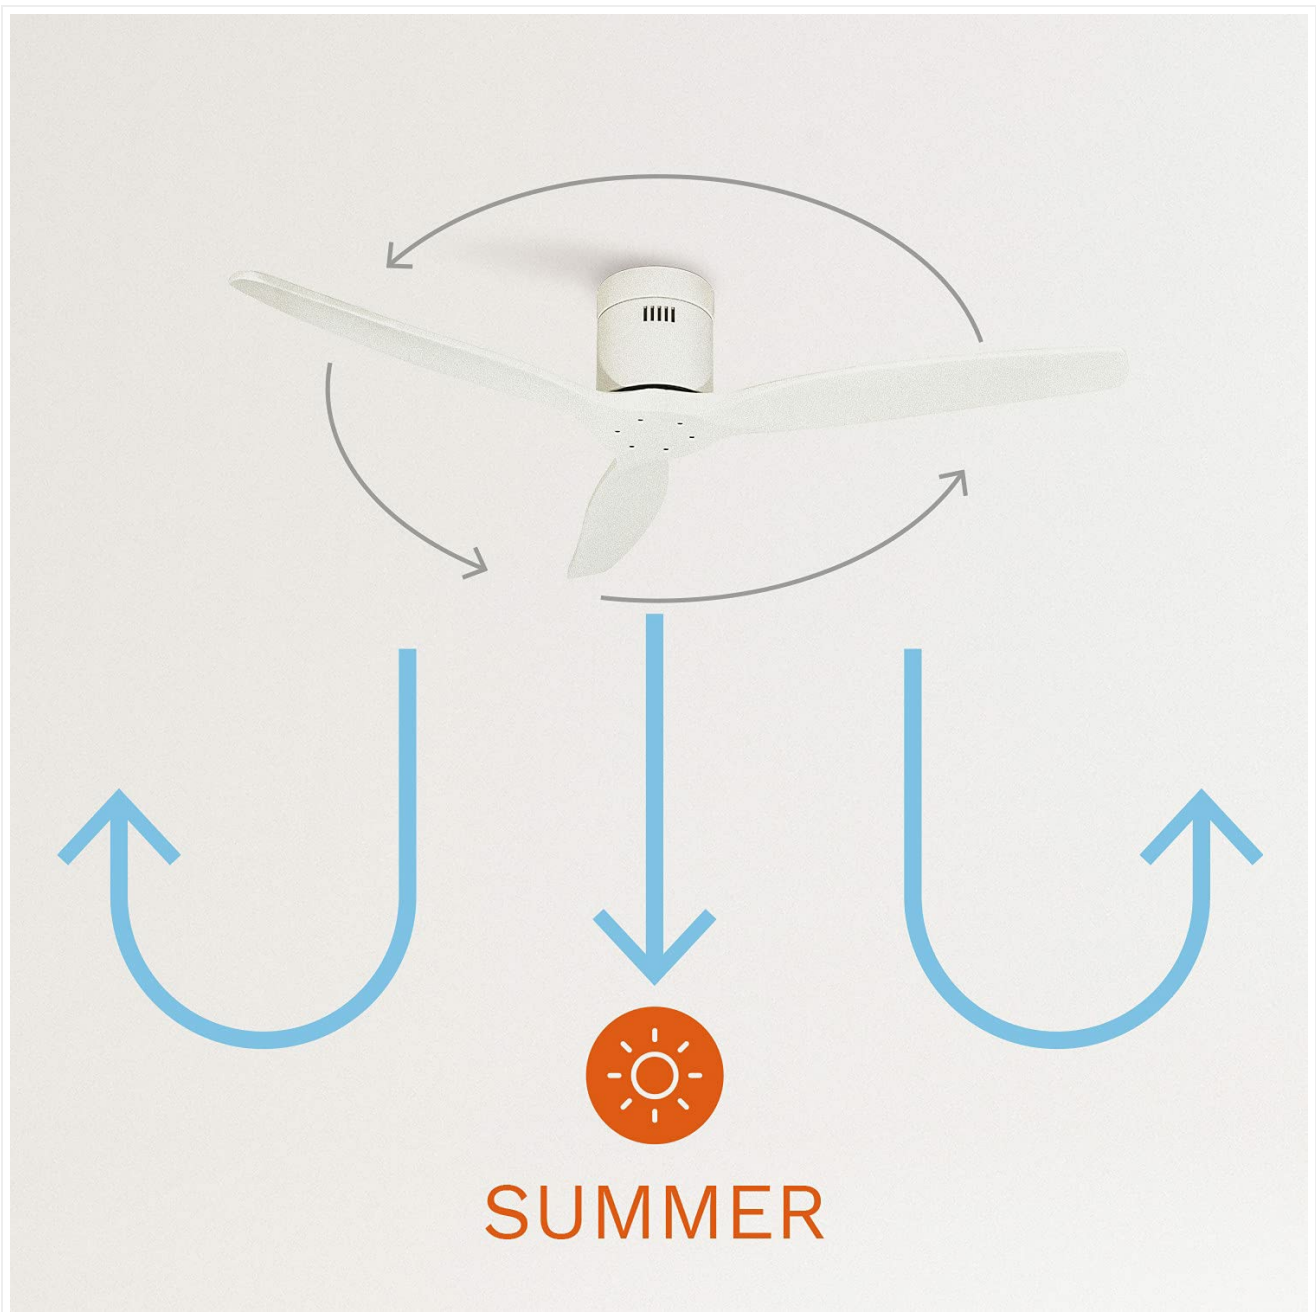 


Diagram showing the downward airflow pattern in summer mode, where the fan creates a cooling effect by pushing air towards the floor.

### Winter Mode

In winter mode, the fan blades rotate clockwise, drawing air upwards. This helps to circulate warm air that accumulates near the ceiling, distributing it evenly throughout the room and improving heating efficiency.

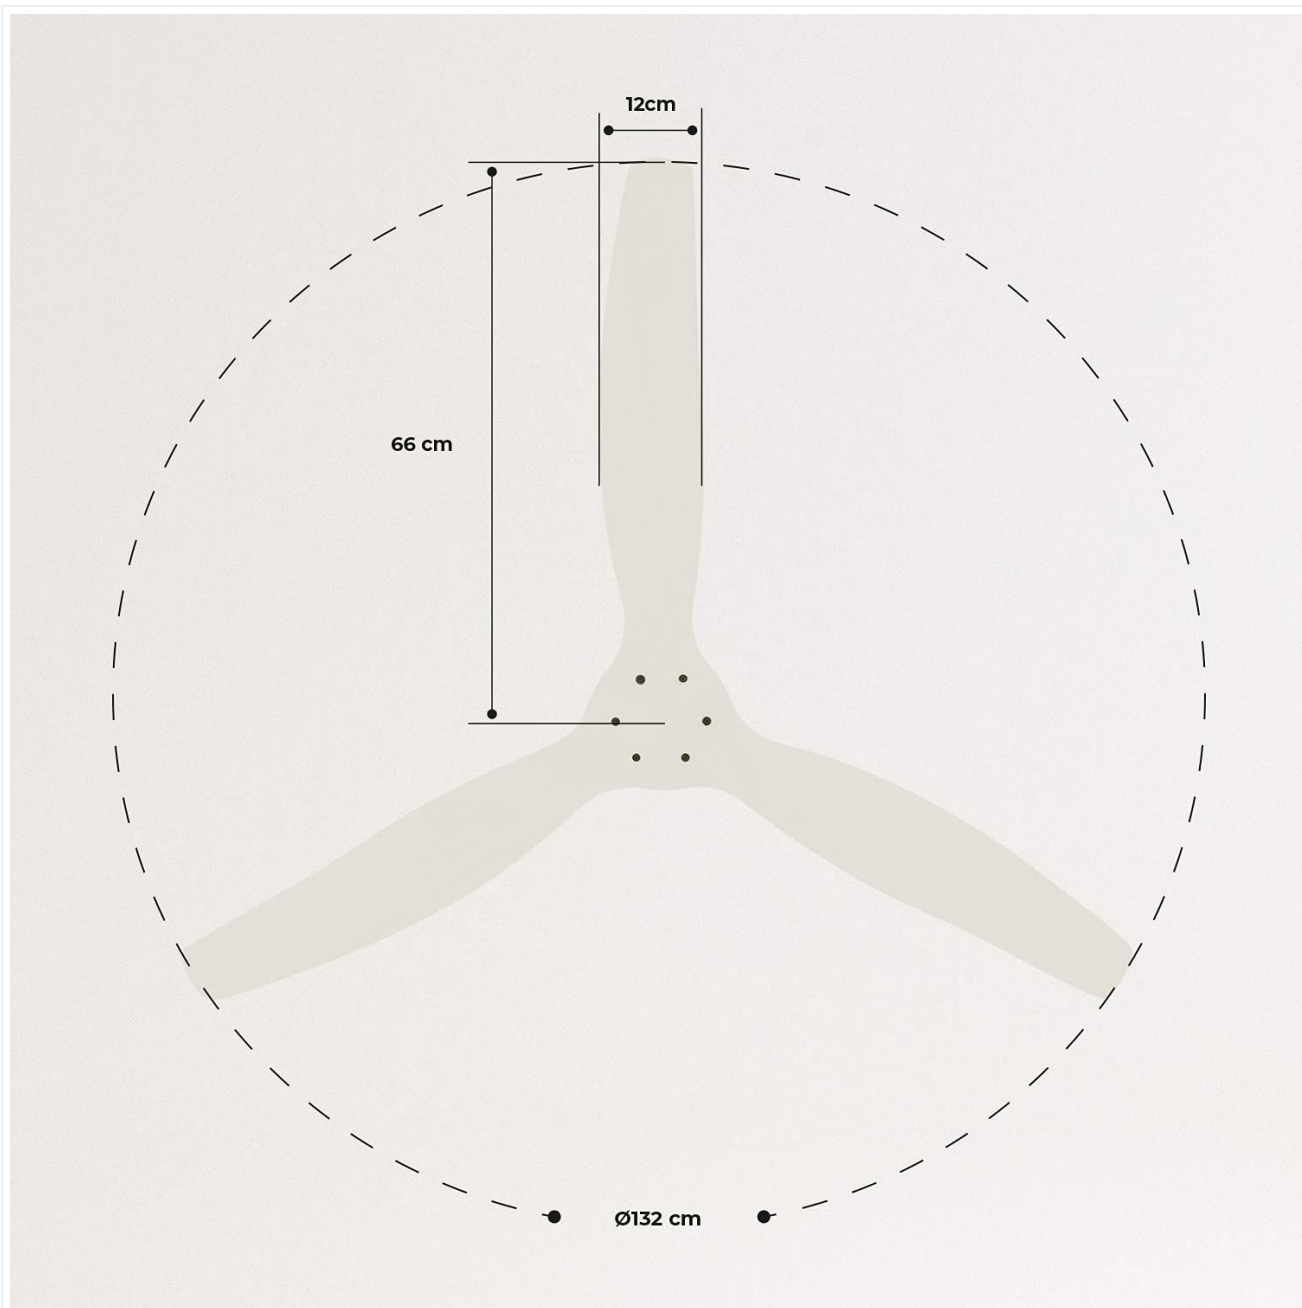 


Diagram showing the upward airflow pattern in winter mode, where the fan helps to redistribute warm air from the ceiling throughout the room.

## 6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

### Cleaning

- Always turn off the power to the fan at the circuit breaker before cleaning.
- Use a soft, damp cloth to wipe down the fan blades and motor housing. Do not use abrasive cleaners or solvents, as they may damage the finish.
- Ensure the fan is completely dry before restoring power.

### Regular Checks

- Periodically check all screws and fasteners on the mounting bracket and blade attachments to ensure they are secure. Tighten if necessary.
- Listen for any unusual noises during operation, which may indicate a loose part or an issue with the motor.

## 7. TROUBLESHOOTING

If you encounter any issues with your fan, refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power supply Loose wiring connection Remote control battery low	Check circuit breaker and wall switch Verify all wiring connections are secure (consult electrician) Replace remote control batteries
Fan makes excessive noise	Loose screws on blades or mounting Bent blade Motor issue	Tighten all screws Check blades for damage and replace if necessary Contact customer support
Remote control not working	Battery depleted Obstruction between remote and receiver Remote not paired (if applicable)	Replace batteries Ensure clear line of sight Refer to detailed manual for pairing instructions
Fan wobbles	Loose mounting bracket Unbalanced blades	Ensure mounting bracket is securely fastened Check blade balance and use balancing kit if needed

## 8. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact CREATE customer service. Keep your purchase receipt as proof of purchase.

You can find more information and contact details on the official CREATE website: [www.create-store.com](http://www.create-store.com)