Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > CREATE /
- > CREATE WINDCALM Ceiling Fan User Manual

CREATE 82468_161260

CREATE WINDCALM Ceiling Fan User Manual

Model: 82468_161260

1. Introduction

Thank you for choosing the CREATE WINDCALM Ceiling Fan. This manual provides essential information for the safe and efficient operation of your new ceiling fan. Please read it thoroughly before installation and use, and keep it for future reference.



Image 1.1: The CREATE WINDCALM Ceiling Fan with its remote control.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply is disconnected before installation or maintenance.
- Installation must be performed by a qualified electrician.
- Mount the fan securely to a ceiling joist or structure capable of supporting its weight (6 kg).
- Maintain a safe distance between the fan blades and any obstacles.
- Do not insert objects into the fan blades while in operation.
- This appliance is for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation:

- Ceiling Fan Motor Unit with Light
- Fan Blades (3x)
- Remote Control
- · Mounting Bracket
- Hardware Kit (screws, anchors, etc.)
- User Manual

4. SETUP AND INSTALLATION

Proper installation is crucial for the fan's performance and safety. Refer to the diagrams below for guidance.

4.1. Dimensions and Placement

The fan has a diameter of 132 cm and a height of 31.5 cm. Ensure adequate clearance from walls and furniture. It is suitable for rooms between 15m² and 25m².

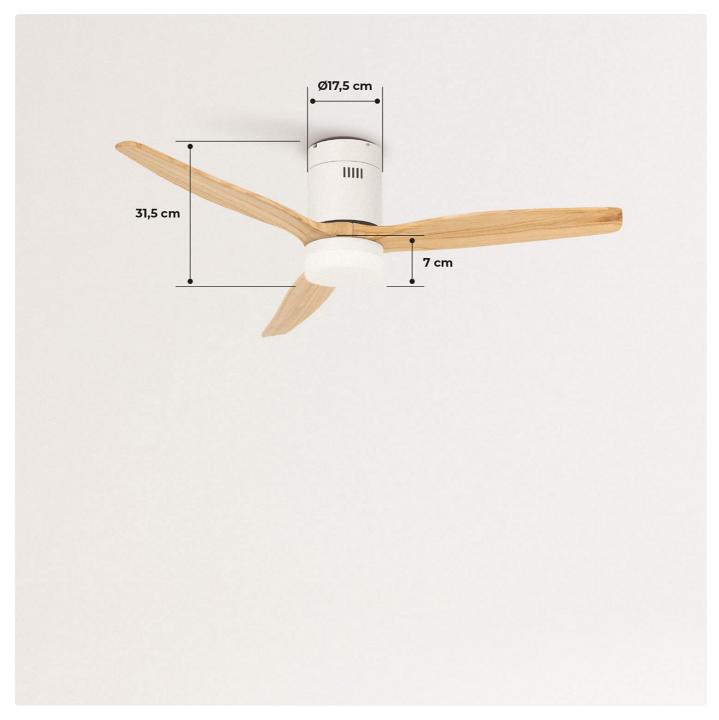


Image 4.1: Detailed dimensions of the fan unit.

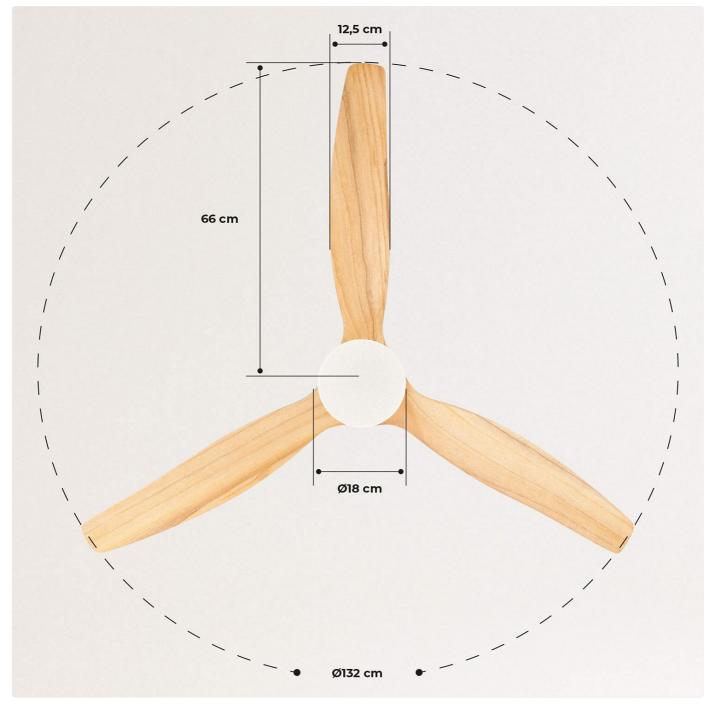


Image 4.2: Blade and overall fan diameter (132 cm) measurements.



Image 4.3: Recommended room coverage area of 15m²-25m².

4.2. Wiring and Mounting

Connect the fan to a suitable electrical supply. Ensure all connections are secure and comply with local electrical codes. Mount the fan to a sturdy ceiling junction box or support structure.

5. OPERATING INSTRUCTIONS

Your CREATE WINDCALM fan comes with a remote control for convenient operation of all its functions.

5.1. Fan Speed Control

The fan features a DC motor with 6 adjustable speeds. Use the remote control to select your desired airflow level.



Image 5.1: Icons indicating timer function (1-4h), silent operation, and 6 speed settings.

The integrated 15W LED light offers three color temperatures: warm, neutral, and cool. Cycle through these settings using the light button on the remote to create the desired ambiance. The light intensity is not adjustable.

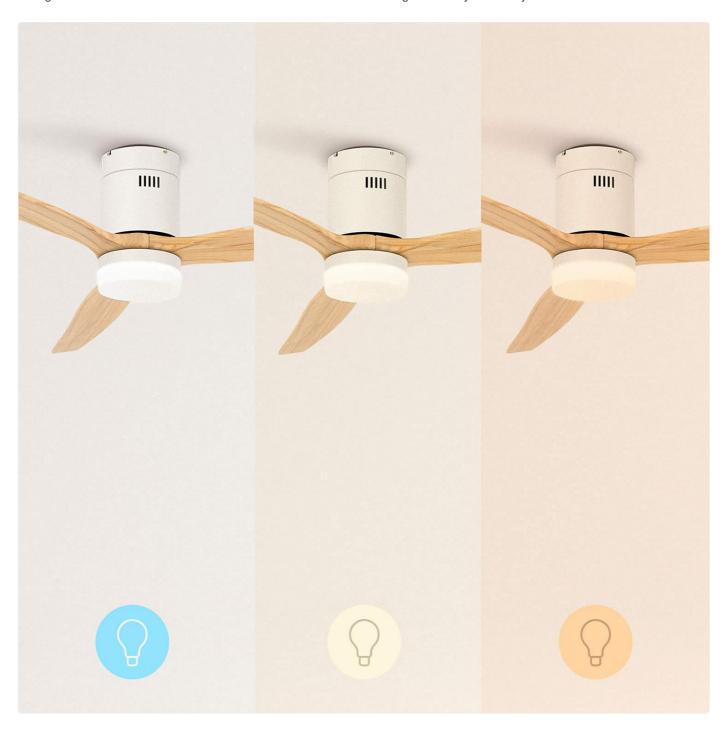


Image 5.2: Visual representation of the three light temperature options: cool, neutral, and warm.

5.3. Timer Function

Set the fan to automatically turn off after 1 to 4 hours using the timer function on the remote control.



Image 5.3: The remote control, highlighting the timer function for automatic shut-off.

5.4. Summer/Winter Mode

The fan features a reversible motor for year-round comfort. Switch between summer and winter modes to optimize air circulation.

- Summer Mode: Blades rotate counter-clockwise, pushing cool air downwards to create a refreshing breeze.
- Winter Mode: Blades rotate clockwise, drawing cool air up and distributing warm air accumulated at the ceiling downwards, helping to evenly heat the room.

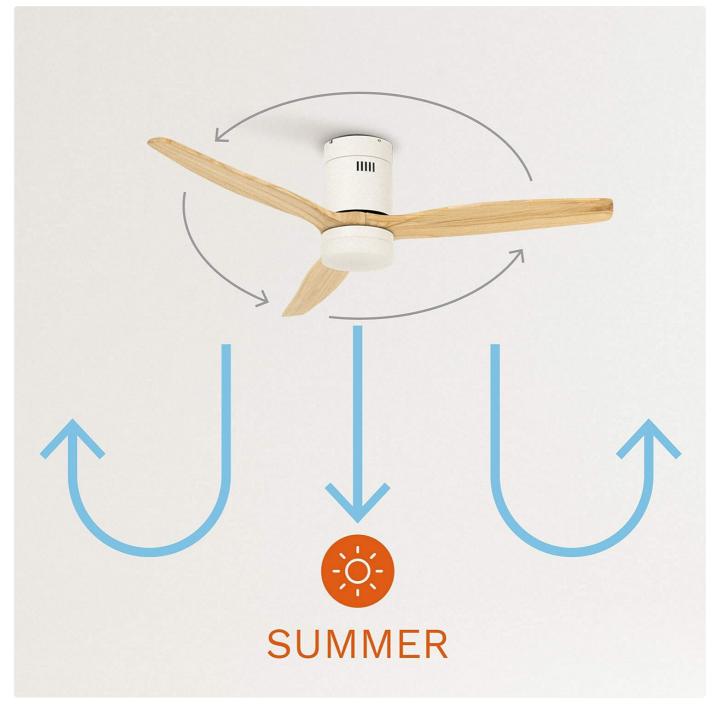


Image 5.4: Diagram illustrating airflow in Summer Mode (downward breeze).



Image 5.5: Diagram illustrating airflow in Winter Mode (upward circulation to redistribute warm air).

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- Cleaning: Dust the fan blades and motor housing periodically with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Blade Balance: If the fan wobbles, check that all blade screws are tightened and that the blades are not warped.
- **Light Source:** The integrated LED light is designed for long life and typically does not require replacement. If issues arise, contact customer support.

Always disconnect power before cleaning or performing any maintenance.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power supply; Remote control battery low; Loose wiring.	Check circuit breaker; Replace remote battery; Verify wiring connections (consult electrician).
Fan wobbles	Loose blade screws; Unbalanced blades; Improper mounting.	Tighten all blade screws; Check blade balance; Ensure secure mounting to ceiling.
Light does not work	No power to light; LED module fault.	Check light switch/remote setting; Contact customer support if LED is faulty.
Remote control not responding	Low battery; Remote not paired.	Replace remote battery; Refer to remote pairing instructions (if applicable).

8. Specifications

Feature	Detail	
Model Number	82468_161260	
Brand	CREATE	
Dimensions (L x W x H)	132 x 31.5 x 31.5 cm	
Weight	6 kg	
Fan Diameter	132 cm	
Motor Type	DC Motor	
Fan Speeds	6	
Light Type	Integrated 15W LED	
Light Color Temperatures	Warm, Neutral, Cool	
Timer Settings	1-4 hours	
Special Features	Summer/Winter Mode, Ultra-Silent Operation	
Noise Level	50 dB (from energy label)	
Airflow	9000 m³/h (from energy label)	
Power Source	Electric Cable	
Recommended Room Size	15m² - 25m²	

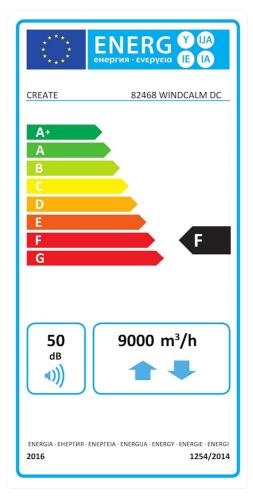


Image 8.1: Energy efficiency label for the CREATE WINDCALM fan.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official CREATE website. Keep your proof of purchase for any warranty claims.

Contact Information:

Website: www.create-home.com (Example, actual URL might vary)

Email: support@create-home.com (Example)

© 2024 CREATE. All rights reserved.

Related Documents - 82468_161260



USER MANUAL

CREATE Wind Calm Patio Outdoor Ceiling Fan DC Motor User Manual

User manual for the CREATE Wind Calm Patio outdoor ceiling fan with DC motor, detailing installation, safety, operation, and remote control features in multiple languages.



CREATE WINDCALM DC Ceiling Fan User Manual

User manual for the CREATE WINDCALM DC ceiling fan, providing installation instructions, safety precautions, and technical specifications in multiple languages.



CREATE WIND CALM DC Ceiling Fan User Manual

This user manual provides comprehensive instructions for the CREATE WIND CALM DC Ceiling Fan, covering installation, safety guidelines, parts identification, and operation. Learn how to safely install and operate your new ceiling fan.



CREATE WIND CALM Ceiling Fan Assembly Manual

Assembly manual for the CREATE WIND CALM ceiling fan without light. This guide provides stepby-step instructions for installation, including mounting the bracket, connecting the driver, anchoring the motor, and assembling the blades. It also includes a blade balancing kit guide.





 
CREATE WIND TUBE Ceiling Fan User Manual: Installation, Safety, and Operation Guide

Download the CREATE WIND TUBE ceiling fan user manual. Find detailed instructions for installation, safety precautions, parts list, remote control operation, and summer-winter function.

CEILING FAN SUMMER-WINTER FUNCTION
VENTILADOR DE TECHO FUNCIÓN VERANO-INVIERNO

USER MANUAL

CREATE WIND STYLANCE DC



CREATE WIND STYLANCE DC User Manual

Comprehensive user manual for the CREATE WIND STYLANCE DC ceiling fan, including installation instructions, parts list, and safety precautions in multiple languages.