Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SUPVAN /
- > Supvan TP76E Label Printer User Manual

SUPVAN Supvan TP76E

Supvan TP76E Label Printer User Manual

Model: TP76E

NTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Supvan TP76E Black & White Label Printer. Please read this manual thoroughly before using the device to ensure optimal performance and longevity. The Supvan TP76E is designed for efficient label printing, offering monochrome output at speeds up to 25 labels per minute.

PACKAGE CONTENTS

Before beginning, verify that all items are present in the package:

- Supvan TP76E Label Printer
- Power Adapter
- USB Cable
- · Sample Label Roll
- User Manual (this document)

SETUP

1. Unpacking and Placement

Carefully remove the printer from its packaging. Place the printer on a stable, flat surface with adequate ventilation. Ensure there is enough space around the printer for easy access to ports and for label output.



Figure 1: Supvan TP76E Label Printer (Side View)

This image displays the Supvan TP76E label printer from a side angle, highlighting its integrated keyboard, the transparent cover over the label compartment, and the overall compact design. The handle on the right side is also visible.

2. Power Connection

- 1. Connect the power adapter to the power input port on the printer.
- 2. Plug the other end of the power adapter into a standard electrical outlet.
- 3. Press the power button to turn on the printer. The display should illuminate.

3. Loading Label Roll

The TP76E uses thermal label rolls. Follow these steps to load a new roll:

- 1. Open the transparent cover of the label compartment located at the top of the printer.
- 2. Place the label roll onto the spindle, ensuring the labels feed from the bottom of the roll towards the print head.
- 3. Feed the leading edge of the label through the guide until it is positioned under the print head.
- 4. Close the transparent cover securely.



Figure 2: Supvan TP76E Label Printer (Top View)

This image provides a top-down view of the Supvan TP76E, clearly showing the full QWERTY keyboard layout, the LCD display, and the transparent cover of the label roll compartment. This perspective is useful for understanding the user interface.

4. Connecting to a Computer (Optional)

The TP76E supports USB connectivity for printing from a computer.

- 1. Connect one end of the provided USB cable to the USB port on the printer.
- 2. Connect the other end of the USB cable to an available USB port on your computer.
- 3. Install the necessary drivers and software from the official Supvan website or the included installation media (if applicable).

OPERATING INSTRUCTIONS

1. Basic Label Creation

1. Turn on the printer.

- 2. Use the integrated QWERTY keyboard to type your desired text. The text will appear on the LCD display.
- 3. Utilize the navigation keys to move the cursor and edit text.
- 4. Press the **Print** button to print the label.

2. Formatting Options

The TP76E offers various formatting options accessible via dedicated keys or menu functions:

- Font Size: Adjust the size of the text to fit your label requirements.
- Bold/Italic: Apply bold or italic styling to your text for emphasis.
- Underline: Add an underline to text.
- Frame: Add decorative frames around your text.
- Alignment: Choose left, center, or right alignment for your text.

3. Saving and Recalling Labels

The printer allows you to save frequently used label designs for quick recall:

- 1. After creating a label, navigate to the Save function (refer to the display menu).
- 2. Select an empty memory slot to store the label.
- 3. To recall a saved label, navigate to the Recall or Open function and select the desired label from the list.

MAINTENANCE

1. Cleaning the Print Head

Regular cleaning of the print head ensures clear and consistent print quality. Clean the print head if you notice faded or incomplete prints.

- Turn off the printer and disconnect the power adapter.
- Open the label compartment cover.
- Gently wipe the print head surface with a cotton swab lightly dampened with isopropyl alcohol. Do not use water or abrasive cleaners.
- Allow the print head to dry completely before closing the cover and reconnecting power.

2. Replacing Label Rolls

When the label roll is depleted, replace it as follows:

- 1. Open the label compartment cover.
- 2. Remove the empty label roll core.
- 3. Insert a new label roll as described in the Setup section.
- 4. Close the cover.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Supvan TP76E printer.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Printer does not turn on	No power supply; Power adapter faulty	Ensure power adapter is securely connected to printer and outlet. Try a different outlet.
No labels are printing	Label roll empty; Labels incorrectly loaded; Print head dirty	Replace label roll. Re-load labels correctly. Clean the print head as per maintenance instructions.
Print quality is poor/faded	Print head dirty; Low quality labels	Clean the print head. Ensure you are using high-quality thermal labels.
Printer not recognized by computer	USB cable faulty; Drivers not installed or outdated	Try a different USB cable or port. Install or update printer drivers from the Supvan website.

SPECIFICATIONS

Key technical specifications for the Supvan TP76E Label Printer:

• Model Number: Supvan TP76E

• Printer Output: Monochrome (Black & White)

• Printing Technology: Thermal

Connectivity: USBPrint Media: Labels

• Max Input Sheet Capacity: 25 (labels per minute)

Dual-sided Printing: NoBatteries Required: No

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase accessories and replacement parts, please contact Supvan customer service or visit their official website.

You can find more information and support resources on the official SUPVAN Store on Amazon.

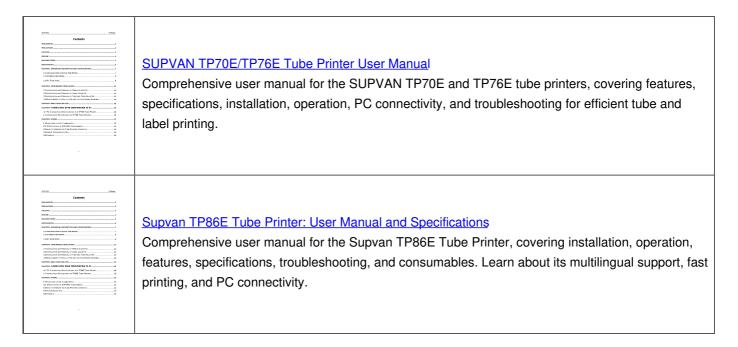



Figure 3: Supvan TP76E Label Printer in Carrying Case

This image shows the Supvan TP76E label printer neatly stored within its custom-fitted protective carrying case, emphasizing its portability and secure storage solution.

© 2024 SUPVAN. All rights reserved.

Related Documents - Supvan TP76E



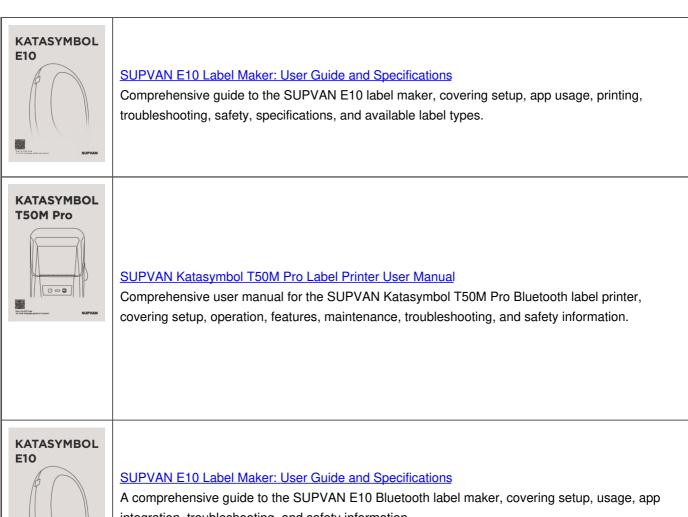


integration, troubleshooting, and safety information.

Thermal Printer E10

SUPVAN E10 Thermal Printer User Guide

Comprehensive user guide for the SUPVAN E10 Mini Bluetooth Label Printer, detailing setup, operation, features, specifications, troubleshooting, safety, and warranty information.

Documents - SUPVAN - Supvan TP76E

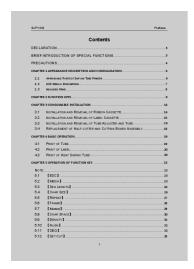

[pdf] User Manual Decleration of Conformity

SUPVAN sup DRUKARKA OZNACZNIKÓW LCD WALIZKA OPROGRAMOWANIE

320X276X100MM TP76E tp76e manual elektrykasklep pl file 549462 |||

SUPVAN Preface Contents DECLARATION.....

... content. 7 SUPVAN Chapter 1 Appearance Description and Configuration 1.3 Included Items 1. One Supvan TP76E Tube Printer 2. One Tube Adjuster 3. One Ribbon Cassette Black 4. One Label Cassette ...

lang:i-klingon score:38 filesize: 4.11 M page_count: 58 document date: 2017-07-14