

Sharp QW-MB612K-SS3

Sharp QW-MB612K-SS3 Dishwasher User Manual

Model: QW-MB612K-SS3

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Sharp QW-MB612K-SS3 dishwasher. Please read these instructions thoroughly before using the appliance and retain them for future reference.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent electric shock, fire, or injury:

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid touching the heating element during or immediately after a wash cycle.
- Sharp objects should be loaded with points down to prevent injury.
- Disconnect the power supply before performing any maintenance or cleaning.

3. PRODUCT OVERVIEW

The Sharp QW-MB612K-SS3 is a freestanding 12 place setting dishwasher designed for efficient dish cleaning. It features 6 wash programs to accommodate various cleaning needs.



Figure 3.1: Front view of the Sharp QW-MB612K-SS3 dishwasher. This image displays the silver finish and the control panel located at the top edge of the door.



Figure 3.2: Interior view of the Sharp QW-MB612K-SS3 dishwasher with the door open, showing the upper and lower racks, and the cutlery basket.



Figure 3.3: Detailed view of the dishwasher's interior, highlighting the adjustable racks and the spray arm mechanism for water distribution.

4. SETUP

4.1 Installation

For optimal performance and safety, professional installation is recommended. Ensure the dishwasher is placed on a level surface and securely connected to the water supply, drain, and electrical outlet according to local codes and regulations. The product dimensions are 85D x 85W x 60H centimeters.

4.2 Initial Use

1. **Fill Salt Dispenser:** If your water supply is hard, fill the salt dispenser with dishwasher salt to soften the water and prevent limescale buildup. Refer to the water hardness test strip (if included) for

guidance.

2. **Fill Rinse Aid Dispenser:** Pour rinse aid into the designated dispenser. Rinse aid helps with drying and prevents water spots.
3. **First Wash Cycle:** Run an empty wash cycle with detergent to clean the interior of the appliance before loading dishes.

5. OPERATING INSTRUCTIONS

5.1 Loading the Dishwasher

- Scrape off large food particles from dishes.
- Place larger items in the lower rack and smaller, delicate items in the upper rack.
- Ensure items do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for most items, but sharp knives with points down for safety.

5.2 Adding Detergent

Add the appropriate amount of dishwasher detergent to the detergent dispenser. The amount depends on the wash program selected and the soil level of the dishes.

5.3 Program Selection

Your dishwasher offers 6 wash programs. Select the desired program using the control panel based on the type and soil level of your dishes. Common programs include:

- **Intensive:** For heavily soiled dishes and pots.
- **Normal:** For regularly soiled dishes.
- **Eco:** Energy-saving program for normal soil.
- **Glass:** For delicate glassware.
- **90 Min:** For lightly soiled dishes requiring a quicker wash.
- **Rapid:** A very quick wash for lightly soiled items without drying.

5.4 Starting a Cycle

Close the dishwasher door firmly. Press the Power button, then select your desired program. Press the Start button to begin the cycle.

5.5 Interrupting a Cycle

To interrupt a cycle, carefully open the door. The dishwasher will pause. To resume, close the door and press the Start button. Be cautious of hot steam when opening the door mid-cycle.

5.6 End of Cycle

Once the cycle is complete, the dishwasher will signal with an audible alert or indicator light. Open the door slightly to allow steam to escape before unloading. Unload the lower rack first to prevent water from dripping onto dry dishes.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

6.1 Cleaning Filters

The filter system should be checked and cleaned regularly (e.g., weekly). Remove the coarse filter, fine filter, and main filter. Rinse them under running water to remove food particles. Reassemble and replace them correctly.

6.2 Cleaning Spray Arms

Periodically check the spray arm nozzles for blockages. If blocked, remove the spray arms and clear the holes with a thin object like a toothpick. Rinse thoroughly and reattach.

6.3 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. For stainless steel finishes, use a specialized stainless steel cleaner. Avoid abrasive cleaners or solvents.

6.4 Interior Cleaning

Run a dishwasher cleaning cycle using a specialized dishwasher cleaner every few months to remove grease and limescale buildup.

7. TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arm nozzles, add more detergent, select appropriate program.
Water not draining	Clogged filter, kinked drain hose, blocked drain pump.	Clean filters, check and straighten drain hose, contact service if pump is blocked.
Dishwasher not starting	Door not closed properly, power supply issue, program not selected.	Ensure door is latched, check power connection/circuit breaker, select a wash program.
Excessive noise	Items hitting spray arms, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure dishwasher is level.

8. SPECIFICATIONS

Key technical specifications for the Sharp QW-MB612K-SS3 dishwasher:

Feature	Specification
Brand	Sharp
Model Name	QW-MB612K-SS3
Place Settings	12
Programs	6
Installation Type	Freestanding

Feature	Specification
Color	Silver
Finish Type	Matte
Material	Metal
Product Dimensions (D x W x H)	85 x 85 x 60 cm
Item Weight	47 Kilograms
Voltage	240V
Annual Energy Consumption	290 Kilowatts
Noise Level	14 dB
Special Features	Adjustable Height

9. WARRANTY AND SUPPORT

9.1 Warranty Information


This Sharp QW-MB612K-SS3 dishwasher comes with a **2-year warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.



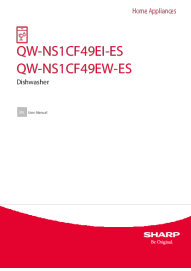


9.2 Customer Support and Installation Services

For installation services or technical support, please contact Sharp customer service at the following regional numbers:

- **Riyadh:** +966 -11- 4094006 Ext – 113
- **Jeddah:** +966- 12- 6577714
- **Dammam:** +966-13- 8343691
- **Qassim:** +966 581044198
- **Abha:** +966 593322785

Related Documents - QW-MB612K-SS3

	<p>Sharp Dishwasher User Manual: QW-NA1CF47ES-EU & QW-NA1CF47EW-EU</p> <p>User manual for Sharp dishwashers, models QW-NA1CF47ES-EU and QW-NA1CF47EW-EU. Provides comprehensive guidance on installation, operation, safety, maintenance, and troubleshooting for optimal appliance use.</p>
---	--

	<p>Sharp Dishwasher User Manual: QW-NA26F39DI-DE & QW-NA26F39DW-DE</p> <p>Comprehensive user manual for Sharp dishwashers, models QW-NA26F39DI-DE and QW-NA26F39DW-DE. Includes installation, operation, safety, maintenance, and troubleshooting guides.</p>
	<p>Sharp Dishwasher QW-NA26F39DI-DE / QW-NA26F39DW-DE User Manual</p> <p>Comprehensive user manual for Sharp dishwashers, models QW-NA26F39DI-DE and QW-NA26F39DW-DE. Provides essential safety, installation, operation, maintenance, and troubleshooting guidance.</p>
	<p>Sharp Dishwasher User Manual: QW-NS1CF49EI-ES, QW-NS1CF49EW-ES</p> <p>Comprehensive user manual for Sharp dishwashers models QW-NS1CF49EI-ES and QW-NS1CF49EW-ES, covering installation, safety, operation, maintenance, and troubleshooting.</p>
	<p>Sharp QW-NA1CF47EW-FR Dishwasher User Manual</p> <p>User manual for the Sharp QW-NA1CF47EW-FR dishwasher, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Sharp QW-NA25GU44BS-DE Dishwasher User Manual</p> <p>This user manual provides essential safety information and instructions for operating and maintaining the Sharp QW-NA25GU44BS-DE dishwasher. Learn about installation, usage, cleaning, and troubleshooting.</p>