

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LINKChef](#) /

› [LINKChef HM-1020 Hand Mixer Instruction Manual](#)

LINKChef HM-1020

LINKChef HM-1020 Hand Mixer

User Instruction Manual

INTRODUCTION

Thank you for purchasing the LINKChef HM-1020 Hand Mixer. This versatile electric appliance is designed to simplify your kitchen tasks, offering functions for whipping, mixing, and kneading. With its durable stainless steel construction and 5-speed settings, it provides efficient performance for a variety of ingredients. Please read this manual thoroughly before first use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the mixer.
- To protect against risk of electrical shock, do not put the mixer body, cord, or electrical plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always ensure the appliance is switched off and unplugged before changing accessories or approaching parts that move in use.
- This appliance is intended for household use only.

PRODUCT OVERVIEW AND COMPONENTS

The LINKChef HM-1020 Hand Mixer comes with essential components for various mixing tasks.

- Mixer Body
- Stainless Steel Beaters (for whipping and mixing)
- Stainless Steel Dough Hooks (for kneading dough)



Image: The LINKChef HM-1020 Hand Mixer shown with its stainless steel beaters and dough hooks.



Image: Detailed view of the hand mixer highlighting key features: power indicator, heat sink, eject button, 5-speed control, and the stainless steel body.

SETUP

1. Before first use, wash the beaters and dough hooks in warm, soapy water. Rinse and dry thoroughly. The main mixer body can be wiped with a damp cloth.
2. Ensure the mixer is unplugged before attaching or removing accessories.
3. Insert the desired beaters or dough hooks into the openings on the bottom of the mixer body. Push firmly until they click into place. The beaters are interchangeable, but the dough hooks are specific to left and right slots (one has a collar, the other does not).
4. Place ingredients into a suitable mixing bowl.

OPERATING INSTRUCTIONS

The LINKChef HM-1020 features a 5-speed control for precise mixing.

1. After attaching the appropriate accessories and placing ingredients in a bowl, plug the mixer into a standard electrical outlet. The power indicator light on top will illuminate, indicating it is ready for use.
2. Start mixing at the lowest speed setting (Speed 1) and gradually increase the speed as needed.
3. **Speed Settings Guide:**
 - **Low Speed (1-2):** Ideal for mixing dough using the dough hooks, or for gently folding ingredients.
 - **Medium Speed (2-3):** Suitable for preparing pastry dough or whipping eggs using the beaters.
 - **High Speed (4-5):** Best for whipping butter, cream, or egg whites to a stiff consistency using the beaters.
4. Move the mixer slowly around the bowl to ensure even mixing.
5. When finished, slide the speed control to the "OFF" position and unplug the mixer from the outlet. The power indicator light will turn off.
6. To remove the beaters or dough hooks, press the Eject Button located on the top of the mixer.



Image: The hand mixer in use, demonstrating its application for mixing ingredients in a bowl.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your hand mixer.

- **Cleaning the Mixer Body:** Unplug the mixer before cleaning. Wipe the exterior of the mixer body with a soft, damp cloth. Do not immerse the mixer body in water or any other liquid.
- **Cleaning Attachments:** The stainless steel beaters and dough hooks are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water, then rinsed and dried thoroughly.
- **Storage:** Store the mixer and its attachments in a dry place, away from direct sunlight and heat. Ensure the cord is neatly wrapped and not kinked.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet issue; speed control not set.	Ensure the mixer is securely plugged into a working outlet. Check if the speed control is set to a speed other than "OFF".
Attachments do not fit or eject.	Attachments not aligned correctly; eject button not fully pressed.	Ensure attachments are aligned with the slots and pushed firmly until they click. Press the eject button fully to release.
Mixer overheats or stops during use.	Overloaded; continuous operation beyond rated time.	Unplug the mixer and let it cool down for at least 10-15 minutes. Reduce the load or process ingredients in smaller batches. Adhere to the rated operating time (3 minutes).

SPECIFICATIONS

Feature	Detail
Model	HM-1020
Power Supply	AC100-120V 50-60Hz
Power Consumption	200W
Rated Operating Time	3 minutes
Dimensions (approx.)	Width 9cm x Depth 14.9cm x Height 19cm
Cord Length	1 meter
Weight (approx.)	1.16 kg (2.51 pounds)
Material	Stainless Steel (Body: 201 Stainless Steel, Beaters/Hooks: 304 Food-Grade Stainless Steel)
Dishwasher Safe Attachments	Yes




Image: Visual representation of the hand mixer's dimensions and its attachments.






WARRANTY AND SUPPORT

The LINKChef HM-1020 Hand Mixer comes with a **3-year manufacturer's warranty** from the date of purchase. If you encounter any issues with your product or have questions, please contact LINKChef customer support. Refer to your purchase documentation or the LINKChef official website for specific contact details. *Please retain your proof of purchase for warranty claims.*

© 2024 LINKChef. All rights reserved.

Related Documents - HM-1020

	<p>LINKChef MC-8017 A Mini Food Processor User Manual</p> <p>This document provides instructions and safety precautions for the LINKChef MC-8017 A Mini Food Processor. Learn how to safely operate and maintain your food chopper for preparing ingredients like meat, vegetables, onions, and baby food.</p>
---	--

 <p>LINKChef Model SJ-051 MASTER SERIES WHOLE SLOW JUICER</p>	<p>LINKChef SJ-051 Master Series Whole Slow Juicer Bedienungsanleitung</p> <p>Entdecken Sie die Funktionen und die richtige Verwendung des LINKChef SJ-051 Master Series Whole Slow Juicer mit dieser umfassenden Bedienungsanleitung. Erfahren Sie mehr über Montage, Sicherheitshinweise und Reinigung.</p>
 <p>LINKChef QUICK START GUIDE SLOW JUICER</p>	<p>LINKChef Slow Juicer: Quick Start Guide & Assembly Instructions</p> <p>Get started with your LINKChef Slow Juicer. This guide provides essential information on assembly, disassembly, and cleaning for optimal performance. Learn how to use your juicer safely and effectively.</p>
 <p>LINKChef SLOW JUICER MANUAL</p>	<p>LINKChef Kaltpressensafter Bedienungsanleitung</p> <p>Umfassende Anleitung für den LINKChef Kaltpressensafter, die wichtige Sicherheitshinweise, Montage, Bedienung und Wartung abdeckt, um die optimale Nutzung des Geräts zu gewährleisten.</p>
 <p>LINKChef QUICK START GUIDE SLOW JUICER</p>	<p>LINKChef Slow Juicer Quick Start Guide: Assembly, Use, and Maintenance</p> <p>Get started with your LINKChef Slow Juicer. This guide provides essential information on parts overview, assembly, disassembly, cleaning, and maintenance for optimal juicing performance.</p>
 <p>LINKChef QUICK START GUIDE SLOW JUICER</p>	<p>LINKChef SJ51 Slow Juicer Quick Start Guide</p> <p>A concise guide to setting up and using the LINKChef SJ51 Slow Juicer, covering operation, cleaning, and maintenance for optimal performance.</p>