



Manuals.plus /

› Skip Hop /

› Skip Hop Sit-to-Step 2-in-1 Convertible Baby High Chair Instruction Manual

## Skip Hop 304275

# Skip Hop Sit-to-Step 2-in-1 Convertible Baby High Chair Instruction Manual

Model: 304275

---

## 1. INTRODUCTION

---

Thank you for choosing the Skip Hop Sit-to-Step 2-in-1 Convertible Baby High Chair. This product is designed to adapt to your child's growth, transitioning from a high chair for infants and toddlers to a kitchen helper for older children. Please read this manual carefully before assembly and use to ensure safe operation and proper maintenance.

### Key Features:

- **Versatile 2-in-1 Design:** Transitions from a high chair to a toddler kitchen helper.
- **Grow-with-Me Functionality:** Suitable for babies from 6 months to 3 years (up to 33 lbs/15 kg) and toddlers from 3+ years (up to 200 lbs/91 kg).
- **Height Adjustable and Reclining Seat:** Three angled recline positions for infant feeding and height adjustment to fit various table heights.
- **Easy to Clean:** Features a removable, machine-washable seat cover, removable 5-point harness, and a dishwasher-safe tray insert.
- **Stylish and Functional:** Beechwood accents, built-in storage, back hook for bibs, and inset wheels for mobility.
- **Space-Saving:** Easily folds for storage.

## 2. SAFETY INFORMATION

---

Always prioritize your child's safety. Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system. Ensure it is correctly fitted.
- Always use the crotch strap in conjunction with the waist belt.

- Ensure the high chair is placed on a flat, level surface.
- Do not use the high chair if any parts are broken, torn, or missing.
- Keep children away from the product during assembly and disassembly.
- Do not use accessories or replacement parts other than those approved by the manufacturer.
- Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc., in the near vicinity of the high chair.
- Be aware of the risk of tilting when your child can push itself up with its feet against a table or any other structure.
- For the toddler kitchen helper mode, ensure the child is supervised and the product is stable before use.

### **3. PARTS LIST**

---

Before assembly, verify that all components are present and undamaged. Refer to the diagram below for visual identification.



*Image: Exploded view of the high chair components with key dimensions.*

- High Chair Seat with integrated harness
- Removable Seat Cover and Supportive Insert
- Tray with Removable Insert
- Front Legs (Beechwood and Plastic sections)
- Rear Legs (Beechwood and Plastic sections)
- Footrest
- Toddler Helper Handlebar (for step stool mode)
- Assembly Hardware (screws, allen wrench)

#### **4. SETUP AND ASSEMBLY**

Follow these steps to assemble your Skip Hop Sit-to-Step High Chair. An Allen wrench is included for assembly.

#### **4.1. High Chair Assembly**

1. Attach the beechwood leg sections to the plastic leg connectors, ensuring they click securely into place.
2. Connect the assembled leg units to the main high chair seat frame using the provided screws and Allen wrench. Ensure all screws are tightened securely.
3. Slide the footrest into the designated slots on the lower leg sections. Adjust to the desired height if multiple positions are available.
4. Place the removable seat cover and supportive infant insert (if needed) into the high chair seat. Thread the harness straps through the appropriate openings.
5. Attach the tray by aligning it with the slots on the armrests and pushing it forward until it clicks into place. The tray has adjustable positions; press the button underneath to slide it.



*Image: Fully assembled high chair in use with an infant.*

## **4.2. Converting to Toddler Kitchen Helper**

To convert the high chair to a toddler kitchen helper:

1. Remove the tray and the high chair seat cover.
2. Detach the high chair seat from the frame by pressing the release buttons on the sides and lifting the seat off.
3. Attach the toddler helper handlebar to the top of the frame where the high chair seat was previously connected. Ensure it clicks securely.
4. The footrest will now serve as the standing platform for the toddler.



*Image: Toddler using the product in kitchen helper mode.*

## 5. OPERATING INSTRUCTIONS

### 5.1. High Chair Mode

- **Securing Your Child:** Always place your child in the seat and fasten the 5-point harness securely. Adjust straps for a snug fit.
- **Tray Adjustment:** The tray can be adjusted forward or backward to fit your child. Press the release button (usually underneath the tray) and slide the tray to the desired position.
- **Recline Positions:** The seat offers three recline positions. Locate the recline adjustment mechanism (typically on the sides or back of the seat) and adjust as needed for feeding or comfort.
- **Height Adjustment:** The high chair height can be adjusted to align with your dining table. Refer to

the leg assembly for specific adjustment points.



**\* 3 angled positions**  
for feeding



**\* flat tray easily pulls**  
**up to the table**



**\* easily folds**  
for storage



**\* dishwasher-safe**  
tray insert

*Image: Visual guide to high chair recline, tray, and folding features.*

## 5.2. Toddler Kitchen Helper Mode

- Ensure the high chair seat is removed and the toddler helper handlebar is securely attached.
- Position the kitchen helper next to a counter or table.
- Supervise your child at all times when using the kitchen helper.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your high chair.

- **Seat Cover and Insert:** The seat cover and supportive insert are machine washable. Follow the care instructions on the fabric label.
- **Tray and Tray Insert:** The removable tray insert is dishwasher-safe. The main tray and other plastic surfaces can be wiped clean with a damp cloth and mild soap.
- **Harness Straps:** The 5-point harness can be removed for thorough cleaning. Hand wash with mild soap and water, then air dry.
- **Frame and Legs:** Wipe down the beechwood and plastic frame components with a damp cloth. Avoid abrasive cleaners.
- **Storage:** The high chair can be folded for compact storage. Ensure it is clean and dry before storing.

## 7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

- **Tray not attaching securely:** Ensure the tray is aligned correctly with the armrest slots and pushed firmly until it clicks. Check for any obstructions.
- **Harness straps are too tight/loose:** Adjust the straps using the buckles to achieve a snug but comfortable fit. Ensure the shoulder straps are at the correct height for your child.
- **High chair feels unstable:** Verify that all leg sections are fully inserted and all screws are tightened. Ensure the chair is on a flat, level surface.
- **Difficulty folding:** Check for any obstructions or misaligned parts. Ensure all release mechanisms are engaged correctly.

For issues not covered here, please contact Skip Hop customer support.

## 8. SPECIFICATIONS

Feature	Detail
Product Dimensions (High Chair)	32"L x 20.25"D x 44"H (81L x 51.4D x 112H cm)
Product Dimensions (Kitchen Helper)	32"L x 20.25"D x 34"H (81L x 51.4D x 86H cm)
Item Model Number	304275
Maximum Weight Recommendation (High Chair)	33 Pounds (15 kg)
Maximum Weight Recommendation (Kitchen Helper)	200 Pounds (91 kg)
Material Type	Beech Wood, Polypropylene, ABS Plastic, PU Foam
Care Instructions	Wipe clean surfaces; Machine washable seat cover and supportive insert; Dishwasher-safe tray insert
Additional Product Features	Converts to kitchen helper and back, Portable
Item Weight	28 Pounds

## 9. WARRANTY AND SUPPORT

For warranty information, product registration, or further assistance, please visit the official Skip Hop website or contact their customer support directly. Keep your purchase receipt for warranty claims.

**Contact Information:**

- **Website:** [www.skiphop.com](http://www.skiphop.com)
- Refer to the product packaging or Skip Hop website for specific customer service contact details in your region.