

Monte Carlo 5ASPR56AGP

Monte Carlo Aspen 56" Outdoor Ceiling Fan Instruction Manual

MODEL: 5ASPR56AGP

1. Introduction

This manual provides essential information for the safe installation, operation, and maintenance of your Monte Carlo Aspen 56-inch Outdoor Ceiling Fan (Model 5ASPR56AGP). Please read all instructions carefully before beginning installation or use to ensure proper function and to prevent injury or damage.

The Monte Carlo Aspen 56" Outdoor Ceiling Fan is designed for outdoor use, featuring 5 dark walnut blades and an aged pewter finish. It includes a remote control for convenient operation of its 6-speed DC motor and integrated light.

2. Safety Information

- **Electrical Safety:** Always disconnect power at the circuit breaker before installation or servicing. Ensure all wiring connections comply with local electrical codes. If you are unsure about wiring, consult a qualified electrician.
- **Mounting:** The fan must be mounted to a structurally sound ceiling joist or outlet box capable of supporting the fan's weight (minimum 35 lbs). Use only the mounting hardware provided.
- **Blade Clearance:** Ensure there is at least 7 feet (2.1 meters) of clearance from the floor to the bottom of the fan blades and at least 30 inches (76 cm) from the blade tips to any walls or obstructions.
- **Outdoor Use:** This fan is rated for outdoor use. Ensure it is installed in a location protected from direct water spray.
- **Remote Control:** Keep the remote control away from water and extreme temperatures.
- **Children and Pets:** Keep children and pets away from the fan during operation and installation.

3. Package Contents

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact customer support.

- Ceiling Fan Motor Assembly

- 5 Dark Walnut Blades
- Downrod (6" / 15.24 cm included)
- Mounting Bracket
- Canopy
- Remote Control with Wall Mount
- Hardware Pack
- Integrated Light Kit

4. Specifications

Key specifications for the Monte Carlo Aspen 56" Outdoor Ceiling Fan:

Feature	Detail
Model Name	Aspen
Model Number	5ASPR56AGP
Fan Size	56 inches
Number of Blades	5
Blade Material	Plastic (Dark Walnut finish)
Finish	Aged Pewter
Motor Type	DC Motor (120 x 25 mm)
Number of Speeds	6
Control Method	Remote Control
Light Type	Integrated Light
Indoor/Outdoor Usage	Outdoor
Overall Height	13.1 inches (33 cm)
Downrod Length	6 inches (15.24 cm)
Airflow (High)	7228 CFM
Wattage	60 watts

Image: Detailed specifications for the Aspen 56" Ceiling Fan.

5. Installation

Installation of the Monte Carlo Aspen 56" Outdoor Ceiling Fan requires careful attention to electrical and structural safety. It is highly recommended that installation be performed by a qualified electrician.

- 1. Prepare the Site:** Ensure the power is OFF at the circuit breaker. Secure the electrical box to a ceiling joist capable of supporting the fan.

2. **Mount the Bracket:** Attach the mounting bracket to the electrical box.
3. **Assemble the Fan:** Connect the downrod to the motor assembly.
4. **Wire the Fan:** Carefully follow the wiring diagrams provided in the full installation manual to connect the fan to your household electrical system.
5. **Attach Blades:** Securely attach the five dark walnut blades to the motor housing.
6. **Install Light Kit:** Connect and install the integrated light kit.
7. **Test Operation:** Restore power and test the fan and light functions using the remote control.

For detailed, step-by-step installation instructions, including wiring diagrams and specific hardware usage, please refer to the official installation manual PDF:

[Download Official Installation Manual \(PDF\)](#)



Image: Monte Carlo Aspen 56" Outdoor Ceiling Fan with key dimensions.

6. Operating Instructions

Your Monte Carlo Aspen ceiling fan is operated using the included remote control.

- **Power On/Off:** Press the power button to turn the fan on or off.
- **Fan Speed:** Use the speed buttons to cycle through the 6 available fan speeds. Higher speeds provide greater airflow.
- **Fan Direction (Reversible):** The fan features a reversible motor for seasonal use. In warm weather, operate the fan in a counter-clockwise direction to create a downdraft that cools the room. In cool weather, operate the fan in a clockwise direction to create an updraft that circulates warm air near the ceiling. Refer to the full manual for specific instructions on changing direction, usually a switch on the motor housing or a button on the remote.
- **Light Control:** Use the light button to turn the integrated light on or off. If dimmable, press and hold the light button to adjust brightness.

7. Maintenance

Regular maintenance helps ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing periodically with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Blade Inspection:** Check the blade screws for tightness at least twice a year. Loose blades can cause wobbling and noise.
- **Electrical Connections:** Periodically inspect all electrical connections for tightness.
- **Motor Lubrication:** The DC motor is permanently lubricated and does not require additional oiling.

8. Troubleshooting

If you experience issues with your Monte Carlo Aspen ceiling fan, consult the following troubleshooting guide:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Ensure all wires are securely connected; Replace remote battery or re-pair remote.
Fan wobbles	Loose blade screws; Improperly balanced blades; Loose mounting bracket.	Tighten all blade screws; Use a blade balancing kit (not included); Ensure mounting bracket is secure.
Fan is noisy (clicking/humming)	Loose screws on motor housing or blades; Improper installation; Internal motor issue.	Check and tighten all visible screws; Ensure proper installation as per manual; If noise persists, contact customer support.
Remote control not working	Dead batteries; Remote not paired with receiver; Obstruction between remote and fan.	Replace batteries; Follow pairing instructions in the full manual; Ensure clear line of sight.
Light does not work	Loose wiring to light kit; Faulty LED driver or light module.	Check light kit wiring connections; Contact customer support for replacement parts if necessary.

If troubleshooting steps do not resolve the issue, please contact Monte Carlo customer support.

9. Warranty and Support

Monte Carlo provides a manufacturer's warranty for its products. Please refer to the warranty card included with your product or visit the official Monte Carlo website for detailed warranty terms and conditions.

For technical assistance, replacement parts, or warranty claims, please contact Monte Carlo customer support through their official website or the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question