

Deerma TJ200

Deerma TJ200 Multi-Function Wet and Dry Vacuum Cleaner User Manual

Model: TJ200

INTRODUCTION

Thank you for choosing the Deerma TJ200 Multi-Function Wet and Dry Vacuum Cleaner. This appliance is designed to provide powerful and versatile cleaning for both wet and dry messes in your home or commercial space. Please read this manual thoroughly before operation to ensure safe and efficient use.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Unplug before connecting hose.
- This product is designed for industrial use and carries a high suction power. A break time of 5 minutes is required after running the machine for 10 minutes to prevent overheating.

PRODUCT OVERVIEW

The Deerma TJ200 is a versatile cleaning solution. Familiarize yourself with its components and features.

Components

- Main Unit (Motor and Dust Bucket)
- Flexible Hose
- Extension Wands (Telescopic Tube)
- Floor Brush (for wet and dry use)
- HEPA Filter
- Sponge Filter (for wet use)
- Power Cord

Key Features


- **Wet/Dry Suction:** Capable of handling both liquid spills and dry debris.
- **Powerful Motor:** 1200W motor with 18,000Pa suction power.
- **Blower Function:** Can be used to blow out dust from hard-to-reach areas.
- **Large Capacity:** 6L dust bucket and 3.5L water absorption capacity.
- **Detachable Design:** Easy to empty and clean the dust bucket.
- **Dust/Water Full Indicator:** Alerts when the bucket needs emptying.
- **Washable Body:** For easy maintenance.
- **Foot Switch:** Convenient power control.



Image: The Deerma TJ200 vacuum cleaner showing its main unit, flexible hose, and floor brush attachment.

Dry Suction Wet Suction Multi-functional Blower

Deerma dry and wet bucket vacuum cleaner can absorb dry and wet mixed garbage, and can dry the floor.

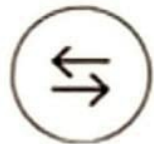

Dry and Wet



Strong Suction



6L Huge Capacity



Dust/Water Full Indicator




Blower/Dryer



Dry Pet Hair



Whole Body Washable

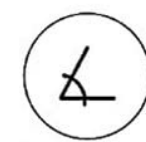

Blow Out Dead Corner Garbage



Ease of Clean



Ease of Operation



Image: An infographic highlighting the key features of the Deerma TJ200, including its wet/dry capabilities, large capacity, and blower function.

SETUP

Follow these steps to assemble your Deerma TJ200 vacuum cleaner.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Connect Extension Wands:** Connect the extension wands (telescopic tube) to the end of the flexible hose. Adjust the length as needed.
4. **Attach Floor Brush:** Securely attach the desired floor brush or nozzle to the end of the extension wands.
5. **Check Filters:** Ensure the HEPA filter and sponge filter are correctly installed inside the dust bucket before operation. The HEPA filter is for dry use, and the sponge filter is for wet use.
6. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Learn how to effectively use your vacuum cleaner for various cleaning tasks.

General Operation

- Press the foot switch on the main unit to turn the vacuum cleaner ON.
- Guide the floor brush over the surface to be cleaned.
- To turn OFF, press the foot switch again.
- **Important:** For every 10 minutes of continuous operation, allow a 5-minute break to prevent motor overheating.



Image: Demonstrating the Deerma TJ200 in use for general floor cleaning.

Wet Suction

For wet spills, ensure the sponge filter is properly installed. Do not use the HEPA filter for wet suction.

- Position the floor brush directly over the liquid spill.

- Slowly move the brush to absorb the liquid.
- Monitor the water level in the dust bucket using the water full indicator. Empty the bucket when it reaches its maximum capacity (3.5L) or when the indicator signals.

Dry Suction

For dry debris, ensure the HEPA filter is properly installed. Do not use the sponge filter for dry suction.

- Move the floor brush over dry dirt, dust, or debris.
- The strong suction will collect particles into the dust bucket.
- Empty the dust bucket when the dust full indicator signals or suction power decreases.



Image: Visual representation of wet and dry suction capabilities, along with other features like the foot switch and blower function.

Blower Function

The vacuum cleaner can also be used as a blower to clear dust from hard-to-reach areas.

- Locate the blower outlet on the main unit (usually opposite the suction inlet).

- Attach the flexible hose to the blower outlet.
- Turn on the vacuum cleaner. Air will be expelled from the hose, allowing you to blow away dust and debris.



Image: The Deerma TJ200 demonstrating its ability to handle pet hair, positioned next to a dog.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying and Cleaning the Dust Bucket

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Detach the dust bucket from the main unit.
3. Open the dust bucket and dispose of collected debris or liquid.
4. Rinse the dust bucket with water if necessary. Allow it to dry completely before reattaching.

Cleaning Filters

- **HEPA Filter (for dry use):** Tap the filter gently to remove accumulated dust. For thorough cleaning, rinse under running water. Ensure it is completely dry before reinstallation to prevent mold growth and damage to the motor.
- **Sponge Filter (for wet use):** Rinse the sponge filter under running water. Squeeze out excess water and allow it to air dry completely before reinstallation.
- Inspect filters regularly and replace them if they show signs of wear or damage.

General Cleaning

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners.
- Check the hose and attachments for blockages and clear them if found.
- Store the vacuum cleaner in a dry place away from direct sunlight.

TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply; Power cord not plugged in; Foot switch not pressed.	Check power outlet; Ensure cord is securely plugged in; Press the foot switch firmly.
Low suction power.	Dust bucket full; Clogged filter; Blockage in hose or attachments.	Empty dust bucket; Clean or replace filters; Check and clear any blockages.
Water leakage during wet suction.	Dust bucket overfilled; Sponge filter not installed correctly.	Empty dust bucket; Ensure sponge filter is properly seated.
Burning smell or smoke.	Motor overheating; Internal fault.	Immediately turn off and unplug. Allow to cool for at least 30 minutes. If problem persists, contact customer support. Adhere to 10-minute run, 5-minute break rule.
Excessive noise.	Blockage; Motor issue (normal for high suction models).	Check for blockages. Note that this model has a powerful motor (1200W, 33,000 rpm) and higher noise output is possible.

SPECIFICATIONS

Feature	Detail
Brand	Deerma
Model Name	TJ200
Special Feature	Wet/Dry

Feature	Detail
Filter Type	Floor (HEPA and Sponge)
Included Components	Vacuum Cleaner (Main Unit, Hose, Extension Wands, Floor Brush)
Cordless?	No
Dust Bucket Capacity	6 litres
Water Absorption Capacity	3.5 litres
Wattage	1200 Watts
Suction Power	18,000 Pa
Motor RPM	33,000 rpm
Recommended Runtime	10 minutes (with 5-minute break)
Hose Length	1.5 Metres
Product Dimensions	30L x 30W x 30H Centimeters
Noise Level	80 dB
Item Weight	5 kg 70 g
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the details below.

- **Manufacturer:** Deerma, Foshan city, Guangdong Provine, China
- **Importer (India):** Harkin Global Solutions Private Limited.
- **Customer Care (India):** 1800 121 922 922
- Please retain your purchase receipt for warranty claims.

© 2024 Deerma. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question