

[Manuals.plus](#) /

› [Hyper Tough](#) /

› Hyper Tough HT19-401-003-15 Cordless 320 PSI Portable Power Cleaner, 20V Max User Manual

Hyper Tough HT19-401-003-15

Hyper Tough HT19-401-003-15 Cordless 320 PSI Portable Power Cleaner, 20V Max

USER MANUAL

Introduction

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Hyper Tough HT19-401-003-15 Cordless 320 PSI Portable Power Cleaner. Please read this manual thoroughly before using the product and keep it for future reference.

Important Safety Information

Always follow basic safety precautions when using this power cleaner to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the appliance.
- Do not point the spray nozzle at people, pets, or electrical devices.
- Wear appropriate personal protective equipment, including eye protection.
- Ensure the battery pack is fully charged before use and removed when not in use or during maintenance.
- Do not operate the power cleaner in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating the power cleaner.

Product Overview

Familiarize yourself with the components of your Hyper Tough Portable Power Cleaner.



Figure 1: Hyper Tough HT19-401-003-15 Cordless 320 PSI Portable Power Cleaner. This image displays the main unit in red and black, featuring a comfortable grip, a detachable battery pack at the base, a long black extension wand, and a multi-spray nozzle at the end of the wand. The battery pack is clear, showing the internal cells.

- **Main Unit:** Ergonomic handle with trigger and motor housing.
- **Battery Pack:** 20V Max rechargeable battery, providing cordless operation.
- **Extension Wand:** Long attachment for extended reach and precise cleaning.
- **Multi-Spray Nozzle:** Adjustable nozzle for various spray patterns.
- **Water Inlet:** Connection point for water supply.

Setup

1. **Charge Battery:** Fully charge the 20V Max battery pack using the provided charger before first use. Ensure the battery is securely inserted into the charging dock.
2. **Attach Extension Wand:** Align the extension wand with the main unit's outlet and push firmly until it clicks into place.
3. **Attach Multi-Spray Nozzle:** Connect the multi-spray nozzle to the end of the extension wand. Twist to secure.
4. **Connect Water Source:**
 - **Garden Hose:** Connect a standard garden hose to the water inlet on the main unit. Ensure a tight connection to prevent leaks.
 - **Bucket/Container:** For portable use, attach the included siphon hose (if applicable) to the water inlet and place the other end into a bucket of clean water.
5. **Insert Battery:** Slide the charged battery pack into the battery slot on the main unit until it locks securely.

Operating Instructions

1. **Prime the Pump:** Before starting, ensure the water source is connected and open. Squeeze the trigger for a few seconds to allow water to flow through the system and expel any air.
2. **Start Cleaning:** Aim the nozzle at the surface to be cleaned. Squeeze the trigger to activate the power cleaner. The

unit delivers up to 320 PSI of pressure and 0.53 GPM (Gallons Per Minute).

- 3. **Adjust Spray Pattern:** Rotate the multi-spray nozzle to select the desired spray pattern (e.g., narrow jet for tough grime, wide fan for general cleaning).
- 4. **Optimal Distance:** Maintain an appropriate distance from the cleaning surface. Too close can damage the surface, while too far reduces cleaning effectiveness.
- 5. **Shut Down:** Release the trigger to stop the water flow. Disconnect the water source and remove the battery pack after use.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your power cleaner.

- **Clean Nozzle:** Periodically check the nozzle for blockages. Use a small pin or the included nozzle cleaning tool to clear any debris.
- **Drain Water:** After each use, disconnect the water supply and run the cleaner briefly to drain any remaining water from the pump and hose to prevent freezing damage in cold weather.
- **Battery Care:** Store the battery pack in a cool, dry place. Do not store it in a discharged state for extended periods. Charge it fully before long-term storage.
- **General Cleaning:** Wipe down the exterior of the unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the power cleaner in a dry, protected area, away from direct sunlight and extreme temperatures.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not start.	Battery not charged or not inserted correctly.	Ensure battery is fully charged and securely inserted.
Low water pressure.	Nozzle clogged; insufficient water supply; air in pump.	Clean nozzle; check water source connection; prime the pump.
Water leaks from connections.	Loose connections; worn O-rings.	Tighten all connections; inspect and replace O-rings if damaged.
Motor runs but no water sprays.	No water supply; clogged inlet filter; air in pump.	Ensure water supply is on; clean inlet filter; prime the pump.

Specifications

Model Number: HT19-401-003-15 (also known as HT19 4011 3 15)

Brand: Hyper Tough

Max Pressure: 320 PSI

Flow Rate: 0.53 GPM (Gallons Per Minute)

Voltage: 20V Max

Product Dimensions: 87.12 x 33.27 x 42.67 cm

Item Weight: 3.36 kg
ASIN: B083ZKBF5F

Warranty and Support

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Hyper Tough website. For technical support or service inquiries, please contact Hyper Tough customer service directly or the retailer from whom the product was purchased.
Please retain your proof of purchase for warranty claims.

© 2024 Hyper Tough. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question