

[Manuals.plus](#) /

› [Hyper Tough](#) /

› Hyper Tough Max Cordless 10-Inches String Trimmer & Sweeper Combo 20 Volts User Manual

Hyper Tough Max Cordless 10-Inches String Trimmer & Sweeper Combo 20 Volts (Model B083ZLFS7L)

Hyper Tough Max Cordless 10-Inches String Trimmer & Sweeper Combo 20 Volts User Manual

Model: B083ZLFS7L

INTRODUCTION

Thank you for choosing the Hyper Tough Max Cordless 10-Inches String Trimmer & Sweeper Combo. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new tools. Please read this manual thoroughly before first use and keep it for future reference.



This image displays the complete Hyper Tough Max Cordless 10-Inches String Trimmer and Sweeper Combo. On the left is the string trimmer, featuring a long shaft, red motor housing, and a guard. On the right is the compact red sweeper with a black nozzle. Below these tools, a black 20V MAX Lithium battery and a battery charger are visible.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electric tools to reduce the risk of fire, electric shock, and personal injury. Read all instructions before operating this product.

- Wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, and sturdy footwear.
- Keep children and bystanders away while operating the tools.
- Do not operate tools in wet conditions or in the rain.
- Ensure the battery is fully charged before use and remove it when not in use or during maintenance.
- Inspect the tools for damage before each use. Do not use if damaged.

- Use only Hyper Tough recommended accessories and replacement parts.

PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- 1 x Hyper Tough 10-Inch String Trimmer
- 1 x Hyper Tough Sweeper
- 1 x 20V MAX Lithium-Ion Battery
- 1 x Battery Charger
- 1 x Operator's Manual (this document)

SETUP AND ASSEMBLY

1. Charging the Battery

The 20V MAX Lithium-Ion battery (included) must be fully charged before first use. Connect the charger to a standard electrical outlet and insert the battery pack into the charger. The indicator light on the charger will show the charging status. Refer to the charger's specific instructions for detailed charging times and indicator meanings.

2. String Trimmer Assembly

1. Attach the guard to the trimmer head using the provided fasteners. Ensure it is securely fastened to prevent debris from being thrown.
2. Adjust the height of the shaft to a comfortable operating position. Secure the adjustment mechanism firmly.
3. Install the auxiliary handle for better control and balance.

3. Sweeper Assembly

Attach the removable tube to the main body of the sweeper. Ensure it clicks into place securely. This tube can be removed for easy storage.

OPERATING INSTRUCTIONS

Using the String Trimmer

- Ensure the battery is fully charged and securely inserted into the trimmer.
- Hold the trimmer firmly with both hands, maintaining a balanced stance.
- To start, press the safety lock-off button (if present) and then squeeze the trigger.
- Move the trimmer in a sweeping motion, keeping the cutting line parallel to the ground.
- The auto single-line feed system will automatically advance the line as needed. Avoid hitting hard objects to prevent line breakage.
- To stop, release the trigger.

Using the Sweeper

- Insert the charged battery into the sweeper.
- Hold the sweeper by the overmold handle.
- To start, squeeze the trigger.

- Direct the airflow towards debris to clear surfaces. The powerful 130 MPH air speed is effective for leaves and light debris.
- To stop, release the trigger.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your tools.

- **Cleaning:** After each use, remove the battery and clean the tools with a damp cloth. Remove any grass clippings or debris from the trimmer head and sweeper nozzle. Do not use harsh chemicals.
- **Line Replacement (Trimmer):** When the cutting line is depleted, replace it with 0.065-inch diameter line. Refer to the trimmer's specific instructions for the correct replacement procedure.
- **Storage:** Store the tools and battery in a cool, dry place, away from direct sunlight and extreme temperatures. Remove the battery from the tools before storage. The sweeper tube can be removed for more compact storage.
- **Battery Care:** Do not store batteries in a discharged state. Charge them periodically if not used for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start	Battery not charged or not inserted correctly.	Ensure battery is fully charged and properly seated.
Trimmer line not advancing	Line tangled or depleted.	Clear any tangles. Replace line if depleted.
Reduced power/performance	Low battery charge. Debris buildup.	Recharge battery. Clean tool thoroughly.

SPECIFICATIONS

String Trimmer

- Rated Voltage: 20V MAX
- No-Load Speed: 8500 RPM
- Line Diameter: 0.065-inch
- Cutting Width: 10 inches
- Weight: 4.3 LBS
- Feed System: Auto Single-Line Feed

Sweeper

- Rated Voltage: 20V MAX
- No-Load Speed: 12500 RPM
- Air Volume: 100 CFM
- Air Speed: 130 MPH

- Weight: 3.6 LBS

General

- Power Source: Battery Powered
- Battery Type: 1 Lithium Ion (included)
- Product Dimensions: 20.3 x 16.4 x 3.2 inches
- UPC: 886098002290

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Hyper Tough customer service. Keep your proof of purchase for warranty claims.

This product is tested and certified to look and work like new if purchased as refurbished. The refurbishing process includes functionality testing, basic cleaning, inspection, and repackaging. The product ships with all relevant accessories, and may arrive in a generic box.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question