

[Manuals.plus](#) /

› [Russell Hobbs](#) /

› Russell Hobbs RST750M3 3-in-1 Sandwich Maker Instruction Manual

Russell Hobbs RST750M3

Russell Hobbs RST750M3 3-in-1 Sandwich Maker Instruction Manual

Model: RST750M3

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Russell Hobbs RST750M3 750 Watt 3-in-1 Sandwich Maker. This appliance is designed for preparing sandwiches, waffles, and grilled items using its interchangeable non-stick plates. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Russell Hobbs RST750M3 3-in-1 Sandwich Maker in its closed position, featuring a silver top panel and black body.

The Russell Hobbs RST750M3 features a 750 Watt heating element and comes with three sets of detachable non-stick coated multi-plates: sandwich toast plates, waffle plates, and grill plates. The unit has a stainless steel top cover and a plastic body.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and

before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- The appliance operates at 220 Volts. Ensure your power supply matches this requirement.

PRODUCT COMPONENTS

Your Russell Hobbs RST750M3 3-in-1 Sandwich Maker includes the main unit and three sets of interchangeable non-stick plates for various cooking functions.



Image: The three types of detachable cooking plates: triangular sandwich plates, square waffle plates, and ribbed grill plates.

- **Main Unit:** Houses the heating elements and controls. Features a stainless steel top cover and a sturdy plastic body.
- **Sandwich Plates:** Designed to seal and toast sandwiches, creating two triangular pockets.
- **Waffle Plates:** Creates classic square-grid waffles.
- **Grill Plates:** Ribbed plates for grilling sandwiches, paninis, or other items.
- **Indicator Lights:** Typically includes power and ready indicator lights.
- **Locking Latch:** Secures the top lid during cooking.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the detachable plates

with warm, soapy water, rinse thoroughly, and dry completely.

3. Plate Installation:

- Open the appliance.
- Align the desired cooking plates (sandwich, waffle, or grill) with the slots on the upper and lower heating elements.
- Gently press down until the plates click securely into place. Ensure both upper and lower plates are correctly installed.



Image: A hand demonstrating the plate release/secure mechanism on the open appliance, with waffle plates installed.

4. **Pre-heating:** Close the lid and plug the appliance into a 220V AC power outlet. The power indicator light will illuminate. Allow the appliance to pre-heat for approximately 3-5 minutes until the ready indicator light illuminates, signaling it has reached the optimal cooking temperature.
5. **Initial Burn-off (Optional but Recommended):** For the first use, it is recommended to allow the appliance to heat up for 5-10 minutes without food. A slight odor or smoke may be present; this is normal and will dissipate. Unplug and allow to cool before proceeding.

OPERATING INSTRUCTIONS

Always ensure the correct plates are installed and the appliance is pre-heated before adding food.

A. Making Sandwiches (using Sandwich Plates)



Image: The sandwich maker open, showing two perfectly toasted sandwiches on the triangular sandwich plates, with fresh tomatoes and sauces in the background.

1. Install the sandwich plates and pre-heat the appliance.
2. Lightly grease the non-stick plates with a small amount of cooking oil or butter, if desired, for extra crispiness and to prevent sticking.
3. Place your prepared sandwiches onto the lower plate. Do not overfill.
4. Close the lid and secure the locking latch.
5. Cook for approximately 3-5 minutes, or until the sandwiches are golden brown and the filling is heated through. Cooking time may vary based on ingredients and desired crispness.
6. Carefully open the lid and remove the sandwiches using a heat-resistant plastic or wooden spatula. Avoid using

metal utensils to protect the non-stick coating.

B. Making Waffles (using Waffle Plates)

Note: No specific image for waffle cooking was provided, but the general unit with waffle plates is shown in the setup section.

1. Install the waffle plates and pre-heat the appliance.
2. Lightly grease the non-stick waffle plates with cooking spray or oil.
3. Pour approximately 1/2 to 3/4 cup of waffle batter onto the center of the lower waffle plate. Do not overfill, as batter will expand.
4. Close the lid and secure the locking latch.
5. Cook for approximately 4-7 minutes, or until the waffles are golden brown and steam stops escaping from the sides.
6. Carefully open the lid and remove the waffles using a heat-resistant plastic or wooden spatula.

C. Grilling (using Grill Plates)



Image: The sandwich maker open, showing two grilled sandwiches on the ribbed grill plates, with fresh tomatoes and sauces in the background.

1. Install the grill plates and pre-heat the appliance.
2. Lightly grease the non-stick grill plates with a small amount of cooking oil, if desired.
3. Place items to be grilled (e.g., sandwiches, paninis, vegetables) onto the lower grill plate.
4. Close the lid and secure the locking latch.
5. Cook for approximately 3-8 minutes, depending on the food item and desired level of grilling.
6. Carefully open the lid and remove the grilled items using a heat-resistant plastic or wooden spatula.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance and ensure optimal performance.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Remove Plates:** Once cool, press the plate release buttons (if applicable) and carefully remove the cooking plates.



Image: The interior of the sandwich maker with the cooking plates removed, revealing the heating elements. This view is relevant for cleaning the base unit.

3. **Clean Plates:** Wash the detachable non-stick plates with warm, soapy water using a soft sponge or cloth. For stubborn food residue, soak the plates in warm water for a few minutes before cleaning. Rinse thoroughly and dry completely before storing or re-installing. *Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.*
4. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. For the heating elements, use a dry cloth or soft brush to remove any crumbs. *Never immerse the main unit, cord, or plug in water or any other liquid.*
5. **Storage:** Store the appliance with the plates installed or stored separately, in a clean, dry place. The cord can be wrapped around the base for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the plug is securely inserted into a working 220V outlet. Check the circuit breaker.
Food sticks to plates.	Plates not greased; non-stick coating worn; food residue.	Lightly grease plates before each use. Ensure plates are clean. If coating is worn, contact customer service.
Food not cooking evenly or taking too long.	Appliance not pre-heated; overfilling; incorrect plate installation.	Always pre-heat until the ready light illuminates. Do not overfill. Ensure plates are securely clicked into place.
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after a few minutes.
Cord length is too short.	Product design limitation.	Position the appliance close to a power outlet. Avoid using extension cords unless absolutely necessary and ensure they are rated for the appliance's wattage.

SPECIFICATIONS

- **Model:** RST750M3
- **Brand:** Russell Hobbs
- **Wattage:** 750 Watts
- **Voltage:** 220 Volts
- **Special Feature:** Non-Stick Coating, 3-in-1 Functionality (Sandwich, Waffle, Grill)
- **Material:** Plastic (Body), Stainless Steel (Top Cover)
- **Colour:** Silver-Black
- **Product Dimensions:** 7D x 26.5W x 26H Centimeters
- **Item Weight:** 2.35 Kilograms
- **Included Components:** 1 Unit 3-in-1 Sandwich Maker, 1 Unit User Manual cum Warranty Card

WARRANTY AND SUPPORT

Your Russell Hobbs RST750M3 3-in-1 Sandwich Maker comes with a manufacturer's warranty.

- **Warranty Period:** 2 Years Manufacturer Warranty.
- **Warranty Type:** Limited Warranty.
- **Serviceability:** Service centers are available PAN India.
- **Manufacturer:** Gryphon Appliances Ltd.
- **Manufacturer Contact Information:** Gryphon Appliances Ltd. B1/A6, Mohan Co-operative Industrial Estate, New Delhi - 110044, India.
- **Customer Service:** For support or warranty claims, please contact the manufacturer at 18001020107.

Please retain your purchase receipt and the user manual cum warranty card for any warranty claims.

© 2026 Russell Hobbs. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question