

KAPBOM KA-8509

KAPBOM KA-8509 Portable Bluetooth Speaker User Manual

Model: KA-8509

1. INTRODUCTION

Thank you for choosing the KAPBOM KA-8509 Portable Bluetooth Speaker. This compact, modern, and durable speaker delivers powerful sound with clear bass, perfect for any setting, whether at home, the beach, by the pool, or during travel. Featuring fast wireless connectivity, a long-lasting rechargeable battery, and splash protection, this speaker combines quality, convenience, and entertainment.

Please read this manual carefully before using the product to ensure proper operation and to maximize your user experience.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from water and liquids, despite its splash protection. Do not submerge it.
- Do not attempt to disassemble or repair the speaker yourself. Contact qualified service personnel.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of children.

3. PRODUCT OVERVIEW AND PACKAGE CONTENTS

Package Contents:

- KAPBOM KA-8509 Portable Bluetooth Speaker
- USB Charging Cable
- User Manual

Speaker Components:



Image: KAPBOM KA-8509 speaker with dimensions (8.5cm height, 7cm width) and port labels (USB, TF Card, DC5V, Radio FM, Bluetooth, 5W RMS, 600mAh rechargeable battery).



Image: Top view of the speaker showing control buttons: Volume Down/Previous Track (-), Power/Mode (circle icon), Volume Up/Next Track (+).



Image: Rear view of the speaker showing the USB charging port, TF (Micro SD) card slot, and possibly an AUX input (not explicitly labeled but common).

1. **Power/Mode Button:** Press and hold to power on/off. Short press to switch modes (Bluetooth, FM Radio, TF Card, USB).
2. **Volume Down / Previous Track:** Short press for previous track. Long press to decrease volume.
3. **Volume Up / Next Track:** Short press for next track. Long press to increase volume.
4. **USB Charging Port:** For charging the speaker.
5. **TF Card Slot:** Insert a Micro SD card for music playback.
6. **Microphone:** For hands-free calling.

4. SETUP

4.1 Charging the Speaker

1. Connect the provided USB charging cable to the speaker's USB charging port.
2. Connect the other end of the USB cable to a USB power adapter (5V) or a computer's USB port.

3. The charging indicator light will illuminate during charging and turn off when fully charged.
4. Charging time is approximately 2 hours for a full charge.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power/Mode button (circle icon) for a few seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power/Mode button for a few seconds until you hear an audible prompt or the indicator light turns off.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, short press the Power/Mode button to cycle through modes until you hear the Bluetooth pairing prompt.
2. Enable Bluetooth on your mobile device (smartphone, tablet, computer).
3. Search for available Bluetooth devices. You should see "KAPBOM KA-8509" or a similar name in the list.
4. Select "KAPBOM KA-8509" to connect. Once paired, you will hear a confirmation sound.
5. The speaker will automatically connect to the last paired device when powered on, if the device's Bluetooth is active and within range.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

- **Bluetooth Mode:** After successful pairing, play music from your connected device. Use the speaker's +/- buttons for track navigation (short press) and volume control (long press).
- **TF Card Mode:** Insert a Micro SD (TF) card with MP3 audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback.
- **USB Mode:** Insert a USB flash drive with MP3 audio files into the USB port. The speaker will automatically switch to USB mode and begin playback.
- **FM Radio Mode:** Short press the Power/Mode button to switch to FM Radio mode. The speaker will automatically scan and save available stations. Use the +/- buttons to switch between saved stations.

5.2 Hands-Free Calling

When connected via Bluetooth to your phone, the speaker supports hands-free calling:

- **Answer Call:** Short press the Power/Mode button to answer an incoming call.
- **End Call:** Short press the Power/Mode button again to end a call.
- **Reject Call:** Press and hold the Power/Mode button to reject an incoming call.

5.3 True Wireless Stereo (TWS) Pairing (If Supported)

If you have two KAPBOM KA-8509 speakers, you can pair them together for a True Wireless Stereo experience:



Image: Multiple KAPBOM KA-8509 speakers in various colors, illustrating the True Wireless Stereo (TWS) pairing capability.

1. Ensure both speakers are powered off.
2. Power on both speakers. They should both be in Bluetooth pairing mode.
3. On one of the speakers (this will be the primary speaker), double-press the Power/Mode button. The speakers will attempt to pair with each other.
4. Once successfully paired, you will hear a confirmation sound, and one speaker will act as the left channel, the other as the right.
5. Now, connect your mobile device to the primary speaker via Bluetooth as described in section 4.3.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, charge the speaker fully at least once every three months, even if not in regular use.

7. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"> • Ensure the speaker is in Bluetooth pairing mode. • Make sure Bluetooth is enabled on your device. • Move the speaker closer to your device. • Forget the device from your phone's Bluetooth list and try pairing again. • Restart both the speaker and your device.
No sound or low volume.	<ul style="list-style-type: none"> • Increase the volume on both the speaker and your connected device. • Ensure the speaker is correctly connected to the audio source. • Check if the audio source is playing.
FM Radio reception is poor.	Move the speaker to an open area, away from obstructions or interference. The charging cable can sometimes act as an antenna; try connecting it.

8. SPECIFICATIONS

Feature	Specification
Model	KA-8509
Output Power	5W
Frequency Response	20Hz-20KHz
THD (Total Harmonic Distortion)	<1%
S/N (Signal-to-Noise Ratio)	>80dB
Speaker Parameter	4 Ohms, 45mm Diameter
Battery	3.7V / 600mAh Rechargeable
Charging Time	Approximately 2 hours
Product Dimensions	80mm (Height) x 73mm (Diameter)
Connectivity	Bluetooth, USB, TF Card, FM Radio
Special Features	Hands-free calling, Outdoor use, Splash protection, TWS (True Wireless Stereo) support

9. WARRANTY AND SUPPORT

KAPBOM products are designed for reliability and performance. For warranty information, please refer to

the warranty card included with your purchase or contact your local retailer. For technical support or inquiries, please reach out to the customer service provided by your point of purchase.

Please retain your proof of purchase for any warranty claims.

© 2023 KAPBOM. All rights reserved.