

CLEANmaxx CLEANmaxx Teppichreiniger PRO

CLEANmaxx Teppichreiniger PRO Hard Floor and Carpet Cleaner Instruction Manual

Model: CLEANmaxx Teppichreiniger PRO

INTRODUCTION

Thank you for choosing the CLEANmaxx Teppichreiniger PRO Hard Floor and Carpet Cleaner. This device is designed for effective cleaning of carpets, hard floors, and upholstered furniture, helping to maintain a clean and fresh living environment. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance. Keep these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the power supply voltage matches the rating on the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance away from children and pets.
- Do not use the appliance on wet hands or bare feet.
- Unplug the appliance from the power outlet before cleaning, maintenance, or when not in use.
- Do not use the appliance to pick up flammable or combustible liquids, or hot ashes.
- Regularly check the power cord and plug for damage. If damaged, contact qualified service personnel.
- Use only recommended cleaning solutions and accessories.
- Ensure all tanks are properly secured before operation.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your CLEANmaxx Teppichreiniger PRO:

- Main Unit with Motor and Suction Nozzle

- Clean Water Tank (1.5 L capacity)
- Dirty Water Tank (1.4 L capacity)
- Vibrating Floor Brush
- Handle with Spray Trigger
- Flexible Hose with Upholstery/Spot Cleaning Tool
- Carpet Shampoo (500 ml, included)



Image: Overview of the CLEANmaxx Teppichreiniger PRO, showing the main unit, flexible hose with attachment, and included carpet shampoo bottle.

SETUP AND ASSEMBLY

Before first use, assemble the cleaner as follows:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or transport.
2. **Handle Assembly:** Insert the handle into the main unit until it clicks securely into place.
3. **Fill Clean Water Tank:** Remove the clean water tank. Fill it with warm water (max 40°C) and the recommended amount of CLEANmaxx carpet shampoo. Do not overfill. Securely close the tank and place it back into the unit.
4. **Power Connection:** Unwind the power cord and plug it into a suitable electrical outlet.



Image: The CLEANmaxx Teppichreiniger PRO shown with its retail packaging, illustrating the product's appearance before assembly.

OPERATING INSTRUCTIONS

Carpet and Hard Floor Cleaning

The CLEANmaxx Teppichreiniger PRO is equipped with a vibrating brush for deep cleaning and direct dirty water absorption for faster drying.

1. **Preparation:** Vacuum the area to be cleaned thoroughly to remove loose dirt and debris.
2. **Power On:** Press the foot pedal on the right side of the unit to turn on the cleaner.
3. **Apply Solution:** Press the spray trigger on the handle while pushing the cleaner forward slowly over the surface. This applies the cleaning solution.
4. **Extract Dirty Water:** Release the spray trigger and pull the cleaner backward over the same area. The powerful suction will extract the dirty water. Repeat this step until the extracted water appears clean.
5. **Drying:** For faster drying, make additional passes over the cleaned area without pressing the spray trigger to extract more moisture.



Image: Close-up of the cleaner head on a carpet, illustrating the process of spraying cleaning solution and simultaneously extracting dirty water.



Image: The cleaner head actively working on a carpet stain, demonstrating its deep cleaning capability with the vibrating brush and suction.



Image: A user operating the CLEANmaxx Teppichreiniger PRO to clean under a sofa, highlighting its maneuverability and compact design for reaching tight spaces.

Upholstery Cleaning (with attachment)

For cleaning upholstered furniture, car interiors, or small carpeted areas, use the flexible hose and upholstery tool.

1. **Attach Hose:** Connect the flexible hose to the designated port on the main unit. Attach the upholstery tool to the end of the hose.
2. **Test Area:** Always test the cleaning solution on an inconspicuous area of the upholstery first to check for colorfastness.
3. **Clean Upholstery:** Turn on the cleaner. Hold the upholstery tool firmly against the fabric. Press the spray trigger to apply solution and move the tool slowly over the area. Release the trigger and pull the tool back to extract the dirty water.
4. **Avoid Oversaturation:** Do not oversaturate upholstery. Make multiple light passes rather than one heavy pass.



Image: A user demonstrating the use of the flexible hose and upholstery tool to clean a white armchair, showcasing the versatility of the cleaner for different surfaces.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and performance of your cleaner.

- **Empty and Rinse Dirty Water Tank:** After each use, empty the dirty water tank and rinse it thoroughly with clean water. Allow it to air dry.
- **Rinse Clean Water Tank:** Rinse the clean water tank if any solution remains or before refilling.
- **Clean Brushes:** Periodically check the vibrating floor brush for tangled hair or debris. Remove any obstructions. The brush can be detached for easier cleaning if necessary.
- **Clean Nozzle:** Wipe the suction nozzle clean to prevent blockages.
- **Store Properly:** Store the appliance in a dry, cool place, away from direct sunlight and out of reach of children.
- **Shampoo Storage:** Store the carpet shampoo in a cool, dry place as per its instructions.



Image: A bottle of EASYmaxx carpet shampoo, indicating the type of cleaning solution recommended for use with the cleaner.

TROUBLESHOOTING

If you encounter issues with your CLEANmaxx Teppichreiniger PRO, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; power switch off.	Check power cord connection; test outlet with another device; ensure power switch is pressed.

Problem	Possible Cause	Solution
No spray or low spray.	Clean water tank empty; tank not seated correctly; spray nozzle clogged.	Refill clean water tank; re-seat tank firmly; clean spray nozzle.
Poor suction.	Dirty water tank full; tank not seated correctly; suction nozzle clogged; hose attachment not sealed.	Empty dirty water tank; re-seat tank firmly; clear any blockages from suction nozzle or hose; ensure hose attachment is securely connected.
Vibrating brush not rotating.	Brush tangled with debris; motor issue.	Clean brush thoroughly, removing any hair or fibers. If problem persists, contact customer support.

TECHNICAL SPECIFICATIONS

- **Model:** CLEANmaxx Teppichreiniger PRO
- **Power:** 800 Watts
- **Clean Water Tank Capacity:** 1.5 Liters
- **Dirty Water Tank Capacity:** 1.4 Liters
- **Material:** Plastic
- **Weight:** Approximately 10.3 kg
- **Dimensions (Package):** 62.2 x 47.79 x 37.9 cm
- **Voltage:** (Refer to product label for specific voltage, typically 220-240V for EU models)

WARRANTY INFORMATION

The CLEANmaxx Teppichreiniger PRO comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims. The warranty typically covers defects in materials and workmanship under normal household use.

CUSTOMER SUPPORT

For further assistance, spare parts, or service inquiries regarding your CLEANmaxx Teppichreiniger PRO, please contact your retailer or the CLEANmaxx customer service department. Contact information can usually be found on the product packaging or the official CLEANmaxx website.

When contacting support, please have the following information ready:

- Model Name: CLEANmaxx Teppichreiniger PRO
- ASIN: B08427HQ29
- Date of Purchase
- A detailed description of the issue

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question