

[Manuals.plus](#) /

› [CLEANmaxx](#) /

› CLEANmaxx 8727 Carpet Cleaner User Manual

CLEANmaxx 8727

CLEANmaxx 8727 Carpet Cleaner User Manual

Model: 8727

1. INTRODUCTION

The CLEANmaxx 8727 Carpet Cleaner is designed to efficiently clean carpets and remove light soiling, restoring freshness to your floor coverings. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your device.



Image: The CLEANmaxx 8727 Carpet Cleaner in its upright position, showcasing its green and transparent design.

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before operating the CLEANmaxx 8727 Carpet Cleaner.

Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power outlet before cleaning, maintenance, or when not in use.
- Do not use the appliance on wet surfaces unless specifically designed for it. This carpet cleaner is intended for use on carpets and textile floor coverings.
- Keep the appliance out of reach of children and pets.
- Use only the recommended cleaning solutions for carpet cleaners. Do not use flammable or combustible liquids.
- Do not immerse the appliance in water or other liquids.
- Inspect the power cord and plug for damage before each use. Do not use if damaged.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Ensure all filters and tanks are correctly installed before operation.

3. PACKAGE CONTENTS

Carefully unpack all items and check against the list below. If any items are missing or damaged, contact customer service immediately.

- CLEANmaxx 8727 Carpet Cleaner Unit
- Handle Assembly
- Fresh Water Tank (pre-installed)
- Dirty Water Tank (pre-installed)
- 500 ml Carpet Shampoo
- User Manual



Image: A bottle of 500 ml carpet shampoo, included with the CLEANmaxx 8727 Carpet Cleaner.

4. PRODUCT COMPONENTS

Familiarize yourself with the different parts of your CLEANmaxx 8727 Carpet Cleaner:





Image: Side view of the CLEANmaxx 8727 Carpet Cleaner with key components labeled: (1) Fresh water tank, (2) Dirty water tank, (3) Cable winding, (4) Suction nozzle and brush.

1. **Fresh Water Tank:** Holds the clean water and cleaning solution mixture.
2. **Dirty Water Tank:** Collects the dirty water extracted from the carpet.
3. **Cable Winding:** For neat storage of the power cable.
4. **Suction Nozzle and Brush:** The primary cleaning head that sprays solution, scrubs, and suctions.
5. **Handle:** For guiding the cleaner during operation.
6. **Wheels:** For easy maneuverability.



Image: A close-up view of the cleaning brush located at the base of the CLEANmaxx 8727 Carpet Cleaner, showing its bristles.

5. SETUP

Follow these steps to prepare your carpet cleaner for use:

1. **Assemble the Handle:** Carefully attach the handle to the main unit. Ensure it clicks securely into place. Refer to the diagrams in the manual if needed.
2. **Prepare the Carpet:** Before using the carpet cleaner, thoroughly vacuum the carpet with a regular vacuum cleaner to remove loose dirt and debris.
3. **Fill the Fresh Water Tank:**
 - Remove the fresh water tank from the unit.
 - Fill the tank with clean water (preferably lukewarm) and the recommended amount of carpet shampoo (e.g., 20 ml per 1.5 liters of water, as per shampoo instructions). Do not overfill.
 - Securely close the tank and place it back into the unit.

4. **Check Dirty Water Tank:** Ensure the dirty water tank is empty and properly seated in the unit before starting.

6. OPERATING INSTRUCTIONS

Once set up, follow these steps to clean your carpets:

1. **Plug In:** Plug the power cord into a suitable electrical outlet (220-240 V / 50 Hz).
2. **Start Cleaning:** Turn on the appliance. Begin by pushing the cleaner forward slowly over the carpet. As you push, the cleaning solution will be dispensed onto the carpet.
3. **Suction Pass:** Pull the cleaner backward over the same area. This action will suction up the dirty water from the carpet, allowing for faster drying.
4. **Overlap Passes:** Work in sections, overlapping each pass slightly to ensure thorough cleaning.
5. **Repeat if Necessary:** For heavily soiled areas, you may need to repeat the cleaning process.
6. **Monitor Tanks:** Keep an eye on the fresh water tank (refill when empty) and the dirty water tank (empty when full).
7. **Finish:** Once cleaning is complete, turn off the appliance and unplug it from the power outlet.



Für Teppiche und
Teppichböden



Leicht entleerbarer
Schmutzwasserbehälter



Bürste zum Reinigen
und Auffrischen



Pedal zum Kippen
des Gerätes

Image: A four-panel image illustrating key features: top-left shows the cleaner in action on a carpet, top-right shows the easily removable dirty water tank, bottom-left displays the cleaning brush, and bottom-right highlights the foot pedal for tilting the device.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your carpet cleaner.

1. **Empty and Clean Dirty Water Tank:** After each use, remove the dirty water tank, empty its contents, and rinse it thoroughly with clean water. Allow it to air dry before re-installing.
2. **Clean Suction Nozzle and Brush:** Remove any hair, fibers, or debris from the suction nozzle and brush. You can use a damp cloth or a small brush for this.
3. **Rinse Fresh Water Tank:** If you have leftover solution, empty and rinse the fresh water tank.

4. **Wipe Down Exterior:** Use a soft, damp cloth to wipe down the exterior of the appliance. Do not use abrasive cleaners or solvents.
5. **Cord Storage:** Wrap the power cord neatly around the cable winding hooks for storage.
6. **Storage:** Store the carpet cleaner in a dry, cool place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your CLEANmaxx 8727 Carpet Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet fault; Damaged cord/plug	Ensure plug is fully inserted; Test outlet with another device; Do not use if cord/plug is damaged, contact service.
Poor suction / Carpet remains too wet	Dirty water tank full; Suction nozzle clogged; Tank not properly seated	Empty dirty water tank; Clean suction nozzle and brush; Ensure tanks are securely in place.
No cleaning solution dispensed	Fresh water tank empty; Tank not properly seated; Nozzle clogged	Refill fresh water tank; Ensure tank is securely in place; Clean nozzle.
Unusual noise	Obstruction in brush/suction path; Motor issue	Check for and remove any obstructions; If noise persists, discontinue use and contact service.

9. SPECIFICATIONS

Technical data for the CLEANmaxx 8727 Carpet Cleaner:

- **Model Number:** 8727
- **Manufacturer:** CleanMaxx
- **Power Supply:** 220-240 V / 50 Hz
- **Wattage:** 500 watts
- **Item Weight:** Approximately 7.86 Kilograms
- **Package Dimensions:** 92.96 x 33.27 x 30.48 cm
- **Cable Length:** Approximately 6 meters
- **Fresh Water Tank Capacity:** 2.5 Liters (approx.)
- **Color:** Green



Image: Icons representing key features: H2O Technology, integrated carpet brush, and 500 watts of power.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts, please contact CLEANmaxx customer service.

Keep your purchase receipt as proof of purchase.

Please refer to the contact information provided with your product packaging or visit the official CLEANmaxx website for the most up-to-date support details.