

[Manuals.plus](#) /

› [CUCKOO](#) /

› CUCKOO CR-0810F Micom Rice Cooker User Manual

## CUCKOO CR-0810F

# CUCKOO CR-0810F Micom Rice Cooker User Manual

Model: CR-0810F

## INTRODUCTION

---

Thank you for purchasing the CUCKOO CR-0810F 8-Cup Micom Rice Cooker. This appliance is designed to make cooking various types of rice and other dishes simple and efficient. Featuring Fuzzy Logic Technology and 9 menu options, it ensures perfectly cooked meals every time. Please read this manual thoroughly before use to ensure safe operation and optimal performance.



Image: Front-angled view of the CUCKOO CR-0810F Micom Rice Cooker, showcasing its sleek white design and control panel.

## IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the appliance.

- Always ensure the power cord is securely plugged into a grounded outlet.
- Do not immerse the main body of the rice cooker in water or other liquids.
- Keep out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- Avoid touching the steam vent during operation, as hot steam can cause burns.
- Always unplug the appliance before cleaning or when not in use.
- Use only the provided accessories and inner pot.
- Do not place the rice cooker on unstable surfaces or near heat sources.

## PACKAGE CONTENTS

---

Upon unpacking, please verify that all items listed below are included:

- CUCKOO CR-0810F Micom Rice Cooker Unit
- Nonstick Inner Pot
- Rice Scooper
- Measuring Cup
- Power Cord
- Instruction Manual (this document)



Image: The CUCKOO CR-0810F rice cooker's accessories, including the inner pot, rice scooper, measuring cup, and power cord.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your CUCKOO CR-0810F rice cooker.



Image: Top-down view of the CUCKOO CR-0810F control panel, showing the digital display and various menu buttons for different cooking functions.

### Key Components:

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Removable nonstick pot for cooking rice and other dishes.
- **Inner Lid:** Detachable for easy cleaning.
- **Steam Vent:** Releases steam during cooking.
- **Control Panel:** Digital display and buttons for menu selection and operation.
- **Water Drainage Dish:** Collects excess water.

### SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the inner pot, rice scooper, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, and heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Insert Inner Pot:** Place the clean, dry inner pot into the main unit.
5. **Connect Power:** Plug the power cord into the rice cooker and then into a grounded electrical outlet.



Image: The CUCKOO CR-0810F rice cooker positioned on a kitchen counter, ready for use, with a measuring cup of rice in the foreground.

## OPERATING INSTRUCTIONS

---

The CUCKOO CR-0810F offers 9 versatile menu options for various cooking needs.

### General Cooking Steps:

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Wash Rice:** Rinse the rice thoroughly until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water according to the water level markings inside the inner pot for your chosen rice type and quantity.
4. **Close Lid:** Close the lid securely.
5. **Select Menu:** Press the "Menu" button repeatedly to cycle through the available cooking options until your desired option is displayed.
6. **Start Cooking:** Press the "Cook" button to begin the cooking cycle. The display will show the remaining cooking time or a progress indicator.
7. **Keep Warm:** Once cooking is complete, the cooker will automatically switch to "Keep Warm" mode.

## Specific Menu Options:

### 1. White Rice (Glutinous Rice)

This setting is optimized for cooking fluffy white rice.



Image: A wooden bowl filled with steaming, perfectly cooked white rice, garnished with fresh herbs.

### 2. Brown Rice

Designed for cooking whole grain brown rice, ensuring proper texture and doneness.



Image: A ceramic bowl containing cooked brown rice, highlighting its distinct texture and color.

### 3. Porridge

Use this setting to prepare creamy and smooth porridge.



Image: A small white bowl filled with smooth, orange-colored baby food or porridge, with a small spoon.

## 4. Cake

This unique setting allows you to bake cakes directly in the rice cooker.



Image: A round, golden-brown cake with a slice cut out, indicating its soft texture, baked in the rice cooker.

## 5. Soup

Prepare various soups with this dedicated setting.

## 6. Multi Cook

A versatile option for cooking a variety of dishes beyond rice, such as stews or steamed vegetables.

## 7. My Mode (Customized Rice Cooking)

This feature allows you to customize your rice cooking with 16 unique rice flavor and texture options. Refer to the detailed instructions in the full manual for specific adjustments.

## 8. Keep Warm

Automatically activates after cooking to maintain the rice at an optimal serving temperature.

## 9. Reheat

Use this function to reheat previously cooked rice or other dishes.

# MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and hygienic operation of your rice cooker.

## 1. Auto-Clean Function:

The convenient auto-clean mode automatically steam cleans your unit, making cleaning effortless.

1. Fill the inner pot with water up to the "Auto Clean" line.
2. Close the lid and select the "Auto Clean" menu option.
3. Press "Cook" to start the cycle.
4. Once complete, unplug the unit and allow it to cool before wiping down the interior.

## 2. Manual Cleaning:

- **Inner Pot:** The nonstick inner pot should be hand washed with warm, soapy water and a soft sponge. Do not use abrasive cleaners or metal scrubbers.
- **Detachable Inner Lid:** Remove the inner lid and wash it with warm, soapy water. Rinse and dry thoroughly before reattaching.
- **Water Drainage Dish:** Remove and empty the drainage dish. Wash with warm, soapy water, rinse, and dry.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals.



Image: Close-up view of the detachable inner lid of the CUCKOO rice cooker, showing its easy-to-clean design.



Image: The nonstick inner pot of the CUCKOO rice cooker, highlighting its durable coating for easy food release and cleaning.

## TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the table below for common problems and solutions.

| Problem                           | Possible Cause                                                | Solution                                                                                        |
|-----------------------------------|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Rice is too hard/undercooked.     | Insufficient water, old rice, or incorrect cooking mode.      | Add more water next time, soak old rice before cooking, or select the appropriate cooking mode. |
| Rice is too soft/mushy.           | Too much water or incorrect cooking mode.                     | Reduce water next time, or select the appropriate cooking mode.                                 |
| "Keep Warm" function not working. | Power issue or unit malfunction.                              | Ensure power cord is securely plugged in. If problem persists, contact customer support.        |
| Steam leaking from lid.           | Lid not properly closed or inner lid not installed correctly. | Ensure the lid is securely latched and the detachable inner lid is correctly positioned.        |

For issues not listed here, please contact CUCKOO customer support.

## SPECIFICATIONS

| Feature            | Detail                                     |
|--------------------|--------------------------------------------|
| Brand              | CUCKOO                                     |
| Model Name         | Multifunctional Micom Rice Cooker & Warmer |
| Model Number       | CR-0810F                                   |
| Capacity           | 8-Cup (Uncooked) / 16-Cup (Cooked)         |
| Product Dimensions | 13"D x 17"W x 11"H                         |

| Feature         | Detail                                           |
|-----------------|--------------------------------------------------|
| Item Weight     | 10.12 pounds (4.6 Kilograms)                     |
| Power Source    | Corded Electric                                  |
| Voltage         | 110V                                             |
| Wattage         | 890 watts                                        |
| Material        | Plastic (Exterior), Nonstick (Inner Pot)         |
| Special Feature | Programmable, Fuzzy Logic Technology, Auto-Clean |



Image: Diagram illustrating the dimensions of the CUCKOO CR-0810F rice cooker, showing its height, width, and depth.

## WARRANTY AND SUPPORT

CUCKOO products are manufactured with high-quality standards. For warranty information, please refer to the warranty card included in your package or visit the official CUCKOO website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact CUCKOO customer service.

**CUCKOO Customer Service:**

**Website:** [www.cuckoocenter.com](#) (Example link, actual link may vary)

**Phone:** Please refer to your product registration or warranty card for the most current contact number.

© 2024 CUCKOO. All rights reserved. Specifications are subject to change without notice.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question