

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VOUNOT](#) /

> [VOUNOT Shopping Cart with Insulated Compartment, 6-Wheel Stair Climbing, 40L Capacity Instruction Manual](#)

VOUNOT 4359174946839

VOUNOT Shopping Cart with Insulated Compartment (40L)

Model: 4359174946839

INTRODUCTION

Thank you for choosing the VOUNOT Shopping Cart. This manual provides essential information for the safe and efficient use of your new cart. Please read it thoroughly before assembly and operation, and retain it for future reference.

PRODUCT FEATURES

- **Reinforced Metal Structure:** Ensures stability and durability for long-term use.
- **6-Wheel Stair Climbing System:** Equipped with 6 durable, odorless PP and EVA wheels designed for easy navigation over stairs and various terrains.
- **3-in-1 Functionality:** Use as a traditional shopping cart with the insulated bag, or remove the bag to utilize the frame as a hand truck for transporting boxes and other items. The bag also converts into a backpack.
- **40L Insulated Storage Bag:** A large capacity bag with insulation to keep groceries fresh. Features 3 additional pockets for small items like phones, umbrellas, or bottles.
- **Foldable Design:** The metal frame folds compactly, and the bag and wheels are removable for convenient storage.
- **Maximum Load Capacity:** Supports up to 30 kg.




AVANTAGES ADVANTAGES

SAC ISOTHERME 40L
40L THERMAL BAG



TISSU RÉSISTANT À L'EAU
WATERPROOF FABRIC

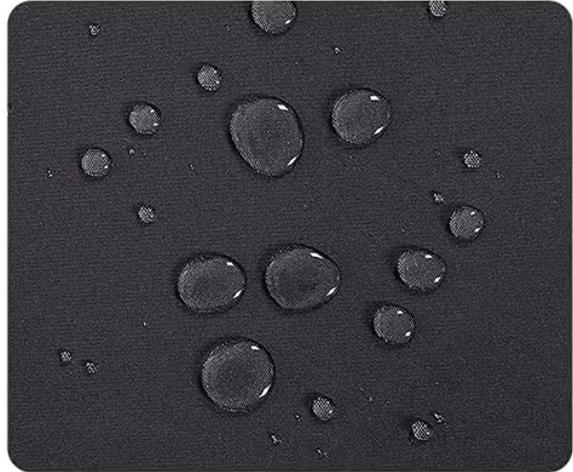

3 ROUES PIVOTANTES SANS ODEUR
3 PIVOT WHEEL WITHOUT SMELL



STRUCTURE PLIANTE RENFORCÉE
REINFORCED FOLDING FRAME

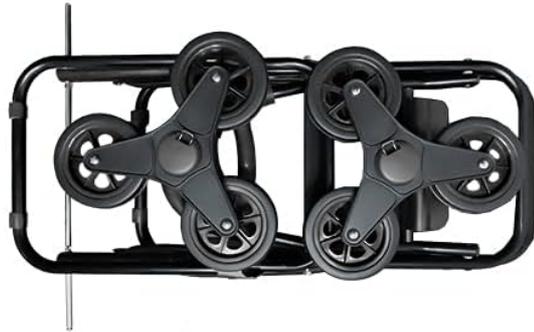


Image: Key features of the VOUNOT Shopping Cart, including the 40L insulated bag, waterproof fabric, 3 pivot wheels, and reinforced folding frame.



RANGEMENT ISOTHERME ET SAC À DOS PRATIQUE THERMAL AND PRACTICAL BACKPACK



Image: The 40L insulated bag, demonstrating its capacity with groceries and its transformation into a practical backpack with side and front pockets.

SETUP INSTRUCTIONS

- 1. Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present: main frame, 6 wheels (pre-assembled in sets of three), and the 40L insulated bag.
- 2. Unfold the Frame:** Gently pull the handle upwards to unfold the metal frame until it locks into its open position. Ensure all joints are securely engaged.
- 3. Attach Wheels (if detached):** The 6-wheel sets are typically pre-attached. If detached, align the wheel axle with the corresponding slot on the cart frame and push firmly until it clicks into place. Repeat for all wheel sets.
- 4. Install the Bag:** Place the 40L insulated bag onto the cart frame. Secure it using any integrated straps or fasteners provided on the bag and frame. Ensure the bag sits firmly and does not shift during use.



Image: Visual guide demonstrating the folding mechanism of the cart frame for storage optimization.

OPERATING INSTRUCTIONS

Using as a Shopping Cart:

1. **Loading:** Place items into the 40L insulated bag. Distribute weight evenly to maintain balance. Do not exceed the maximum weight capacity of 30 kg.
2. **Transporting:** Hold the comfortable handle firmly. Pull the cart behind you. The 6-wheel system is designed to rotate and climb stairs with reduced effort.
3. **Stair Climbing:** When approaching stairs, tilt the cart slightly backward. The rotating wheel sets will engage with each step, allowing the cart to ascend or descend smoothly. Maintain a firm grip and control the speed.

Using as a Hand Truck:

1. **Remove Bag:** Detach the 40L insulated bag from the frame.
2. **Load Items:** Place boxes, crates, or other items onto the bottom support platform of the cart frame. Secure items with bungee cords or straps if necessary (not included).
3. **Transport:** Use the cart as described above, paying attention to the balance and stability of the loaded items.



Image: A person demonstrating how to easily climb stairs with the cart loaded with boxes, highlighting the stair-climbing wheel system.



Image: A person utilizing the cart frame as a hand truck to move stacked boxes, showcasing its versatility.

MAINTENANCE

- **Cleaning the Frame:** Wipe the metal frame with a damp cloth and mild detergent. Dry thoroughly to prevent rust.
- **Cleaning the Bag:** The insulated bag can be wiped clean with a damp cloth. For deeper cleaning, hand wash with mild soap and water, then air dry completely. Do not machine wash or tumble dry.
- **Wheel Inspection:** Periodically check the wheels for any debris, wear, or damage. Remove any tangled hair or threads from the axles. Ensure wheels rotate freely.
- **Storage:** When not in use, fold the cart and store it in a dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Cart is difficult to pull or wheels are stiff:** Check for debris (hair, string) wrapped around the wheel axles. Clean the wheels and ensure they are properly seated.
- **Cart feels unstable:** Ensure the frame is fully unfolded and locked. Distribute the load evenly within the bag or on the platform. Do not exceed the maximum weight capacity.
- **Bag does not stay in place:** Verify that the bag is correctly attached to the frame using all available fasteners or straps.
- **Difficulty climbing stairs:** Ensure the cart is tilted at the correct angle to allow the 6-wheel system to engage with the steps. Avoid overloading the cart.

SPECIFICATIONS

Brand	VOUNOT
Model Number	4359174946839
Color	Black
Product Dimensions (L x W x H)	40.01 x 44.98 x 103.99 cm
Maximum Weight Capacity	30 Kilograms

Material	Polypropylene (PP)
Item Weight	3 Kilograms
Recommended Uses	Shopping Cart
Target Audience	Adults
Handle Material	Metal
Tire Type	Tubular

CHARIOT PLIABLE POUR RANGEMENT GAIN DE PLACE FOLDING CART FOR STORAGE OPTIMIZATION



Image: Detailed dimensions of the VOUNOT Shopping Cart and its removable bag.

SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 30 kg.
- Ensure the cart is fully assembled and all locking mechanisms are engaged before use.
- Always maintain a firm grip on the handle, especially when navigating stairs or uneven surfaces.

- Keep hands and fingers clear of moving parts, especially during folding/unfolding and wheel rotation.
- Do not allow children to play with or ride on the cart.
- Avoid using the cart on excessively steep inclines or declines where control may be lost.

WARRANTY AND SUPPORT

Information regarding specific warranty details and customer support contacts is not provided in the product data. Please refer to your purchase documentation or contact the retailer for warranty claims and support inquiries.