
[Manuals.plus](#) /

› [Braun](#) /

› Braun Silk Epil 9-558 Wet and Dry Epilator User Manual

Braun 9-558

Braun Silk Epil 9-558 Wet and Dry Epilator User Manual

Model: 9-558

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Braun Silk Epil 9-558 Wet and Dry Epilator. Please read all instructions carefully before first use and keep this manual for future reference.



Image: The Braun Silk Epil 9-558 epilator, showcasing its ergonomic design and epilation head.

SAFETY INFORMATION

Always observe the following safety precautions:

- Do not use the appliance on irritated skin, open wounds, moles, or varicose veins.
- Consult a doctor before use if you have a skin condition, diabetes, hemophilia, or immunodeficiency.
- The appliance is suitable for use in the bath or shower. Ensure it is fully charged before wet use.
- Keep the appliance away from children.
- Only use the charger provided with the appliance.

PRODUCT COMPONENTS

Your Braun Silk Epil 9-558 includes the following components:

- Braun Silk Epil 9-558 Epilator
- Epilation Head with MicroGrip Tweezers
- Shaver Head (if included in your specific package)
- Trimmer Cap (if included)
- Skin Contact Cap
- Massage Roller Cap
- Cleaning Brush
- Charger



Image: Included accessories for the Braun Silk Epil 9-558, typically featuring the charger, cleaning brush, and various attachment caps.

SETUP

Charging the Epilator

1. Ensure the epilator is switched off.
2. Connect the charger to the epilator and plug it into an electrical outlet.
3. The charging indicator light will illuminate. A full charge takes approximately 1 hour and provides up to 50 minutes of cordless operation.
4. Do not use the epilator while it is connected to the charger.

Attaching/Detaching Heads

- To attach a head: Align the head with the epilator body and press until it clicks into place.
- To detach a head: Press the release button (if present) and pull the head off.

OPERATING INSTRUCTIONS

Preparation for Epilation

- For best results, ensure hair length is between 0.5 mm and 5 mm.
- Cleanse your skin thoroughly before epilation.
- For wet epilation, use in the shower or bath with foam or gel to reduce discomfort.

Epilation Technique

1. Turn on the epilator. The Smartlight will illuminate to reveal fine hairs.
2. Hold the epilator at a 90-degree angle to your skin.
3. Gently glide the epilator against the direction of hair growth, maintaining light pressure. The SensoSmart™ technology helps guide you to apply the right amount of pressure.
4. Move slowly and steadily. Avoid pressing too hard.
5. For sensitive areas, use the skin contact cap.

BRAUN

Silk·épil 9

**Shave, trim
& epilate**
for long-lasting
smooth skin

Wide head – fast epilation



Shaver & Trimmer




Wet & Dry

**Fast
results**

+3
EXTRAS
+POUCH

Image: A user demonstrating the epilator in use, highlighting the wide head for efficient hair removal.

Wet and Dry Use

The Braun Silk Epil 9-558 is 100% waterproof. You can use it dry or in the bath/shower. Wet epilation can be more comfortable as warm water helps relax the skin.

MAINTENANCE

Cleaning the Epilator Head

1. Ensure the epilator is switched off and disconnected from the charger.
2. Detach the epilation head.
3. Use the provided cleaning brush to remove any trapped hairs from the tweezers.

- 4. For thorough cleaning, rinse the epilation head under running water.
- 5. Allow the head to air dry completely before reattaching or storing.

Storage

Store the epilator and its accessories in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Epilator does not turn on.	Battery is discharged.	Charge the epilator for at least 1 hour.
Poor hair removal performance.	Incorrect technique or hair length.	Ensure hair is 0.5-5mm. Glide against hair growth at a 90-degree angle with light pressure. Clean the epilation head.
Skin irritation or redness.	Sensitive skin, first-time use, or improper aftercare.	Redness is normal initially. Apply a soothing lotion. Shower immediately after epilation. Exfoliate regularly to prevent ingrown hairs. Apply aloe vera gel.
Epilator stops during use.	Battery is low or appliance is overheating.	Recharge the battery. If overheating, allow the appliance to cool down before resuming use.

Tip from users: To prevent rash or folliculitis, shower both before and immediately after epilation. Cleanse your skin thoroughly, and consider applying aloe vera gel. Regular exfoliation with products like salicylic acid can help prevent ingrown hairs and breakouts.

SPECIFICATIONS

- **Model:** Braun Silk Epil 9-558
- **Model Number:** 4210201285328
- **Power Source:** Battery-powered (1 Lithium-ion battery included)
- **Operating Time:** Up to 50 minutes (cordless)
- **Charging Time:** Approximately 1 hour
- **Waterproof:** Yes, 100% Wet & Dry
- **Features:** MicroGrip Technology (40 tweezers), Wide Pivoting Head, SensoSmart™ Pressure Sensor, Smartlight
- **Manufacturer:** Procter & Gamble

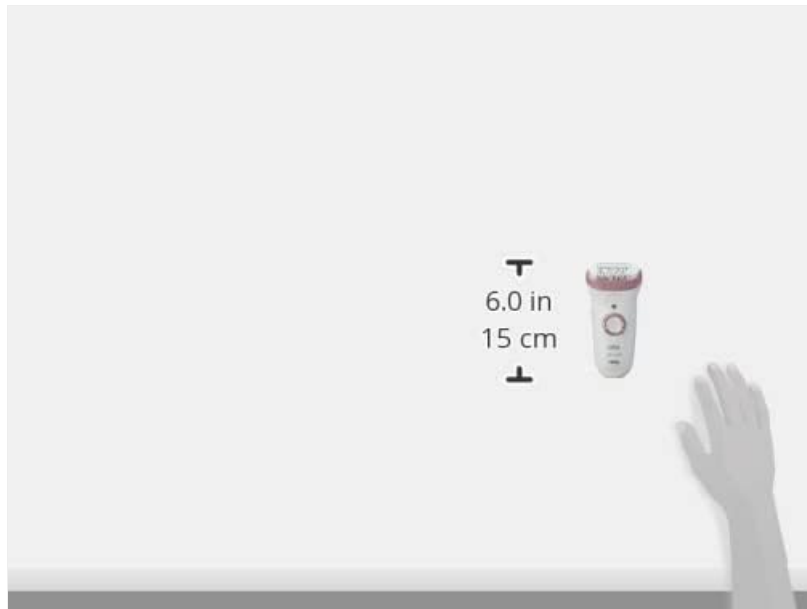


Image: A visual representation of the epilator's size, indicating its compact and ergonomic form factor.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Braun website. Keep your proof of purchase for warranty claims.

Manufacturer: Procter & Gamble

For further assistance, contact Braun customer service through their official channels.

