

[Manuals.plus](#) /

› [Moen](#) /

› Moen Sinema S5235 Chrome Spring Pulldown Kitchen Faucet Instruction Manual

Moen S5235

Moen Sinema S5235 Chrome Spring Pulldown Kitchen Faucet Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Moen Sinema S5235 Chrome Spring Pulldown Kitchen Faucet. Please read these instructions carefully before beginning installation or use to ensure proper function and longevity of your product. Keep this manual for future reference.





Image: Moen Sinema S5235 Chrome Spring Pulldown Kitchen Faucet, showcasing its high-arc design and chrome finish.

PRODUCT FEATURES

- **Power Boost Technology:** Delivers increased water pressure for faster cleaning and filling tasks.
- **Chrome Finish:** A highly reflective, mirror-like appearance that complements various kitchen aesthetics.
- **High Arc Spout:** Provides ample clearance for filling and cleaning large pots and containers.
- **Pullout Wand:** Offers extended reach and maneuverability for comprehensive sink cleaning and rinsing.
- **Water Safety Certification:** Complies with Federal Safe Drinking Water Act and NSF 61 standards, ensuring safe drinking water.
- **Duralock Quick Connect System:** Designed for straightforward and tool-free installation.
- **Optional Secondary Lever Handle:** Allows for customization of the faucet's appearance.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Moen Sinema S5235 Kitchen Faucet
- Faucet Handle
- Flexible Supply Lines (3/8" compression fittings)
- Instruction Manual (this document)
- Optional Secondary Lever Handle

SETUP AND INSTALLATION

The Moen Sinema S5235 faucet is designed for a single-hole, deck-mount installation. The Duralock Quick Connect System simplifies the process.

Pre-Installation Steps:

1. Turn off the main water supply to your kitchen.
2. Clear the area under the sink for access.
3. Ensure your sink deck has a single hole with a maximum thickness of 2.50 inches.

Installation Procedure:

Follow the detailed diagrams and instructions provided in the included paper manual for specific steps. Key aspects include:

- **Mounting:** Secure the faucet to the sink deck using the provided hardware.
- **Duralock Quick Connect:** This system allows for easy connection of the water supply lines to the faucet without the need for specialized tools. Simply push the connectors firmly until they click into place.

MOEN®

Duralock Quick Connect

Equipped with the Duralock quick connect system for easy installation, without the need for tools.

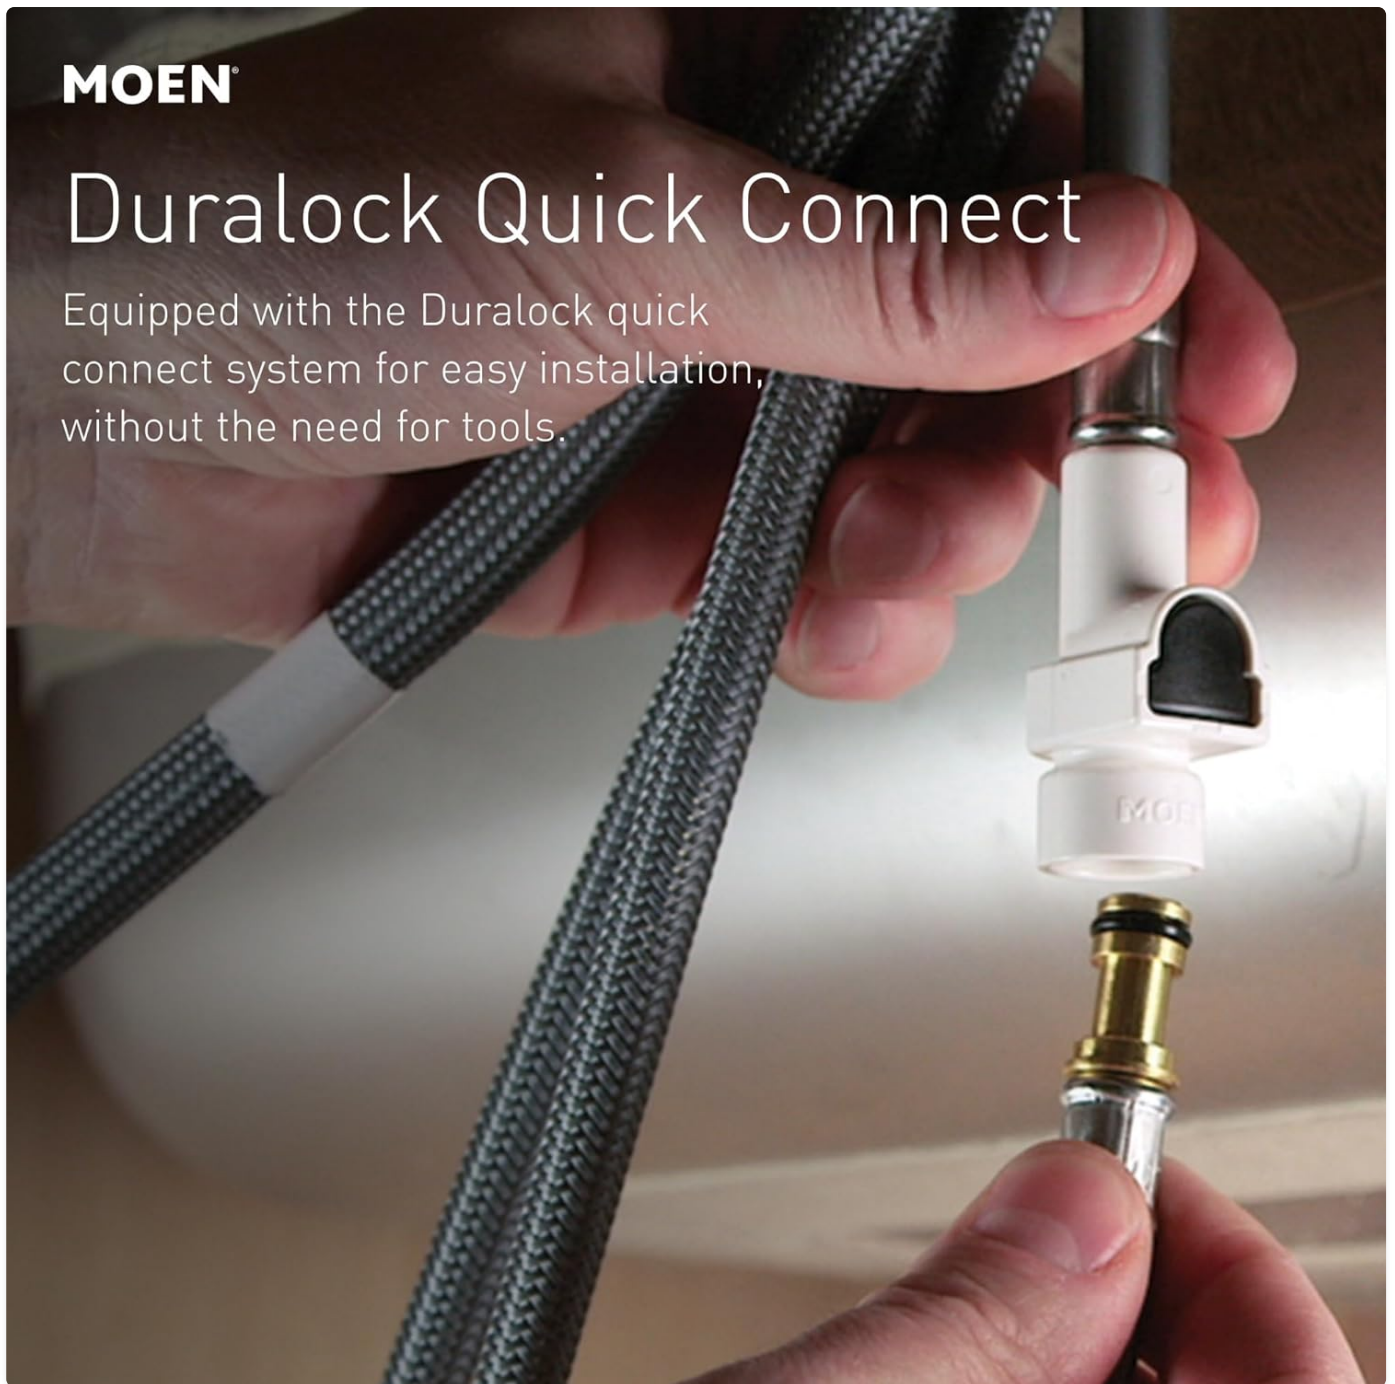


Image: Close-up of the Moen Duralock Quick Connect system, showing how supply lines attach easily.

- **Supply Line Connection:** Connect the flexible supply lines (3/8" compression fittings) to your hot and cold water stops.
- **Handle Installation:** Attach the faucet handle. An optional secondary handle is included for aesthetic customization.

Spout Reach
10.00"

Height
23.5"



Maximum Deck Thickness - 2.50"

Secondary handle
option available

Connection Size - 3/8"

1 Hole Installation

Image: Diagram illustrating the faucet's dimensions, including a spout height of 23.5 inches and a spout reach of 10 inches.

OPERATING INSTRUCTIONS

Water Flow and Temperature:

The faucet features a single lever handle, typically located on the right side. Move the handle to control water flow and temperature:

- **On/Off:** Lift the handle to turn on the water, push down to turn off.
- **Temperature Control:** Move the handle left for hot water, right for cold water.

Pulldown Sprayer and Power Boost:

The integrated pulldown sprayer offers enhanced functionality:

- **Extended Reach:** Pull the spray wand from the spout for increased reach and flexibility during use.



Extended Reach

Retractable pulldown hose creates smooth operation, easy movement and maximizes reachability in and around the sink in daily use.

Image: A woman demonstrating the extended reach of the pulldown sprayer, effectively cleaning around the sink area.

- **Power Boost:** Press the Power Boost button on the spray wand to temporarily increase water flow for heavy-duty cleaning or faster filling of containers.
- **Pre-Rinse Function:** The design facilitates pre-rinsing tasks with its powerful spray and flexible hose.

MAINTENANCE

Regular cleaning and maintenance will help preserve the finish and functionality of your Moen faucet.

Cleaning the Finish:

- Use a soft, damp cloth and mild soap to clean the chrome finish.

- Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- Rinse thoroughly and dry with a soft cloth to prevent water spots.

Aerator Maintenance:

If water flow decreases, the aerator may be clogged. Unscrew the aerator from the end of the spray wand, clean any debris, and reattach.

TROUBLESHOOTING

If you encounter issues with your faucet, refer to the following common solutions:

- **Low Water Flow:** Check if the main water supply is fully open. Inspect the aerator for clogs and clean if necessary. Ensure supply lines are not kinked.
- **Leaks:** Verify all connections, especially the Duralock quick connect, are secure. If leaks persist, contact Moen customer support.
- **Temperature Issues:** Ensure hot and cold supply lines are correctly connected. Check the water heater settings.

For more complex issues or if troubleshooting steps do not resolve the problem, please contact Moen customer support.

SPECIFICATIONS

Attribute	Specification
Brand	Moen
Model Name	Sinema
Model Number	S5235
Finish Type	Chrome
Material	Metal
Number of Handles	1
Mounting Type	Deck Mount
Installation Type	Single Hole
Maximum Flow Rate	1.5 Gallons Per Minute
Spout Height	23.5 Inches
Spout Reach	10 Inches
Item Weight	3.19 Pounds
Product Dimensions	11.31 x 4.19 x 23.5 inches

UPC

026508316702

WARRANTY AND SUPPORT

Warranty Information:

This Moen faucet is backed by Moen's Limited Lifetime Warranty. This warranty covers defects in material and manufacturing for the original consumer purchaser. For full details regarding warranty coverage and limitations, please refer to the official Moen warranty documentation or visit the Moen website.

Customer Support:

For technical assistance, replacement parts, or warranty claims, please contact Moen customer service. You can find contact information and additional resources on the official Moen website: www.moen.com.

© 2023 Moen Incorporated. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0842PYFMY>

More documents and user manuals: <https://manuals.plus/>