

## Hunter 59609

# Hunter Trimaran Ceiling Fan User Manual

Model: 59609

## PRODUCT OVERVIEW

The Hunter Trimaran 52-inch Ceiling Fan (Model 59609) in Matte Black Finish is designed for both indoor and outdoor spaces, offering efficient air circulation and modern aesthetics. This manual provides essential information for the safe installation, operation, and maintenance of your ceiling fan.



Image: The Hunter Trimaran 52-inch Ceiling Fan, showcasing its sleek matte black finish and three blades.

### Key Features:

- **Reversible Motor:** Allows for seasonal use, providing a downdraft in summer to cool and an updraft in winter to circulate warm air.
- **WeatherMax Finish:** Ultra-durable and corrosion-resistant, making it suitable for all outdoor spaces, including those exposed to rain and salt air.
- **Installer's Choice Mounting:** Offers three installation options: standard, low, or angled mounting, providing flexibility for various ceiling types.
- **Wall Control:** Includes a dedicated wall control for convenient adjustment of fan speed and lighting (if applicable).
- **Durable Blades:** Features three matte black blades designed for optimal airflow and longevity.



Image: Diagram highlighting key features of the Hunter Trimaran fan, including height adjustability, corrosion resistance, and ultra-powerful airflow.

*Hunter*

**52**  
INCHES

# TRIMARAN

59609

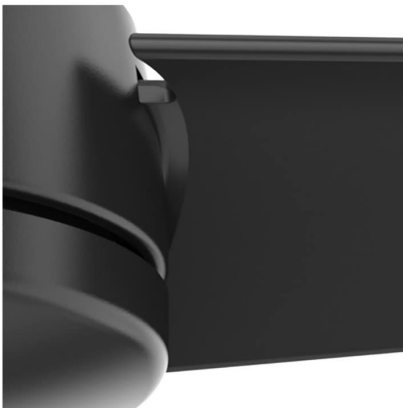 


Image: Icons illustrating additional features: droop-free blades, included wall control, no integrated light, flexible mounting options, and wobble-free operation.

## SAFETY INFORMATION

Before beginning installation, read all instructions carefully. Improper installation can lead to electric shock, fire, or personal injury. Always consult a qualified electrician if you are unsure about any part of the installation process.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes.
- The mounting structure must be capable of supporting the fan's weight (approximately 18.7 lbs / 8.5 kg).
- Do not bend the blade brackets when installing the blades, balancing the blades, or cleaning the fan.
- Keep hands, feet, and other objects clear of the rotating fan blades.

## COMPONENTS LIST

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact Hunter Fan Company customer service.



Image: Visual representation of the items included with the fan: one wall control unit, three fan blades, and two downrod options (4-inch and 2-inch).

**Included Components**

Component	Quantity	Description
Fan Motor Assembly	1	Main body of the ceiling fan.
Fan Blades	3	Matte black blades for air movement.
Wall Control	1	For adjusting fan speed.
Downrods	2	One 4-inch and one 2-inch downrod for mounting.
Hardware Pack	1	Screws, washers, and other small parts for assembly.

## SETUP AND INSTALLATION

This section provides a general overview of the installation process. For detailed, step-by-step instructions, please refer to the dedicated installation manual that came with your fan.

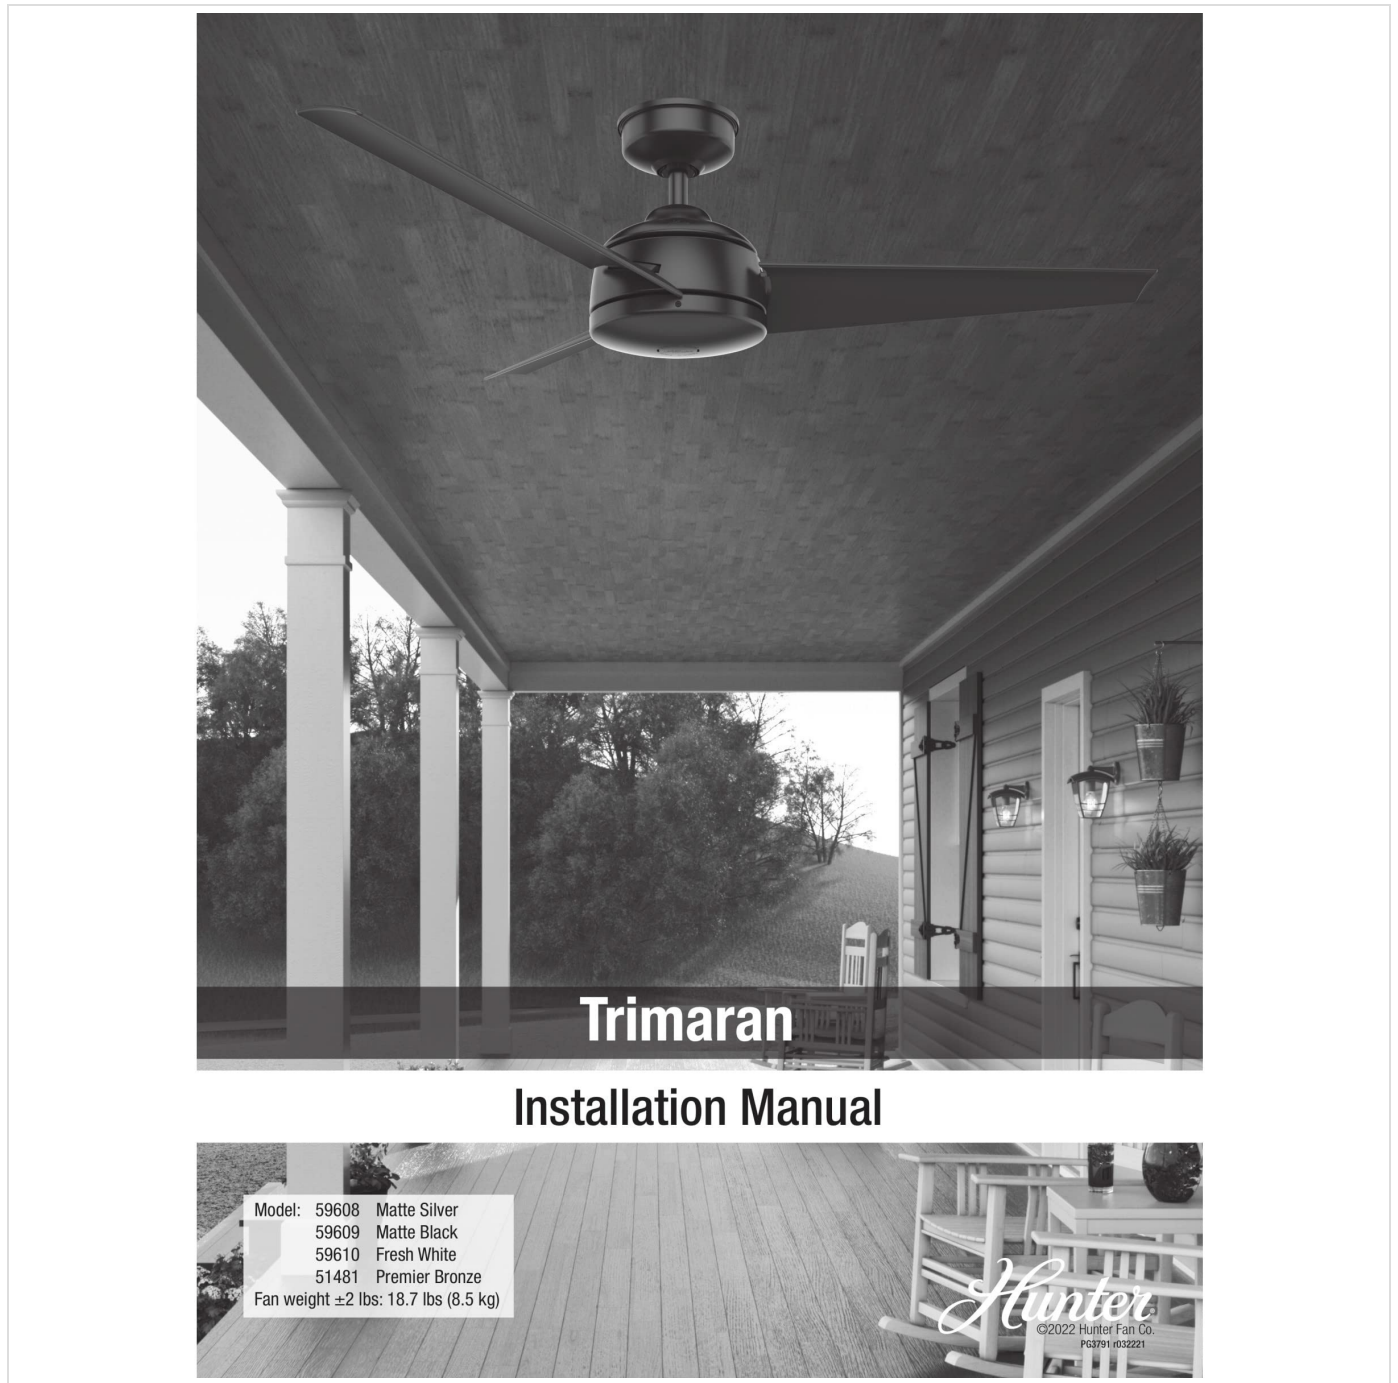


Image: Cover of the Hunter Trimaran Installation Manual, indicating detailed setup instructions are available separately.

### Mounting Options:

The Hunter Trimaran fan offers flexible mounting to suit various ceiling configurations:

- **Standard Mounting:** Uses the included 4-inch downrod for typical ceiling heights.
- **Low Profile Mounting:** Uses the included 2-inch downrod for lower ceiling heights.
- **Angled Mounting:** Requires a separate angled mounting kit (not included) for sloped ceilings.

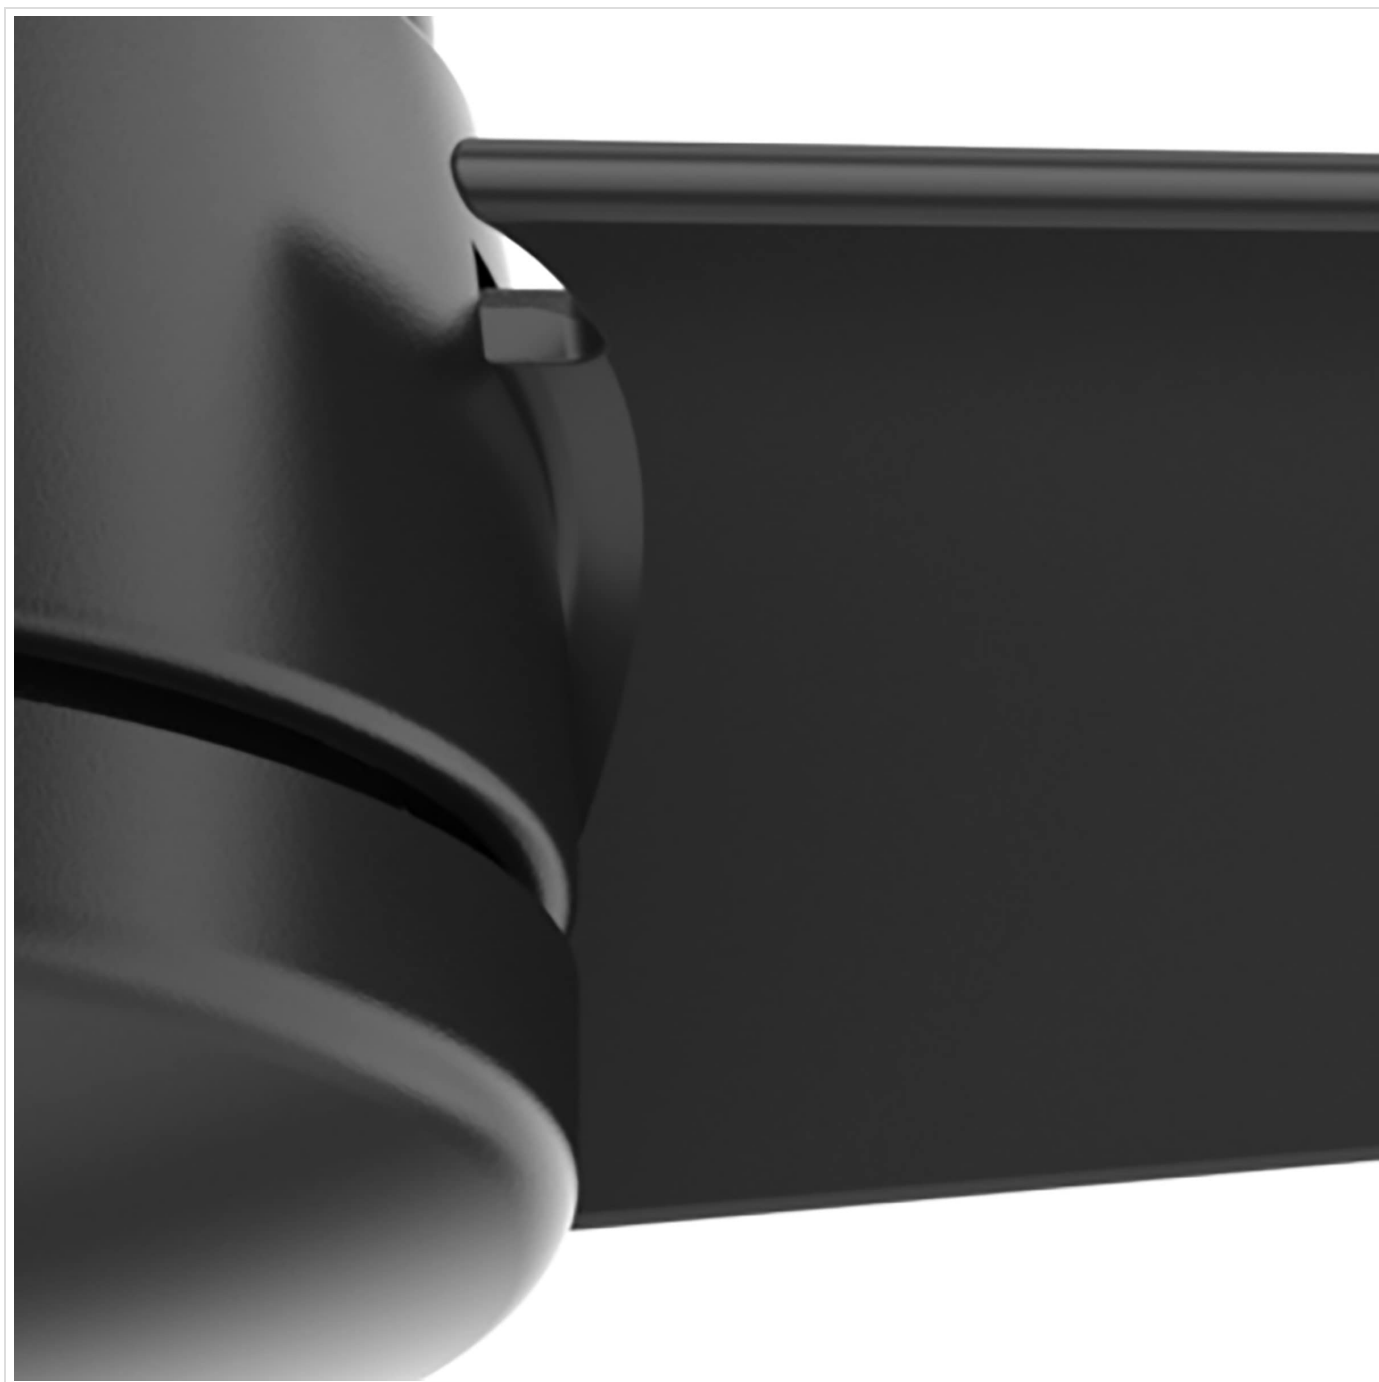


Image: Diagram illustrating fan dimensions (A and B) for low profile, standard, and angled mounting configurations, showing how the overall height changes with different downrods.

### **Wiring and Wall Control Installation:**

Connect the fan's wiring to your household electrical system according to the provided wiring diagrams in the installation manual. The included wall control unit should be installed in place of a standard wall switch. Ensure all connections are secure and insulated.





Image: A hand demonstrating the use of the included wall control to change the fan speed.

## OPERATING INSTRUCTIONS

---

### Using the Wall Control:

The included wall control allows you to easily adjust the fan's speed. Rotate the dial to increase or decrease the fan's rotation speed. If your fan model includes a light kit (this model does not), the wall control would also manage light functions.

### Reversible Motor Function:

The fan features a reversible motor for year-round comfort. A switch on the fan's motor housing controls the direction of blade rotation. To change the direction:

1. Ensure the fan is completely off and the blades have stopped rotating.
2. Locate the reverse switch on the motor housing (often a small slide switch).



3. Slide the switch to the opposite position.
4. Turn the fan back on.

For summer operation, the blades should rotate counter-clockwise (downdraft) to create a cooling breeze. For winter operation, the blades should rotate clockwise (updraft) to circulate warm air trapped near the ceiling.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your Hunter Trimaran ceiling fan.

### Cleaning:

- Always turn off the power at the circuit breaker before cleaning.
- Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents, as they may damage the finish.
- For outdoor installations, periodically wipe down the fan to remove dirt, dust, and salt residue to maintain the WeatherMax finish.

### Blade Care:

The fan blades are designed to be droop-free and durable. Avoid bending the blades or applying excessive force during cleaning or handling.



Image: A detailed view of the fan's motor housing and how the blades attach, showing the robust construction.

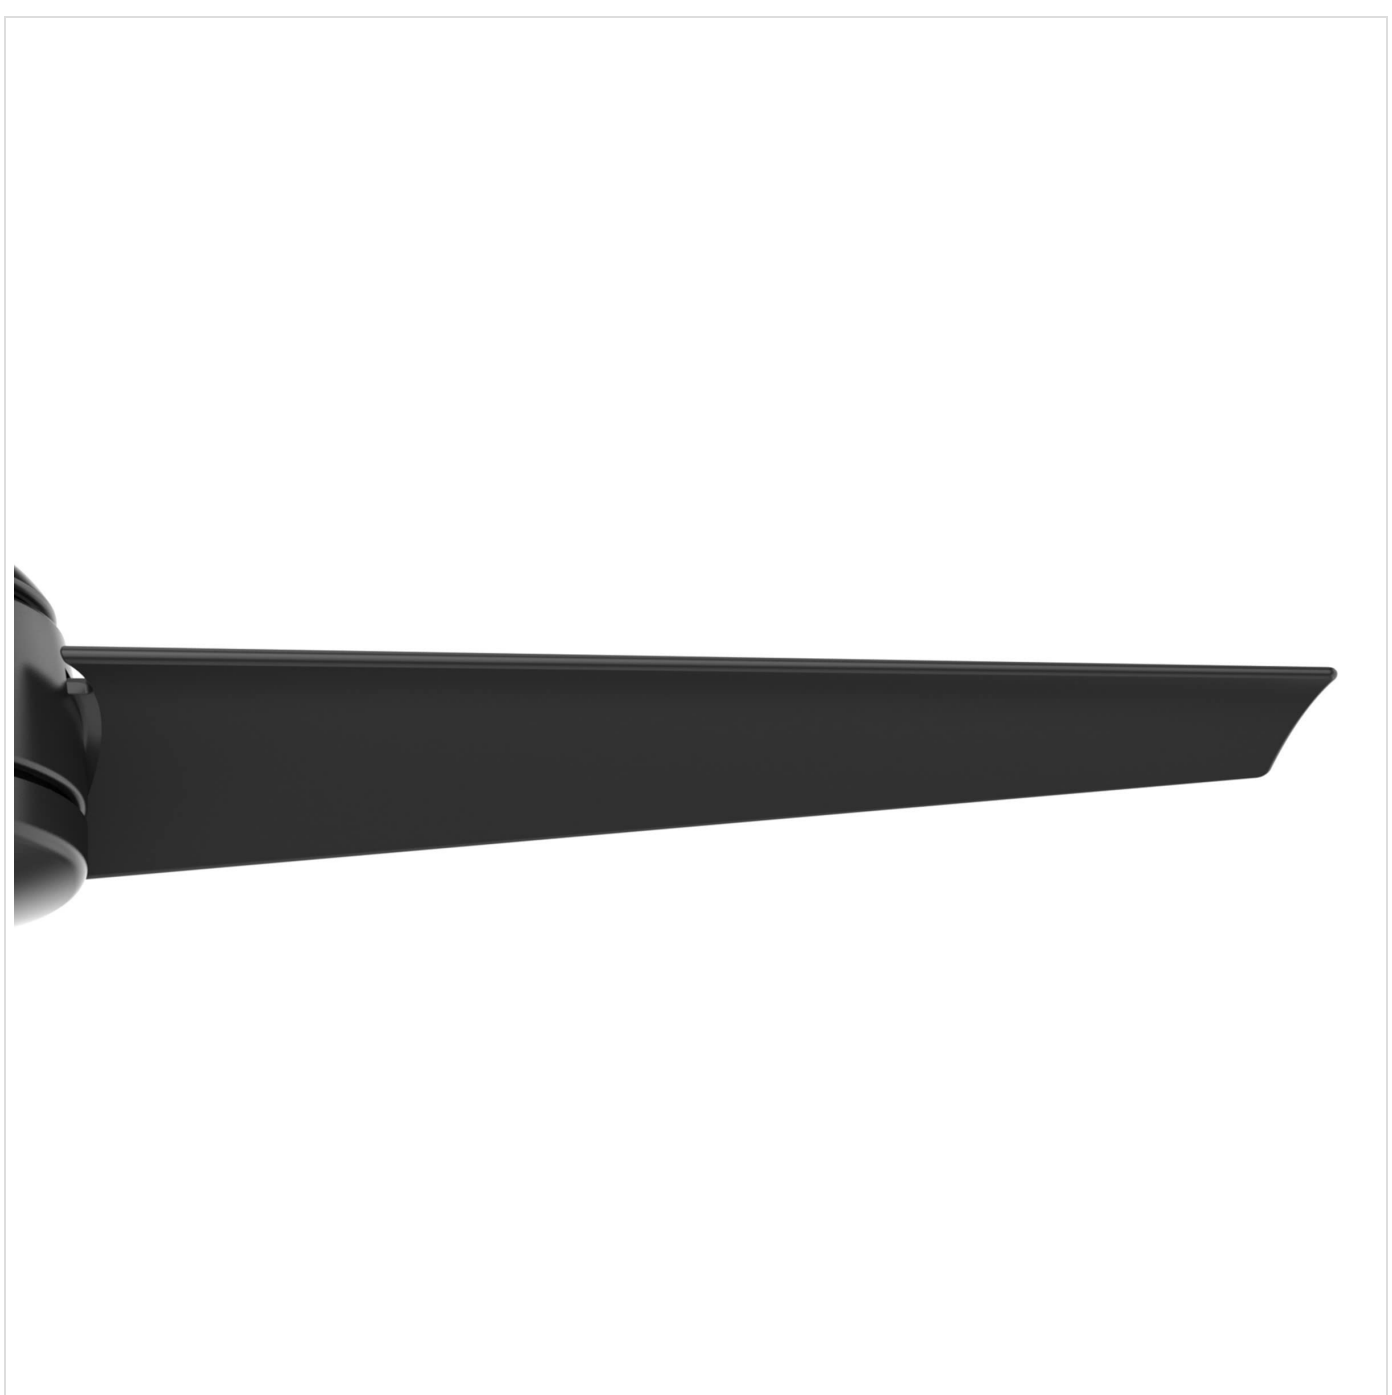 


Image: A close-up of one of the matte black fan blades, highlighting its design and finish.

## TROUBLESHOOTING

If your Hunter Trimaran ceiling fan is not operating correctly, consult the following common issues and solutions. For more complex problems, contact customer support.

### Common Troubleshooting Guide

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Blown fuse/tripped circuit breaker.	Check circuit breaker and wall switch; Ensure all wiring connections are secure; Replace fuse or reset breaker.

Problem	Possible Cause	Solution
Fan wobbles excessively	Loose blade screws; Unbalanced blades; Improper mounting.	Tighten all blade screws; Use a balancing kit (not included) if necessary; Recheck mounting bracket and downrod connections.
Noisy operation	Loose screws; Motor housing rubbing; Bearings need lubrication.	Check and tighten all screws; Ensure no parts are rubbing; Contact customer support if motor noise persists.

## SPECIFICATIONS

---

### Hunter Trimaran Ceiling Fan (Model 59609)

Attribute	Detail
Brand	Hunter
Model Number	59609
Fan Design	Ceiling Fan
Color/Finish	Matte Black Finish
Blade Span	52 inches
Number of Blades	3
Power Source	AC
Wattage	54 watts
Special Features	Reversible motor, Corrosion-resistant WeatherMax finish, Installer's Choice three-position mounting system, Wall control, Droop-free blades
Recommended Uses	Outdoor use, Cooling, Air Circulation, Ventilating
Approximate Fan Weight	18.7 lbs (8.5 kg)



Image: Logos for Hunter's WeatherMax (corrosion resistance) and SureSpeed (airflow efficiency) technologies.

## WARRANTY AND SUPPORT


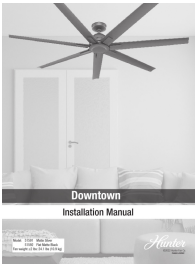 

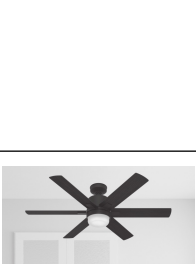 


---

Hunter Fan Company products are manufactured to the highest quality standards. For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Hunter Fan Company website.

For technical support, replacement parts, or any other inquiries, please contact Hunter Fan Company customer service. Have your model number (59609) and purchase date ready when contacting support.

**Hunter Fan Company Official Website:** [www.hunterfan.com](http://www.hunterfan.com)

## Related Documents - 59609

 The image shows the cover of the Hunter Anisten Ceiling Fan Installation Manual. It features a black ceiling fan with five blades and a central light fixture, installed in a room with a white door and a light-colored wall. The text 'Anisten Installation Manual' is visible at the bottom of the cover.	<p><a href="#">Hunter Anisten Ceiling Fan Installation Manual</a></p> <p>Comprehensive installation manual for the Hunter Anisten ceiling fan (Models 52835, 52836), including safety warnings, parts list, step-by-step installation instructions, wiring diagrams, troubleshooting tips, and warranty information.</p>
 The image shows the cover of the Hunter Downtown Ceiling Fan Installation Manual. It features a black ceiling fan with five blades and a central light fixture, installed in a room with a white door and a light-colored wall. The text 'Downtown Installation Manual' is visible at the bottom of the cover.	<p><a href="#">Hunter Downtown Ceiling Fan Installation Manual</a></p> <p>Comprehensive installation manual for the Hunter Downtown 72-inch ceiling fan, covering setup, wiring, and troubleshooting for models 51591 and 51592.</p>
 The image shows the cover of the Hunter Acela Ceiling Fan Installation Manual. It features a black ceiling fan with five blades and a central light fixture, installed in a room with a white door and a light-colored wall. The text 'Acela Installation Manual' is visible at the bottom of the cover.	<p><a href="#">Hunter Acela Ceiling Fan Installation Manual</a></p> <p>Comprehensive installation manual for the Hunter Acela ceiling fan, including safety warnings, tools needed, parts list, step-by-step assembly instructions, and troubleshooting tips.</p>
 The image shows the cover of the Hunter Radeon Ceiling Fan Installation Manual. It features a black ceiling fan with five blades and a central light fixture, installed in a room with a white door and a light-colored wall. The text 'Radeon Installation Manual' is visible at the bottom of the cover.	<p><a href="#">Hunter Radeon Ceiling Fan Installation Manual - Models 50952, 50980</a></p> <p>Comprehensive installation manual for the Hunter Radeon ceiling fan (models 50952 Matte White, 50980 Matte Black). Includes step-by-step instructions, safety warnings, troubleshooting, and warranty information.</p>
 The image shows the cover of the Hunter Darlington 50837 Ceiling Fan Installation Manual. It features a black ceiling fan with five blades and a central light fixture, installed in a room with a white door and a light-colored wall. The text 'Darlington Installation Manual' is visible at the bottom of the cover.	<p><a href="#">Hunter Darlington 50837 Ceiling Fan Installation Manual</a></p> <p>Comprehensive installation manual for the Hunter Darlington 50837 ceiling fan. Includes safety warnings, tools required, parts list, step-by-step installation guides, wiring instructions, troubleshooting, and warranty information.</p>
 The image shows the cover of the Hunter 51698 Sencillo Ceiling Fan Installation Manual. It features a black ceiling fan with five blades and a central light fixture, installed in a room with a white door and a light-colored wall. The text 'Sencillo Installation Manual' is visible at the bottom of the cover.	<p><a href="#">Hunter 51698 Sencillo Ceiling Fan Installation Manual</a></p> <p>Comprehensive installation guide for the Hunter 51698 Sencillo ceiling fan, covering safety, parts, wiring, assembly, and troubleshooting. Includes models 51698 Noble Bronze and 51699 Matte Silver.</p>

