

[Manuals.plus](#) /

> [ONN](#) /

> ONN 100002434 2-in-1 13.3" FHD Touchscreen i3-8145U 2.1GHz 4GB RAM 128GB SSD Win 10 S Grey User Manual

ONN 100002434

ONN 100002434 2-in-1 13.3" FHD Touchscreen Laptop User Manual

Model: 100002434 | Brand: ONN

INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your ONN 100002434 2-in-1 13.3" FHD Touchscreen Laptop. Designed for mobile computing, this device features a Full High Definition 1080p touchscreen display, an Intel processor, 4GB RAM, and a 128GB SSD, running on Windows 10 S. Its convertible design allows seamless transition between laptop and tablet modes.

Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your device.

PACKAGE CONTENTS

Upon opening the package, verify that all components are present:

- ONN 100002434 2-in-1 Laptop
- Power Adapter
- Documentation (this user manual)



Image: The ONN 2-in-1 laptop in its closed position, showing the top surface with the "onn." logo, alongside the included power adapter in its packaging.

SETUP

1. Initial Power-On and Charging

1. Unpack the laptop and power adapter from the box.
2. Connect the power adapter to the charging port on the laptop and then plug it into a power outlet.
3. Press the power button, typically located on the side or keyboard area, to turn on the laptop.
4. Allow the battery to fully charge before initial use, though you can begin setup while charging.

2. Windows 10 S Setup

Upon first boot, you will be guided through the Windows 10 S setup process. Follow the on-screen instructions to:

- Select your region and keyboard layout.
- Connect to a Wi-Fi network.
- Sign in with or create a Microsoft account.
- Set up a PIN or password for security.
- Adjust privacy settings.



Image: The ONN 2-in-1 laptop in its open, traditional laptop configuration, displaying the Windows 10 desktop on its screen.

OPERATING INSTRUCTIONS

Power Management

- **Power On:** Press the power button until the screen illuminates.

- **Sleep Mode:** Briefly press the power button or close the lid.
- **Shut Down:** Click the Start button, then Power, then Shut down.
- **Restart:** Click the Start button, then Power, then Restart.

Using 2-in-1 Modes

The ONN 100002434 can be used in multiple configurations:

- **Laptop Mode:** Traditional clamshell configuration for typing and general use.
- **Tablet Mode:** Fold the screen back 360 degrees to use as a tablet. The keyboard and touchpad will automatically disable.
- **Tent/Stand Mode:** Position the laptop in an inverted 'V' or stand configuration for media consumption or presentations.



Image: The ONN 2-in-1 laptop configured in tablet mode, with the screen folded back, displaying a Windows setup screen.

Touchscreen and Touchpad

- **Touchscreen:** Interact directly with the display using your fingers. Supports multi-touch gestures.
- **Touchpad:** Use the integrated touchpad for cursor control and gestures. Refer to Windows settings for customization.

Connectivity

- **Wi-Fi:** Connect to wireless networks via the Wi-Fi settings in Windows. Supports 802.11bgn.
- **USB Ports:** Use the available USB ports for connecting external devices such as mice, keyboards, or USB drives.
- **Audio Jack:** Connect headphones or external speakers to the 3.5mm audio jack.

MAINTENANCE

Cleaning

- **Screen:** Use a soft, lint-free cloth specifically designed for electronics. Dampen slightly with water or a screen cleaner if necessary. Avoid harsh chemicals.
- **Body:** Wipe the exterior with a soft, damp cloth. Do not allow liquids to enter ports or openings.

Battery Care

- To prolong battery life, avoid extreme temperatures.
- It is recommended to occasionally discharge the battery below 20% and then fully recharge it.
- If storing the laptop for an extended period, charge it to about 50% before turning it off.

Software Updates

Regularly check for and install Windows updates to ensure your system has the latest security patches and performance improvements. Go to **Settings > Update & Security > Windows Update**

Storage Management

Periodically clear unnecessary files and applications to maintain optimal performance of the 128GB SSD. Use Windows' built-in Disk Cleanup tool or Storage Sense feature.

TROUBLESHOOTING

If you encounter issues with your ONN laptop, try the following basic troubleshooting steps:

Problem	Possible Solution
Laptop does not power on.	Ensure the power adapter is securely connected to both the laptop and a working power outlet. Try a different outlet. If the battery is completely drained, it may take a few minutes of charging before it can power on.
Screen is blank or frozen.	Press Ctrl + Alt + Del to open Task Manager. If unresponsive, perform a hard reset by holding the power button for 10-15 seconds until the laptop turns off, then restart.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in Windows settings. Restart your router/modem. Run the Windows Network Troubleshooter.
Slow performance.	Close unnecessary applications. Check for and install Windows updates. Run a disk cleanup. Ensure sufficient free space on the SSD.
Touchscreen not responding.	Restart the laptop. Check for updated display drivers in Device Manager.

SPECIFICATIONS

Key technical specifications for the ONN 100002434 2-in-1 laptop:

- **Model:** 100002434
- **Screen Size:** 13.3 Inches
- **Screen Resolution:** 1920 x 1080 pixels (Full HD)
- **Processor:** Intel i3-8145U (2.1 GHz)
- **RAM:** 4 GB DDR4 SDRAM (2400 MHz)
- **Storage:** 128 GB SSD (Serial ATA-300)
- **Operating System:** Windows 10 S
- **Graphics:** Integrated Intel Graphics
- **Wireless Type:** 802.11bgn

- **Average Battery Life:** 8 Hours
- **Item Weight:** 3.3 pounds
- **Product Dimensions (LxWxH):** 12.82 x 0.82 x 9.15 inches
- **Color:** Grey
- **Rear Webcam Resolution:** 8 MP



Image: The bottom panel of the ONN 2-in-1 laptop, featuring ventilation grilles and regulatory information labels.

WARRANTY AND SUPPORT

This product is a refurbished item. While it has been tested and certified to look and work like new, specific warranty terms may vary. Please refer to the documentation provided at the time of purchase or contact the seller, AmazingAShop, for detailed warranty information and support.

For technical assistance or further inquiries, please contact ONN customer support or visit their official website. Keep your purchase receipt and model number (100002434) readily available when seeking support.

© 2024 ONN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0842V96QN>

More documents and user manuals: <https://manuals.plus/>