

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PowerA](#) /

› [PowerA Enhanced Wireless Controller for Nintendo Switch - Animal Crossing: K.K. Slider - User Manual](#)

## PowerA Animal Crossing: K.K. Slider

# PowerA Enhanced Wireless Controller for Nintendo Switch - Animal Crossing: K.K. Slider

User Manual

## INTRODUCTION

This manual provides essential information for setting up and operating your PowerA Enhanced Wireless Controller, officially licensed for Nintendo Switch, Nintendo Switch (OLED Model), and Nintendo Switch Lite. Designed with a unique Animal Crossing: K.K. Slider theme, this controller offers an ergonomic design, motion controls, and advanced gaming buttons for an enhanced gaming experience.



Image: Front view of the PowerA Enhanced Wireless Controller in Animal Crossing: K.K. Slider design.

## PACKAGE CONTENTS

- PowerA Enhanced Wireless Controller (Animal Crossing: K.K. Slider)

- Two (2) AA Batteries
- User Manual (this document)



Image: Retail packaging of the PowerA Enhanced Wireless Controller.

## FEATURES

- **Wireless Connectivity:** Utilizes Bluetooth 5.0 for a stable connection.
- **Motion Controls:** Integrated motion controls for intuitive gameplay.
- **Advanced Gaming Buttons:** Two mappable buttons on the back for on-the-fly customization.
- **Precision Analog Sticks:** Two finely tuned analog sticks for accurate control.
- **Eight-way D-pad:** Responsive plus-shaped D-pad.
- **Nintendo ABXY Layout:** Standard Nintendo button layout (larger than Joy-Con buttons).
- **LED Indicators:** LEDs for player number, button mapping status, and low battery warning.
- **Officially Licensed:** Guaranteed compatibility and quality for Nintendo Switch, Nintendo Switch (OLED Model), and Nintendo Switch Lite.



Image: Front view of the controller highlighting its buttons and design elements.



## PowerA Enhanced Wireless Controller for Nintendo Switch

Animal Crossing - Slider



Image: Back view of the controller showing the battery compartment and advanced gaming buttons.

## SETUP

### 1. Battery Installation

1. Open the battery compartment on the back of the controller.
2. Insert the two (2) AA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

### 2. Pairing with Nintendo Switch

1. From the HOME Menu on your Nintendo Switch, select **Controllers > Change Grip/Order**.
2. Press and hold the SYNC Button on the top edge of the PowerA Enhanced Wireless Controller for at least one second. The Player LED(s) will flash.
3. Once paired, the Player LED(s) corresponding to the controller number will remain lit.

Video: A seller demonstrates the features and battery installation of the PowerA Enhanced Wireless Controller.

## OPERATING INSTRUCTIONS

### Advanced Gaming Buttons

The controller features two mappable Advanced Gaming Buttons (AGB) on the back. These buttons can be programmed to replicate any standard button input for quick access during gameplay.

1. Press the Program Button on the back of the controller. The Program LED will flash.
2. Press the AGB (L or R) you wish to map. The Program LED will flash rapidly.
3. Press the standard button you want to map to the AGB (e.g., A, B, X, Y, L, R, ZL, ZR, Left Stick Click, Right

Stick Click, +Control Pad). The Program LED will flash 3 times to indicate successful mapping.

4. To clear a mapped AGB, repeat steps 1-2, then press the Program Button again.

## Motion Controls

This controller supports motion controls, allowing for immersive gameplay in compatible titles. Tilt and move the controller to interact with games that utilize this feature.

## IMPORTANT NOTES

- This controller does not support HD rumble, IR (Infrared), or Amiibo NFC functionality.
- Battery life is an estimate and can vary based on usage, game type, and environmental factors.

## TROUBLESHOOTING

### Controller Not Pairing

- Ensure the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Verify that your Nintendo Switch is updated to the latest system software.
- Make sure the controller is within range of the Nintendo Switch console.
- Try restarting your Nintendo Switch console.
- If multiple controllers are connected, try disconnecting others to simplify the pairing process.

### Buttons or Joysticks Unresponsive

- Check battery levels; low batteries can affect performance.
- Ensure the controller is properly paired and connected to the console.
- Clean any debris around buttons or joysticks.

## SPECIFICATIONS

<b>Model Number</b>	Animal Crossing: K.K. Slider
<b>Connectivity</b>	Wireless Bluetooth 5.0
<b>Power Source</b>	2 x AA Batteries
<b>Compatibility</b>	Nintendo Switch, Nintendo Switch (OLED Model), Nintendo Switch Lite
<b>Dimensions</b>	69.69 x 69.69 x 112.99 inches
<b>Weight</b>	5.6 ounces
<b>Manufacturer</b>	PowerA
<b>Release Date</b>	March 1, 2020

## WARRANTY AND SUPPORT

PowerA backs all products with a two-year limited warranty. For warranty claims, technical support, or additional information, please visit the official PowerA support website:

[PowerA.com/Support](https://www.powera.com/support)

© 2024 PowerA. All rights reserved. Nintendo Switch is a trademark of Nintendo.