

[Manuals.plus](#) /

› [Logitech G](#) /

› Logitech G333 Gaming Earphones User Manual

Logitech G G333

Logitech G333 Gaming Earphones User Manual

Model: G333

PRODUCT OVERVIEW

The Logitech G333 Gaming Earphones are designed to provide an immersive audio experience for gaming across multiple platforms. Featuring dual audio drivers for clear highs and deep bass, an in-line microphone for communication, and integrated controls for easy media management, these earphones offer both performance and convenience. Their durable aluminum housing and comfortable silicone ear tips ensure a reliable and pleasant fit for extended use.





Image: The Logitech G333 Gaming Earphones in purple, showcasing their design with bright yellow ear tips.

WHAT'S IN THE BOX

Your Logitech G333 package includes the following items:

- Logitech G333 Gaming Earphones (with attached 3.5mm cable and in-line controls)
- USB-C Adapter
- Multiple sizes of Soft Silicone Ear Tips (Small, Medium, Large)
- Protective Carrying Case

[illegible]

SETUP

For optimal sound quality and comfort, select the ear tips that best fit your ears. The G333 comes with three sizes of soft silicone ear tips (Small, Medium, Large). Experiment with each size to find the most secure and comfortable fit that also provides good sound isolation.

CHOICE OF COMFORT



3 SIZES OF SOFT SILICONE EAR TIPS


Image: A close-up of the three different sizes of soft silicone ear tips provided with the earphones, highlighting the comfort options.

2. Connecting to Your Device

The Logitech G333 earphones offer versatile connectivity options:

1. **3.5mm Aux Connection:** For devices with a standard 3.5mm audio jack (e.g., PC, Xbox, PlayStation, Nintendo Switch in handheld mode, mobile phones), simply plug the 3.5mm connector directly into the audio port.
2. **USB-C Connection:** For devices with a USB-C port (e.g., newer mobile phones, tablets, some laptops), use the included USB-C adapter. Connect the 3.5mm cable from the earphones into the adapter, then plug the USB-C end of the adapter into your device's USB-C port.

CONNECT TO MANY DEVICES

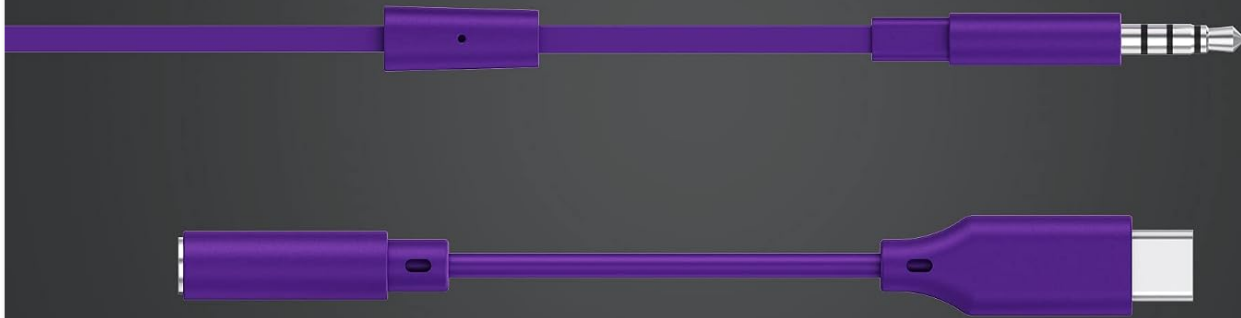

3.5 MM AUX CABLE WITH USB-C ADAPTER

Image: The 3.5mm aux cable and the USB-C adapter, demonstrating the multi-device connectivity options.

OPERATING INSTRUCTIONS

In-Line Controls

The G333 earphones feature an in-line control unit for convenient audio and communication management:

- **Volume Control:** Use the dedicated volume buttons (+ and -) to adjust the audio output level.
- **Play/Pause/Call Button:** The central button allows you to:
 - Press once to play or pause audio.
 - Press once to answer or end a call.
 - Press twice to skip to the next track.
 - Press three times to go to the previous track.

- **Microphone:** The integrated microphone allows for clear voice communication during gaming or calls. Ensure the microphone is positioned appropriately for optimal voice pickup.

IN-LINE MIC AND VOLUME CONTROL



CRYSTAL CLEAR IN-GAME COMMS AND CHAT

Image: A detailed view of the in-line control unit, showing the volume buttons and the central multi-function button.

MAINTENANCE

To ensure the longevity and optimal performance of your Logitech G333 Gaming Earphones, follow these maintenance guidelines:

- **Cleaning Ear Tips:** Regularly remove the silicone ear tips and clean them with a soft, damp cloth. Allow them to air dry completely before reattaching.
- **Cleaning Earphone Body:** Wipe the earphone body and cable with a dry, soft cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earphones in the provided protective carrying case to prevent tangling and damage.

- **Avoid Extreme Conditions:** Do not expose the earphones to extreme temperatures, humidity, or direct sunlight. Keep them away from liquids.
- **Handle with Care:** Avoid pulling on the cable excessively or bending the connectors sharply, as this can cause internal damage.

TROUBLESHOOTING

If you encounter issues with your Logitech G333 Gaming Earphones, refer to the following common solutions:

Problem	Possible Cause	Solution
No sound or low volume	Incorrect connection Device volume too low Ear tips not sealed properly	Ensure the 3.5mm jack or USB-C adapter is fully inserted into the device. Increase the volume on both the in-line control and your connected device. Try different sized ear tips to ensure a proper seal in your ear canal.
Microphone not working	Microphone muted on device Incorrect audio input settings Connection issue	Check your device's audio settings to ensure the microphone is not muted. Verify that the Logitech G333 is selected as the input device in your system's sound settings or game/chat application. Ensure the 3.5mm jack or USB-C adapter is securely connected.
Sound distortion or crackling	Loose connection Interference Damaged cable	Reconnect the earphones to your device. Try connecting to a different audio port or device to rule out interference. Inspect the cable for any visible damage. If damaged, contact support.

SPECIFICATIONS

Feature	Detail
Model Name	G333
Connectivity Technology	Wired (3.5mm Jack, USB-C via adapter)
Audio Driver Type	Dual Dynamic Drivers (one for highs/mids, one for bass)
Frequency Range	20Hz ~ 20KHz
Microphone	In-line
Controls	In-line Volume Control, Play/Pause/Call button
Ear Placement	In Ear
Material	Aluminum housing, Silicone ear tips
Item Weight	19 Grams (0.67 ounces)

Feature	Detail
Compatible Devices	PC, Mobile, Xbox, PlayStation, Nintendo (with 3.5mm aux or USB-C port)

WARRANTY AND SUPPORT

Logitech G products are built to last, and the G333 Gaming Earphones come with a limited hardware warranty. For detailed warranty information, product support, and frequently asked questions, please visit the official Logitech G support website.

Download User Manual
(PDF)

© 2023 Logitech G. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0842ZG5P4>

More documents and user manuals: <https://manuals.plus/>