

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Brandson](#) /

› [Brandson Tower Fan User Manual](#)

Brandson 722303803722

Brandson 108cm Tower Fan User Manual

Model: 722303803722

INTRODUCTION

Thank you for choosing the Brandson 108cm Tower Fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before use and keep it for future reference.





This image shows the Brandson 108cm Tower Fan in its upright position, highlighting its tall, slender profile and steel silver finish. The fan features a black base and a top-mounted control panel with an LED display.

SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the fan with a damaged cord or plug.
- Keep the fan away from water and moisture.
- Do not insert fingers or objects into the fan grille.
- Unplug the fan before cleaning or maintenance.
- This appliance is for indoor use only.
- Keep out of reach of children.
- Ensure the fan is placed on a stable, flat surface.
- Do not cover the fan during operation.



This image displays the Brandson Tower Fan alongside a 'GS - Geprüfte Sicherheit' (Tested Safety) certification logo, indicating that the product meets German safety standards. This highlights the product's adherence to safety regulations.

PACKAGE CONTENTS

Please check the package for the following items:

- Brandson Tower Fan (1 unit)
- Remote Control (1 unit)
- User Manual (this document)





BRANDSON
EQUIPMENT

TURMVENTILATOR

SILBER / SILVER

PLATFORMDESIGN
PERFECT FOR SON BETRIEB ZU HAUSE
ODER IM BÜRO
SPACE SAVING DESIGN
PERFECT FOR HOME OR OFFICE USE

EIGENSCHAFTEN / FEATURES



FERNSTEUERUNG
REMOTE CONTROL



ZUSCHWINGUNG OSCIULATION
OSCILLATION



3 SCHWINGUNGSGRADESTUFE
3 SPEED LEVELS



4 MODI
4 MODES



TRÄGERFUNKTION
TIMER FUNCTION

WSP 303003



This image shows the Brandson Tower Fan next to its retail packaging, illustrating how the product is presented when unboxed. The box design is visible, emphasizing the product's branding.

SETUP

Follow these steps to assemble your Brandson Tower Fan:

1. Carefully remove all components from the packaging.
2. Attach the base to the main body of the fan. Ensure it clicks securely into place or is fastened with the provided screws (refer to the diagram).
3. Place the fan on a firm, level surface.
4. Plug the power cord into a suitable electrical outlet.



This diagram illustrates the physical dimensions of the Brandson Tower Fan, including its 108cm height. It also visually represents the 10-

degree upward tilt and 65-degree horizontal oscillation features, demonstrating the fan's movement range.

OPERATING INSTRUCTIONS

Control Panel and Remote Control

The fan can be operated using the touch control panel on top of the unit or the included infrared remote control. The remote control offers convenient operation from a distance.



This image provides a detailed view of the fan's top-mounted control panel, featuring an LED display and touch buttons for various functions. The accompanying remote control is also shown, highlighting its compact design and button layout for power, speed, oscillation, mode, and timer.

Power On/Off

Press the **Power** button (symbol of power button) on the control panel or remote control to turn the fan on or off.

Speed Settings

Press the **Speed** button (symbol of fan speed) to cycle through the three available fan speeds: Low, Medium, and High.

Operating Modes

Press the **Mode** button (symbol of mode button) to select from four different operating modes:

- **Normal Mode:** Constant airflow at the selected speed.
- **Natural Mode:** Simulates natural breezes by varying fan speed.
- **Sleep Mode:** Gradually decreases fan speed over time and then switches off, ideal for quiet operation during sleep.
- **Child Mode:** Starts at high speed and gradually reduces speed over 3 hours before switching off.

Oscillation

Press the **Oscillation** button (symbol of oscillation) to activate or deactivate the 65-degree horizontal oscillation function, distributing air across a wider area.

Timer Function

Press the **Timer** button (symbol of timer) to set an automatic shut-off time from 1 to 12 hours. Each press adds one hour to the timer.

Tilt Function

The fan head can be manually tilted upwards by 10 degrees to direct airflow more precisely.



This image shows the Brandson Tower Fan tilted slightly upwards, with blue lines indicating the direction and spread of the airflow. This visually explains how the 10-degree tilt function helps in directing the air.



This image highlights a convenient feature of the Brandson Tower Fan: a dedicated slot for storing the remote control directly on the fan body, ensuring it is always within reach and not easily misplaced.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Before cleaning, always unplug the fan from the power outlet. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the fan for an extended period, unplug it, clean it thoroughly, and store it in a cool, dry place, preferably in its original packaging.
- **Air Inlet/Outlet:** Periodically check and clean the air inlet and outlet grilles to prevent dust buildup, which can affect performance.

TROUBLESHOOTING

If you encounter any issues with your Brandson Tower Fan, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power button not pressed.	Check if the power cord is securely plugged into a working outlet. Press the Power button on the fan or remote.
Weak airflow.	Air inlets/outlets are blocked. Fan speed is too low.	Clean any dust or obstructions from the grilles. Increase the fan speed setting.
Fan is noisy.	Loose components. Fan not on a stable surface.	Ensure the base screws are tightened. Place the fan on a flat, stable surface.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries and ensure correct polarity. Remove any objects blocking the signal path.

SPECIFICATIONS

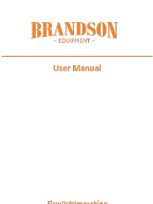
Feature	Detail
Brand	Brandson
Model Number	722303803722
Dimensions (L x W x H)	13 x 13 x 108 cm
Weight	5.32 Kilograms
Color	Steel Silver
Power Source	Corded Electric
Wattage	45 W
Noise Level	Up to 52 dB
Speed Settings	3 (Low, Medium, High)
Operating Modes	4 (Normal, Natural, Sleep, Child)
Oscillation	65 degrees horizontal
Tilt Function	10 degrees upward
Timer	1-12 hours auto shut-off
Special Features	Portable, Remote Control, LED Display

WARRANTY AND SUPPORT

Brandson products are designed for reliability and performance. For warranty information or technical support, please

refer to the contact details provided with your purchase documentation or visit the official Brandson website.

Related Documents - 722303803722

 BRANDSON - EQUIPMENT - User Manual Tower Fan Mod-Nr.: 304993/20200910NB159	Brandson Tower Fan User Manual Comprehensive user manual for the Brandson Tower Fan, detailing features, functions, safety instructions, and assembly. Learn how to operate your tower fan for optimal performance and energy efficiency.
 BRANDSON - EQUIPMENT - User Manual Eismwürfelmaschine Mod-Nr.: 304993/20200910NB159	BRANDSON Eismwürfelmaschine Benutzerhandbuch Umfassendes Benutzerhandbuch für die BRANDSON Eismwürfelmaschine (Modell 304993/20200910NB159). Enthält Anleitungen zur sicheren Bedienung, Wartung und Fehlerbehebung für den privaten Gebrauch. Zusätzliche Downloads auf www.ganzeinfach.de.
 BRANDSON - EQUIPMENT - User Manual WETTERSTATION / WEATHERSTATION Mod-Nr.: 305385	BRANDSON Wetterstation Modell 305385 - Benutzerhandbuch Umfassende Bedienungsanleitung für die BRANDSON Wetterstation (Modell 305385). Enthält technische Daten, Montageanleitungen, Grundeinstellungen, Bedienung, Wartung und Sicherheitshinweise.
 BRANDSON - EQUIPMENT - BEDIENUNGSANLEITUNG USER MANUAL WETTERSTATION WEATHERSTATION Mod-Nr.: 306643	Brandson Wetterstation Bedienungsanleitung (Modell 306643) Umfassende Bedienungsanleitung für die Brandson Wetterstation, Modell 306643. Erfahren Sie mehr über Installation, Funktionen, technische Daten und App-Integration.
 BRANDSON - EQUIPMENT - User Manual CALENDAR DESK LAMP Mod-Nr.: 303579/20190128SZ242	Brandson Kalender Schreibtischlampe Benutzerhandbuch Modell 303579 Das offizielle Benutzerhandbuch für die Brandson Kalender Schreibtischlampe (Modell 303579/20190128SZ242). Erfahren Sie mehr über Installation, Bedienung, Kalender-, Alarmfunktionen und Sicherheitshinweise. Zusätzliche Downloads verfügbar auf www.ganzeinfach.de.



[Brandson 306615 Bewässerungssteuerung: Intelligentes Gartenmanagement mit App-Steuerung](#)

Umfassendes Benutzerhandbuch für die Brandson 306615 Bewässerungssteuerung. Erfahren Sie, wie Sie Ihren Garten effizient und smart bewässern mit App-Steuerung, Zeitplänen und Wassersparfunktionen. Enthält technische Daten und Installationsanleitungen.