

## CHIC 4 BABY 100 67

# CHIC 4 BABY Viva Combi Stroller 100 67 Instruction Manual

Model: 100 67

## 1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before assembly and use of the CHIC 4 BABY Viva Combi Stroller. Keep this manual for future reference. Failure to follow these instructions could result in serious injury to your child.

- This stroller complies with the European safety standard EN1888.
- Always use the 5-point safety harness to secure your child.
- Ensure all locking devices are engaged before use.
- Do not leave your child unattended in the stroller.
- Do not overload the stroller or attach items that could affect its stability.
- The maximum weight capacity for this product is 14.5 kg.
- Always engage the parking brake when the stroller is stationary.
- Ensure children are clear of moving parts when making adjustments.

## 2. SETUP AND ASSEMBLY

The CHIC 4 BABY Viva Combi Stroller features a lightweight aluminum frame designed for quick and compact folding. Follow these steps for initial setup:

### 2.1 Unfolding the Stroller Frame

Carefully remove the stroller frame from its packaging. Release any transport locks and unfold the frame until it clicks securely into place. Ensure all frame joints are fully locked before proceeding.

### 2.2 Attaching the Wheels

The stroller comes with four large pneumatic wheels. Insert each wheel axle into its designated slot on the frame until it locks. Pull on the wheels to ensure they are securely attached.



*Image 2.2.1: Stroller frame with wheels and carrycot attached, ready for use.*

### **2.3 Installing the Carrycot**

The soft carrycot can be easily attached to the stroller frame. Align the carrycot with the attachment points on the frame and press down firmly until it locks into position. Verify that the carrycot is securely fastened before placing a child inside.



*Image 2.3.1: The soft carrycot, shown detached from the stroller frame.*

## **3. OPERATING INSTRUCTIONS**

---

### **3.1 Adjusting the Swivel Slider Handle**

The stroller features a swivel slider handle, allowing you to push the stroller from either side. To adjust the handle height, locate the adjustment buttons on the side of the handle. Press these buttons and move the handle to your desired height, up to 115 cm. Ensure it locks into place before use. The handle is equipped with soft grips for comfort.

### **3.2 Converting Carrycot to Sport Seat**

The soft carrycot is designed to be removable and convertible into a sport seat. To convert, remove the carrycot from the frame. Follow the instructions provided with the carrycot to reconfigure it into the sport seat configuration. Once converted, attach the sport seat securely to the stroller frame.



*Image 3.2.1: Stroller configured as a sport seat.*

### **3.3 Backrest and Footrest Adjustment**

Both the backrest and footrest are adjustable to multiple positions to ensure your child's comfort. Locate the adjustment levers or buttons on the sides of the backrest and underneath the footrest. Adjust to the desired recline or leg support position and ensure they are securely locked.

### **3.4 Canopy Features**

The canopy includes a closable window for ventilation and viewing your child, as well as a practical pocket for small items. For warmer weather, the rear wall of the canopy can be separated to allow for better air circulation and to function as a sunshade.



*Image 3.4.1: Detail of the canopy with its window and storage pocket.*

### **3.5 Engaging the Parking Brake**

To engage the parking brake, push the brake lever located near the rear wheels downwards until it locks. Ensure the stroller is stationary before releasing your grip. To release, lift the brake lever upwards.

### **3.6 Folding the Stroller for Transport**

To fold the stroller compactly for transport, ensure the carrycot or sport seat is removed or in its most compact position. Follow the specific folding mechanism instructions, typically involving pressing release buttons and collapsing the frame. The folded dimensions are approximately 100 x 64 x 38 cm.



*Image 3.6.1: The stroller in its compact folded state.*

## 4. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your CHIC 4 BABY Viva Combi Stroller.

- **Cleaning the Frame:** Wipe the aluminum frame with a damp cloth and mild soap. Dry thoroughly. Do not use abrasive cleaners.
- **Fabric Care:** The fabric components (carrycot, seat, canopy) can be spot cleaned with a mild detergent and water. Refer to any specific care labels on the fabric. Allow to air dry completely.
- **Wheel Maintenance:** Check the pneumatic wheels regularly for proper inflation and wear. Inflate to the recommended pressure if specified. Clean any dirt or debris from the wheel axles and lubricate moving parts with a silicone-based spray if necessary.
- **Storage:** Store the stroller in a dry, cool place away from direct sunlight and extreme temperatures.

## 5. TROUBLESHOOTING

This section addresses common issues you might encounter with your stroller.

- **Stroller does not fold/unfold smoothly:** Ensure all locking mechanisms are disengaged before folding. Check for any obstructions in the folding joints. Lubricate moving parts if necessary.
- **Wheels squeak or do not turn freely:** Clean any dirt or hair from the wheel axles. Apply a small amount of silicone lubricant to the moving parts of the wheels. Check tire pressure for pneumatic wheels.
- **Harness is difficult to adjust:** Ensure the harness straps are not twisted. Refer to the harness adjustment instructions to ensure correct operation.
- **Brake is not engaging/disengaging:** Check for obstructions around the brake mechanism. Ensure the brake lever is fully pushed down or lifted. If the issue persists, contact customer support.

## 6. SPECIFICATIONS

| Feature                        | Detail            |
|--------------------------------|-------------------|
| Model Number                   | 100 67            |
| Brand                          | CHIC 4 BABY       |
| Main Material                  | Aluminum          |
| Maximum Supported Weight       | 14.5 Kilograms    |
| Product Dimensions (L x W x H) | 110 x 66 x 110 cm |
| Folded Dimensions              | 100 x 64 x 38 cm  |
| Item Weight                    | 19.7 Kilograms    |
| Number of Seats                | 1                 |
| Wheel Diameter                 | 30 cm             |
| Age Range (Description)        | Baby              |
| Color                          | Grey              |

## 7. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact CHIC 4 BABY customer service directly. Keep your proof of purchase for any warranty claims.

Contact information for CHIC 4 BABY can typically be found on their official website or on the product packaging.

© 2023 CHIC 4 BABY. All rights reserved.