

[Manuals.plus](#) /

› [Savoy House](#) /

› Savoy House Carson 8-4050-3-322 3-Light Bathroom Vanity Light Instruction Manual

Savoy House 8-4050-3-322

Savoy House Carson 8-4050-3-322 3-Light Bathroom Vanity Light

Model: 8-4050-3-322 | Brand: Savoy House

INTRODUCTION

Thank you for choosing the Savoy House Carson 8-4050-3-322 3-Light Bathroom Vanity Light. This fixture is designed to provide elegant and functional illumination for your bathroom or powder room. Please read these instructions carefully before installation and use to ensure safe and proper operation.

SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes and ordinances, and the National Electric Code (NEC).
- Consult a qualified electrician if you are unsure about the installation process.
- Use only the specified bulb type and wattage to avoid overheating and potential fire hazards.
- This fixture is UL/CUL Approved for DAMP Locations. Do not install in areas where it will be directly exposed to water.
- Handle glass shades with care to prevent breakage.

PACKAGE CONTENTS

Carefully unpack your new fixture and lay out all parts on a clear area. Ensure all components listed below are present before discarding packaging materials.

- Vanity Light Fixture Assembly
- Clear Glass Shades (3)
- Mounting Hardware (Crossbar, Mounting Screws, Wire Nuts)
- Instruction Manual

Note: Bulbs are not included. This fixture requires three E26 base bulbs, maximum 60 watts each.

SPECIFICATIONS

Model Number	8-4050-3-322
Dimensions (H x W x D)	8.5" H x 22.5" W x 7" D
Backplate Dimensions	5.5" x 5.5"
Weight	3.56 lbs
Number of Lights	3
Max Wattage Per Bulb	60 Watt
Voltage	120V
Bulb Base	E26
Bulb Type	Incandescent/LED (Dimmable)
Installation Direction	Reversible (Up/Down Light)
Safety Rating	UL/CUL Approved for DAMP Locations
Material	Metal and Glass
Finish	Warm Brass



Image: Detailed dimensions of the vanity light fixture, showing a width of 22.5 inches and a height of 8.5 inches.

SETUP AND INSTALLATION

Before you begin: Ensure power is disconnected at the circuit breaker. Installation requires minimal assembly and connection to an existing junction box (not included).

- 1. **Prepare the Mounting Surface:** Ensure the electrical junction box is securely installed in the wall.
- 2. **Attach Mounting Hardware:** Secure the crossbar (provided) to the junction box using the mounting screws.
- 3. **Make Electrical Connections:**

- Connect the fixture's black wire to the house's black (hot) wire using a wire nut.
 - Connect the fixture's white wire to the house's white (neutral) wire using a wire nut.
 - Connect the fixture's ground wire to the house's ground wire (or ground screw on the crossbar) using a wire nut.
 - Carefully tuck all wires into the junction box.
4. **Mount the Fixture:** Align the fixture's backplate with the mounting screws on the crossbar and secure it in place. The fixture can be installed with the lights facing up or down (reversible).
 5. **Install Glass Shades:** Carefully attach the clear glass shades to the fixture. The fishbowl-style shades are open at the bottom for easy bulb replacement.
 6. **Insert Bulbs:** Screw three E26 base bulbs (max 60W each, not included) into the sockets.
 7. **Restore Power:** Once installation is complete, restore power at the circuit breaker.



Image: The Savoy House Carson 3-Light Vanity Light, showcasing its warm brass finish and clear glass shades with exposed bulbs.

OPERATING INSTRUCTIONS

This vanity light operates via a standard wall switch. If connected to a dimmer switch, ensure that the bulbs you install are dimmable compatible with your dimmer switch.

- **Turning On/Off:** Use the wall switch connected to the fixture to turn the light on or off.
- **Dimming (Optional):** If using dimmable bulbs and a compatible dimmer switch, adjust the dimmer to control the light intensity.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish or glass.
- **Bulb Replacement:**
 - Turn off power to the fixture at the circuit breaker.
 - Allow bulbs to cool completely before touching.
 - Unscrew the old bulb from the socket.
 - Screw in a new E26 base bulb (max 60W).
 - Restore power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connections. Faulty bulb.	Check circuit breaker and wall switch. Ensure all wire connections are secure (with power off). Replace bulb.
Light flickers.	Loose bulb. Incompatible dimmer switch/bulb.	Tighten bulb. Ensure dimmer and bulbs are compatible.
Glass shade is broken.	Accidental damage.	Contact customer support for replacement parts.

WARRANTY

This Savoy House fixture is covered by a **1-year limited manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims or further details, please contact Savoy House customer support.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or general inquiries, please visit the official Savoy House website or contact their customer service department. Refer to your purchase documentation for specific contact information.