

## Sanitaire SC7100A

# Sanitaire SC7100A Tracer Cordless Vacuum Instruction Manual

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Sanitaire SC7100A Tracer Cordless Vacuum. Please read all instructions carefully before using the appliance and retain this manual for future reference.

The Sanitaire SC7100A Tracer Cordless Vacuum is designed for high-performance cleaning on both hard floors and carpets. Its cordless design offers freedom of movement, making it ideal for quick and efficient cleaning in various environments. Weighing only 3.6 kilograms (8 pounds), it is lightweight and easy to maneuver around furniture.

## SAFETY INFORMATION

---

**WARNING: To reduce the risk of fire, electric shock, or injury, read and follow all instructions and warnings before use.**

- Always disconnect the vacuum from the charger before cleaning or performing maintenance.
- Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum. Close supervision is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the vacuum is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not handle plug or vacuum with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Use extra care when cleaning on stairs.
- Do not use without dust cup and/or filters in place.

## PACKAGE CONTENTS

---

Your Sanitaire SC7100A Tracer Cordless Vacuum package includes the following items:

- Sanitaire SC7100A Tracer Cordless Vacuum Unit
- Removable Lithium-Ion Battery
- Battery Charger

## SETUP

---

### 1. Battery Charging


Before first use, fully charge the battery. The battery takes approximately 4 hours to fully charge. Ensure the vacuum is turned off before connecting the charger.

1. Insert the battery into the charging port on the vacuum or directly into the battery charger.
2. Plug the charger into a standard electrical outlet.
3. The charging indicator light will illuminate to show the battery is charging. It will change or turn off when charging is complete.

### 2. Handle Assembly

The Sanitaire SC7100A features a collapsible handle for easy storage. To assemble for use:

1. Unfold the handle until it locks securely into the upright position.
2. Ensure all connections are firm before operation.

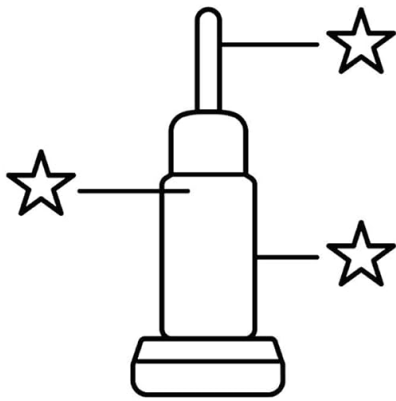

## HANDY FEATURES



# COLLAPSIBLE HANDLE

The collapsible handle allows for convenient storage and easy setup.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

To turn the vacuum on, press the power button located on the handle. Press it again to turn the vacuum off.

### 2. Multi-Surface Cleaning

The Sanitaire SC7100A is designed for effective cleaning on both carpets and hard floors. No manual adjustments are typically needed when transitioning between surfaces.



The vacuum provides multi-surface cleaning performance.

### 3. Cordless Efficiency

Enjoy up to 40 minutes of continuous cleaning power on a single charge. The cordless design allows you to clean without being restricted by power outlets or tangled cords.



# CORDLESS EFFICIENCY


Experience freedom of movement with cordless operation.

## 4. Maneuverability and Lightweight Design

The vacuum's lightweight design (3.6 kg / 8 lbs) and agile head allow for easy navigation around and under furniture, reducing user fatigue.



# LIGHTWEIGHT

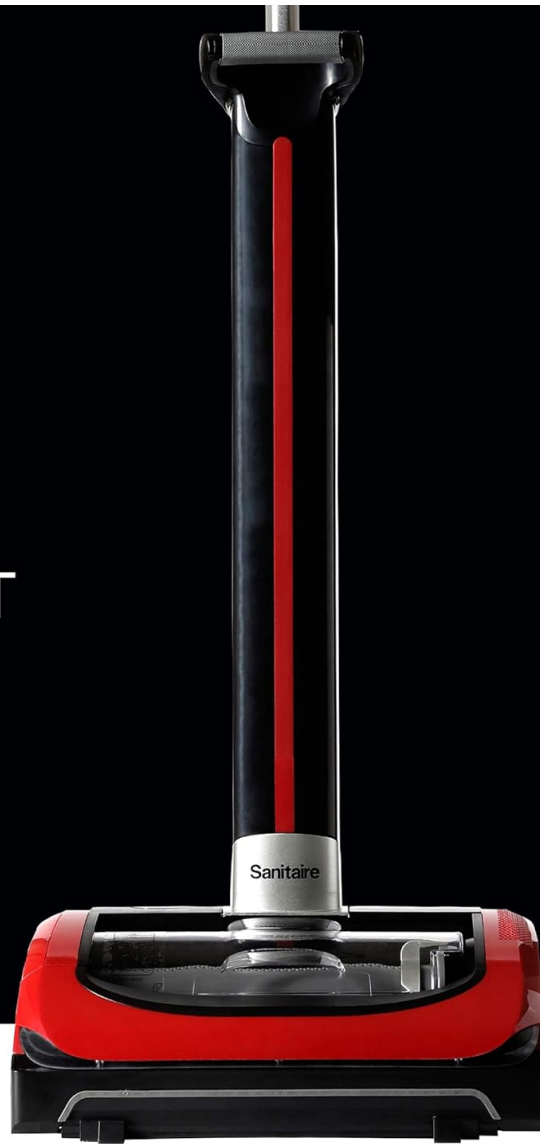

The lightweight design ensures easy handling and maneuverability.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your vacuum.

### 1. Emptying the Dust Cup

The vacuum has a dust cup capacity of 0.63 quarts. Empty the dust cup after each use or when debris reaches the 'Max Fill' line to maintain suction power.

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Locate the dust cup release button, typically near the top of the dust cup.
3. Press the button and remove the dust cup from the main unit.
4. Hold the dust cup over a trash receptacle and open the bottom flap to release debris.
5. Close the flap and reattach the dust cup to the vacuum until it clicks into place.

### 2. Cleaning the Filter

The Sanitaire SC7100A uses a cloth filter. Regular cleaning is crucial for maintaining suction and air quality.

1. With the dust cup removed, carefully take out the cloth filter.
2. Tap the filter gently over a trash can to remove loose dust and debris.

- For a more thorough cleaning, the filter can be washed with mild soap and water. Ensure it is completely dry before reinserting. Allow at least 24 hours for air drying.
- Reinsert the dry filter into the dust cup and reattach the dust cup to the vacuum.

### 3. Cleaning the Brush Roll

Periodically check the brush roll for tangled hair, strings, or other debris that may reduce cleaning effectiveness.

- Turn off and unplug the vacuum.
- Flip the vacuum head over to access the brush roll.
- Use scissors or a brush to carefully cut and remove any tangled hair or debris from the brush roll.
- Ensure the brush roll spins freely before resuming operation.

### 4. Battery Care

- Store the battery in a cool, dry place when not in use.
- Avoid exposing the battery to extreme temperatures.
- If the vacuum will not be used for an extended period, charge the battery every 3-6 months to maintain its lifespan.

## TROUBLESHOOTING

If you encounter issues with your Sanitaire SC7100A Tracer Cordless Vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly inserted.	Ensure the battery is fully charged and securely inserted into the vacuum.
Loss of suction	Dust cup is full. Filter is clogged. Brush roll is obstructed.	Empty the dust cup. Clean or replace the filter. Remove any debris from the brush roll.
Battery not charging	Charger not properly connected. Faulty charger or battery.	Ensure the charger is securely plugged into both the battery/vacuum and the wall outlet. If the issue persists, contact customer support for battery or charger replacement.
Vacuum stops unexpectedly	Battery is depleted. Overheating.	Recharge the battery. If the vacuum overheats, turn it off and allow it to cool for at least 30 minutes before resuming use. Check for blockages.

## SPECIFICATIONS

Feature	Detail
Model Name	SC7100A
Brand	Sanitaire
Power Source	Battery Powered

Feature	Detail
Battery Type	Lithium-Ion
Voltage	21.6 Volts
Runtime	Up to 40 minutes
Battery Charge Time	4 Hours
Item Weight	3.6 Kilograms (8 lbs)
Capacity	0.63 Quarts
Filter Type	Cloth
Surface Recommendation	Carpets, Hard Floors
Noise Level	75 Decibels
Wattage	960 watts
Amperage	8 Amps

## WARRANTY AND SUPPORT

---

### Limited Warranty

The Sanitaire SC7100A Tracer Cordless Vacuum comes with a Limited 1 Year Manufacturer Warranty. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, warranty claims, or to order replacement parts, please contact Sanitaire customer support. Refer to the contact information provided with your product packaging or visit the official Sanitaire website.