

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Powermatic](#) /

› [Powermatic III+ Electric Cigarette Injector Machine User Manual](#)

Powermatic III+

Powermatic III+ Electric Cigarette Injector Machine User Manual

Model: III+

[Contents](#) [Setup](#) [Operation](#) [Introduction](#) [Package](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Powermatic III+ Electric Cigarette Injector Machine. Please read this manual thoroughly before using the device and retain it for future reference.

Important Safety Information

- Ensure the machine is placed on a stable, level surface during operation.
- Keep hands and foreign objects away from moving parts during operation.
- Do not operate the machine with wet hands or near water.
- Use only dry, shredded tobacco specifically designed for cigarette injection machines. Moist or overly coarse tobacco can cause jams and damage the machine.
- Unplug the machine from the power outlet before cleaning or performing any maintenance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Powermatic III+ Electric Cigarette Injector Machine
- Power Cord
- Fess Brand Assorted Design Rolling Tray
- Fess Branded Cigarette Case (85mm)
- King Size Cigarette Tubes (85mm)
- Cleaning Tools (brush, poker)



Figure 2.1: Powermatic III+ Machine and Bundle Contents. The image displays the black Powermatic III+ machine on the left, with a digital display and a 'START' button. To the right, a box of ZICO King Size Tubes, a blue Fess cigarette case, and a black Fess rolling tray are shown.

3. SETUP

- 1. Unpack the Machine:** Carefully remove all components from the packaging.
- 2. Placement:** Place the Powermatic III+ machine on a clean, stable, and dry surface. Ensure there is enough space around the machine for operation and tobacco handling.
- 3. Connect Power:** Insert the power cord into the machine's power port and then plug the other end into a standard electrical outlet. The digital display should illuminate.
- 4. Prepare Tobacco:** Ensure your tobacco is properly shredded and dry. Remove any stems or large pieces that could cause a jam.

4. OPERATING INSTRUCTIONS

Follow these steps to operate your Powermatic III+ Electric Cigarette Injector Machine:

- 1. Load Tobacco:** Open the tobacco hopper lid and fill the hopper with your prepared tobacco. Do not overfill or pack the tobacco too tightly in the hopper. The machine is designed to hold enough tobacco for approximately 32 king-sized cigarettes.
- 2. Place Cigarette Tube:** Carefully slide an empty cigarette tube onto the nozzle located on the side of the machine. Ensure the tube is fully seated.
- 3. Start Injection:** Press the **START** button. The machine will automatically inject the tobacco into the tube.
- 4. Remove Cigarette:** Once the injection process is complete, gently remove the filled cigarette from the nozzle.

5. **Repeat:** Continue steps 2-4 until you have produced the desired number of cigarettes. The machine's digital display will track the number of cigarettes made.

Automatic Jam Protection

The Powermatic III+ features an automatic jam protection system. If a tobacco jam is detected, the machine will stop operation to prevent damage. Refer to the Troubleshooting section for instructions on how to clear a jam.

5. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your machine.

- **Daily Cleaning:** After each use, unplug the machine. Use the provided brush to remove any loose tobacco from the hopper, nozzle, and surrounding areas.
- **Clearing Residue:** Periodically, use the poker tool to gently clear any tobacco residue from the injection mechanism and nozzle. Be careful not to force the tool or damage internal components.
- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, dry cloth. Do not use abrasive cleaners or immerse the machine in water.
- **Storage:** When not in use, store the machine in a clean, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Powermatic III+ machine.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue; faulty power cord.	Ensure power cord is securely plugged into both the machine and a working electrical outlet. Test the outlet with another device. If issues persist, contact support.
Tobacco does not inject or machine jams.	Tobacco is too moist, too coarse, or packed too tightly; foreign object in mechanism; worn parts.	Unplug the machine. Remove all tobacco from the hopper. Use cleaning tools to clear any obstructions from the nozzle and injection area. Ensure tobacco is dry and properly shredded. Do not overfill the hopper.
Cigarettes are too loose or too tight.	Tobacco consistency; amount of tobacco loaded.	Adjust the amount of tobacco loaded into the hopper. Experiment with different tobacco types and moisture levels to find the optimal consistency for your preference.
Machine makes unusual noises.	Internal obstruction; mechanical issue.	Unplug the machine and inspect for any visible obstructions. If the noise persists or indicates a malfunction, discontinue use and contact customer support.

7. SPECIFICATIONS

Model: Powermatic III+

Brand: Powermatic (Machine), Fess Products (Bundle)

Color: Black

Item Weight: Approximately 8.78 Pounds

Package Dimensions: 16.1 x 13.03 x 9.13 inches

Power Source: Electric (AC)

Features: Automatic Jam Protection, Digital Counter

8. WARRANTY AND SUPPORT

Warranty Information

The Powermatic III+ Electric Cigarette Injector Machine comes with a manufacturer's warranty for one year or 20,000 cigarettes, whichever occurs first. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

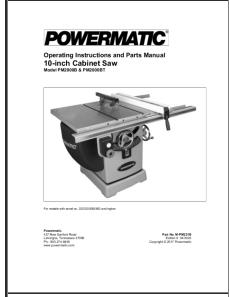
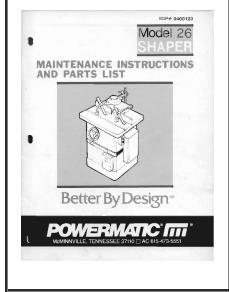
Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Fess Products customer support. Refer to the product packaging or the Fess Products website for current contact information.



Related Documents - III+

<p>USER MANUAL</p>  <p>Powermatic IV+ CIGARETTE INJECTOR</p>	<p><u>Powermatic 4 Plus Cigarette Injector User Manual and Operating Guide</u></p> <p>Comprehensive user manual for the Powermatic 4 Plus electric cigarette injector, detailing its features, operation, safety guidelines, and warranty information. Designed for personal use with volume tobacco.</p>
<p>USER MANUAL</p>  <p>Powermatic V CIGARETTE INJECTOR</p>	<p><u>Powermatic 5 Cigarette Injector User Manual</u></p> <p>User manual for the Powermatic 5 automatic cigarette tube injector, providing instructions for operation, features, and warranty information in multiple languages.</p>
<p>POWERMATIC Operating Instructions and Parts Manual Accu-Fence® and Rail System 64A, 64B, and PM1000 Table Saws</p> 	<p><u>Powermatic Accu-Fence® and Rail System Operating Instructions and Parts Manual</u></p> <p>Comprehensive operating instructions and parts manual for the Powermatic Accu-Fence® and Rail System, designed for 64A, 64B, and PM1000 Table Saws. Includes assembly, adjustments, troubleshooting, and parts lists.</p>

	<p><u>Powermatic Model 87 20" Metal Cutting Band Saw Maintenance Instructions and Parts List</u></p> <p>Comprehensive maintenance instructions, parts list, specifications, safety guidelines, and troubleshooting tips for the Powermatic Model 87 20-inch metal cutting band saw.</p>
	<p><u>Powermatic PM2000B & PM2000BT 10-inch Cabinet Saw: Operating Instructions and Parts Manual</u></p> <p>This comprehensive manual from Powermatic details the safe operation, setup, maintenance, and parts for the PM2000B and PM2000BT 10-inch Cabinet Saws. Essential reading for woodworking professionals and serious hobbyists.</p>
	<p><u>Powermatic Model 26 Shaper: Maintenance Instructions and Parts List</u></p> <p>This manual provides detailed maintenance instructions, safety guidelines, specifications, and a comprehensive parts list for the Powermatic Model 26 Shaper. It covers operation, adjustments, and troubleshooting for woodworking professionals.</p>