

[Manuals.plus](#) /

› [Lagostina](#) /

› Lagostina Nova Vitamin Lagoeasy'Up Pressure Cooker 7 Litres Stainless Steel User Manual

## Lagostina 012019010707

# Lagostina Nova Vitamin Lagoeasy'Up Pressure Cooker User Manual

Model: 012019010707 | Capacity: 7 Litres

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your Lagostina Nova Vitamin Lagoeasy'Up Pressure Cooker. Designed for versatility, this 18/10 stainless steel pressure cooker features a patented one-hand opening system and a specialized vitamin valve to preserve nutrients. Please read this manual thoroughly before first use and retain it for future reference.



**Figure 1:** The Lagostina Nova Vitamin Lagoeasy'Up Pressure Cooker, showcasing its sleek stainless steel design and ergonomic handle.

## 2. SAFETY INFORMATION

Your Lagostina pressure cooker is equipped with **6 safety systems** to ensure secure operation. Always adhere to the following safety guidelines:

- Never force the lid open. Ensure all pressure is released before attempting to open.
- Do not fill the cooker beyond 2/3 capacity for general cooking, and 1/2 capacity for foods that expand (e.g., rice, dried vegetables).
- Regularly inspect the gasket, valves, and safety devices for wear or damage. Replace components as needed.
- Ensure the pressure release valve is clear before each use.
- Keep hands and face away from the steam release valve during operation.

## 6 SICHERHEITSSYSTEME



Figure 2: Illustration highlighting the 6 integrated safety systems of the pressure cooker, designed for secure operation.

### 3. SETUP AND FIRST USE

#### 3.1 Unpacking

Carefully remove all packaging materials. Check for any damage to the cooker or accessories. Retain packaging for potential future transport or returns.

#### 3.2 Initial Cleaning

1. Wash the pot body, lid, and all accessories (steamer basket, eco tin) with warm soapy water.
2. Rinse thoroughly and dry completely before assembly.
3. Ensure the gasket is properly seated in the lid.

#### 3.3 Included Accessories

## MITGELIEFERTES ZUBEHÖR



**Figure 3:** The accessories included with your pressure cooker: a steamer basket, an eco tin for measuring, and a recipe book.

- **Steamer Basket:** For steaming vegetables, fish, and other delicate foods.
- **Eco Tin:** A measuring cup designed to assist with liquid quantities.
- **Recipe Book:** Provides cooking guidelines and recipes tailored for pressure cooking.

## 4. OPERATING INSTRUCTIONS

### 4.1 Opening and Closing the Lid (Lagoeasy'Up System)

The Lagoeasy'Up system allows for easy one-hand operation.



**Figure 4:** Demonstrates the Lagoeasy'Up patented opening system, allowing the lid to be opened effortlessly with one hand.

- **To Open:** With one hand, lift the handle and rotate the lid counter-clockwise until it unlocks. Ensure no pressure remains inside before opening.
- **To Close:** Align the lid with the pot, press down, and rotate clockwise until it locks securely. You should hear a click.

#### **4.2 Using the Vitamin Valve (2 Pressure Levels)**

The vitamin valve offers two distinct pressure settings for optimal cooking results.

## 2-DRUCK-VENTIL

2 Druckstufen, eine für schonendes Kochen und eine für schnelles Kochen



Figure 5: Close-up of the 2-pressure vitamin valve, indicating settings for gentle and fast cooking.

- **Position 1 (Gentle Cooking):** Ideal for sensitive foods such as vegetables, preserving up to 35% more vitamins and minerals.
- **Position 2 (Fast Cooking):** Suitable for quick cooking of fish and meat, significantly reducing cooking times.

Rotate the valve to the desired position before heating. The valve will rise when pressure is reached.

### 4.3 Cooking Process

1. Add ingredients and the required amount of liquid to the pot.
2. Close the lid securely using the Lagoeasy'Up system.
3. Set the vitamin valve to the appropriate pressure level (Position 1 or 2).
4. Place the cooker on a suitable heat source (compatible with all cooktops, including induction).
5. Heat until the valve rises and steam begins to release steadily. Reduce heat to maintain a gentle, consistent steam release.
6. Cook for the recommended time.
7. Once cooking is complete, remove from heat. Allow pressure to release naturally or use the quick release method (if applicable and safe for your recipe) by carefully turning the valve to the steam release position.
8. Open the lid only after all pressure has been released.

## UMWELTFREUNDLICH

### Spart Wasser, Zeit und Energie



Figure 6: Visual representation of the pressure cooker's efficiency, highlighting reduced cooking times and minimal water consumption.

## 5. MAINTENANCE AND CLEANING

### 5.1 Cleaning the Pot Body

The 18/10 stainless steel pot body is **dishwasher safe**. For hand washing, use warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry immediately to prevent water spots.

### 5.2 Cleaning the Lid and Gasket

- Remove the gasket from the lid after each use. Wash the gasket and lid components with warm soapy water.
- Ensure all food particles are removed from the valve mechanisms.
- Rinse thoroughly and allow all parts to dry completely before reassembling.
- Periodically check the gasket for cracks or hardening. Replace if necessary to maintain a proper seal.

### 5.3 Storage

Store the pressure cooker with the lid inverted or slightly ajar to allow air circulation and prevent odors. Ensure all parts are dry before storage.

## 6. TROUBLESHOOTING

- **Pressure not building:** Check if the lid is properly closed and sealed. Ensure the gasket is correctly seated and not damaged. Verify that the heat source is adequate and the valve is set correctly.
- **Steam leaking from lid:** This often indicates an improperly seated or worn gasket. Remove, clean, and re-seat the gasket. If the issue persists, the gasket may need replacement.
- **Food sticking to the bottom:** Ensure sufficient liquid is used. For delicate foods, consider using the steamer basket.
- **Difficulty opening the lid:** Ensure all internal pressure has been fully released. Never force the lid.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Lagostina
Model Number	012019010707
Capacity	7 Liters
Material	18/10 Stainless Steel
Color	Stainless Steel
Special Features	Dishwasher Safe (Pot Body), Locking Lid, Lagoeasy'Up Opening System, 2-Pressure Vitamin Valve, 6 Safety Systems
Base Type	Triple layer Lagofusion (suitable for all cooktops, including induction)
Item Weight	2.5 Kilograms (5.5 pounds)
Product Dimensions	12.6 x 10.63 x 11.61 inches
Control Method	Manual
Origin	Made in Italy



Figure 7: Cross-section illustrating the Lagofusion triple-layer base, composed of 18/10 stainless steel and aluminum, suitable for all cooktop types.

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

The Lagostina Nova Vitamin Lagoeasy'Up Pressure Cooker comes with a **25-year warranty**, covering manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact Lagostina customer support through their official website or the retailer where the product was purchased. Refer to the contact information provided with your product packaging.