



Manuals.plus /

› Rowenta /

› Rowenta Silence Force Bagged Vacuum Cleaner - Silent, Powerful, XL 4.5L Capacity, Special Animal Hair and Home Accessories, RO7769EA Allergy Special

Rowenta RO7769EA

Rowenta Silence Force Bagged Vacuum Cleaner User Manual

Model: RO7769EA | Brand: Rowenta

1. INTRODUCTION

Thank you for choosing the Rowenta Silence Force Bagged Vacuum Cleaner. This appliance is designed to provide powerful and silent cleaning performance for your home. Please read this manual carefully before using the appliance and keep it for future reference. Proper use and maintenance will ensure optimal performance and a long lifespan for your vacuum cleaner.



Image: The Rowenta Silence Force vacuum cleaner, showcasing the main unit, hose, telescopic tube, floor head, and various included accessories for different cleaning tasks.

2. SAFETY INSTRUCTIONS

Before using your appliance, please read the following safety instructions carefully:

- Always unplug the appliance from the mains socket before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance by a person responsible for their safety.

- Do not vacuum liquids, hot ashes, large sharp objects, or flammable/explosive substances.
- Regularly check the power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the dust bag or filters are not correctly installed.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

3. PACKAGE CONTENTS

Your Rowenta Silence Force vacuum cleaner package includes the following components:

- Vacuum Cleaner Unit
- Hose
- Telescopic Tube
- Power Air Floor Head
- Various Brushes and Nozzles (e.g., multi-purpose brush, special animal hair accessories)
- User Manual





Image: All components of the Rowenta Silence Force vacuum cleaner, including the main unit, hose, telescopic tube, and various cleaning attachments, displayed separately.

4. SETUP

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Hose:** Insert the hose into the air inlet opening on the main vacuum cleaner unit until it clicks securely into place.
2. **Connect the Telescopic Tube:** Attach the handle end of the hose to the telescopic tube. Adjust the tube length by pressing the release button and sliding it to your desired height.
3. **Install the Floor Head:** Connect the Power Air floor head or any other desired attachment to the end of the telescopic tube. Ensure it is firmly attached.
4. **Insert the Dust Bag:** Open the dust bag compartment. Ensure a Hygiene+ dust bag is correctly inserted and fully unfolded within the compartment. Close the compartment lid securely.
5. **Connect to Power:** Extend the power cord and plug it into a suitable mains socket.

5. OPERATING INSTRUCTIONS

Operating your Rowenta Silence Force vacuum cleaner is straightforward:

1. **Power On/Off:** Press the On/Off button located on the main unit to start or stop the vacuum cleaner.
2. **Adjust Suction Power:** Use the power control slider on the main unit to select one of the 4 available power settings. Adjust the suction power according to the surface you are cleaning (e.g., lower power for delicate fabrics, higher for carpets).
3. **Using the Power Air Head:** The Power Air head is designed for optimal dust removal on all floor types. It features 2 positions; switch between them as needed for hard floors or carpets.
4. **Using Accessories:** Utilize the integrated multi-purpose brush on the Ergo Comfort Silence handle for quick cleaning of furniture or delicate surfaces. Attach the special animal hair accessories for effective removal of pet hair from upholstery and carpets.



Image: A top-down view of the Rowenta Silence Force vacuum cleaner's main unit, highlighting the power control slider and other operational buttons.



Image: A person demonstrating the use of the Rowenta Silence Force vacuum cleaner on a light-colored carpet in a living room setting.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your vacuum cleaner:

- **Dust Bag Replacement:** The vacuum cleaner uses a 4.5 L Hygiene+ dust bag. Replace the dust bag when the indicator shows it is full, or when suction power noticeably decreases. To replace, open the dust bag compartment, remove the full bag, and insert a new one, ensuring it is properly seated.
- **Filter Maintenance:** The appliance features a permanent filter. Check and clean the permanent filter periodically according to the instructions provided in the full manual. Ensure the filter is completely dry before reinserting it.
- **Cleaning the Appliance:** Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Hose and Accessories:** Check the hose and accessories for blockages. Remove any debris to maintain optimal airflow.



Image: A rear view of the Rowenta Silence Force vacuum cleaner canister, showing the exhaust vent and power cord storage area, relevant for filter access and cord management.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No suction or weak suction	Full dust bag, blocked hose/accessories, dirty filter	Replace dust bag, clear blockages, clean/replace filter
Vacuum cleaner does not turn on	Not plugged in, power outlet issue, damaged cord	Check power connection, try another outlet, inspect cord for damage
Unusual noise during operation	Blockage in hose/brush, motor issue	Check for and remove blockages. If noise persists, contact customer support.

For more complex issues, please refer to the comprehensive troubleshooting guide in the full user manual or contact Rowenta customer support.

8. SPECIFICATIONS

Key technical specifications for the Rowenta Silence Force Bagged Vacuum Cleaner (Model RO7769EA):

Feature	Specification
Brand	Rowenta
Model	RO7769EA
Special Feature	Excellent energy efficiency, great maneuverability, effective and adaptable cleaning, Ergo Comfort Silence handle, well-accessorized, ultra-silent
Filter Type	Bagged (Hygiene+ bag)
Surface Recommendation	All floor types
Power Source	Corded Electric
Voltage	450 Volts
Cordless	No
Item Weight	8.85 Kilograms
Capacity	4.5 Liters (dust bag)

9. WARRANTY AND SUPPORT

Your Rowenta Silence Force vacuum cleaner comes with:

- **2-Year Warranty:** This product is covered by a 2-year manufacturer's warranty. Please retain your proof of purchase.
- **10-Year Repairability:** Rowenta is committed to making spare parts available for 10 years from the date of purchase, ensuring long-term repairability of your appliance.
- **Made in France:** This product is manufactured in France, adhering to high quality standards.

For warranty claims, technical support, or to inquire about spare parts, please visit the official Rowenta website or contact their customer service department. Contact details can typically be found in the full user manual or on the Rowenta brand store page.

**CALCUL DE L'INDICE DE RÉPARABILITÉ ET
PRÉSENTATION DES PARAMÈTRES AYANT PERMIS DE L'ÉTABLIR**

Aspirateur filaire

**FICHE D'INFORMATION À TRANSMETTRE AUX DEMANDEURS
(cf. Article L. 541-9-2 du Code de l'environnement)**

Date du calcul	20/09/2022
Nom ou marque commerciale du fournisseur	ROWENTA
Adresse du fournisseur	GRUPE SEB : Chemin du virolet 27200 VERNON
Référence du modèle donnée par le fournisseur	RO7769EA

Critère	Sous-critère	Note du sous-critère sur 10	Coefficient du sous-critère	Note du critère sur 20	Total des notes des critères sur 100	
CRITÈRE 1 : DOCUMENTATION	1.1 Durée de disponibilité de la documentation technique et relative aux conseils d'utilisation et d'entretien	9,2	2	18,5	93,9	
CRITÈRE 2 : DÉMONTABILITÉ, ACCÈS, OUTILS, FIXATIONS	2.1 Facilité de démontage des pièces de la liste 2*	7,8	1	17,8		
	2.2 Outils nécessaires (liste 2)	10,0	0,5			
	2.3 Caractéristiques des fixations entre les pièces de la liste 1** et de la liste 2	10,0	0,5			
CRITÈRE 3 : DISPONIBILITÉ DES PIÈCES DÉTACHÉES	3.1 Durée de disponibilité des pièces de la liste 2	8,5	1	17,7		
	3.2 Durée de disponibilité des pièces de la liste 1	9,5	0,5			
	3.3 Délais de livraison des pièces de la liste 2	8,5	0,3			
	3.4 Délais de livraison des pièces de la liste 1	9,5	0,2			
CRITÈRE 4 : PRIX DES PIÈCES DÉTACHÉES	4. Rapport prix des pièces de la liste 2 sur prix de l'équipement neuf	10,0	2	20,0		9,4
CRITÈRE 5 : CRITÈRE SPÉCIFIQUE	5.1 Assistance à distance sans frais	10,0	2	20,0		
Note de l'indice sur 10					9,4	

*liste 2 : liste des 3 à 5 pièces détachées au maximum (selon la catégorie d'équipements concernée) dont la casse ou les pannes sont les plus fréquentes ;

**liste 1 : liste de 10 autres pièces détachées au maximum (selon la catégorie d'équipements concernée) dont le bon état est nécessaire au fonctionnement de l'équipement.

Image: A table detailing the reparability index for the Rowenta RO7769EA model, indicating high scores for documentation, ease of disassembly, availability of spare parts, and cost of spare parts.