

Midea MWMFL070HEF

Midea 7 kg Front Load Washing Machine MWMFL070HEF User Manual

Model: MWMFL070HEF

1. IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before operating your Midea washing machine. Retain it for future reference. Incorrect use can lead to personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded power outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.
- **Water Safety:** Connect water inlet hoses securely to prevent leaks. Ensure the drain hose is properly installed to avoid flooding.
- **Child Safety:** Keep children away from the appliance during operation. The door can become hot during wash cycles.
- **Appliance Placement:** Install the machine on a firm, level surface. Do not block ventilation openings.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.

2. PRODUCT OVERVIEW

The Midea MWMFL070HEF is a 7 kg fully automatic front load washing machine designed for efficient and thorough cleaning of various fabric types. It features an in-built heater and multiple wash programs.



Image 2.1: Front view of the Midea MWMFL070HEF washing machine, showing the main door, detergent dispenser, and control panel.

Control Panel

The control panel allows you to select wash programs, adjust settings, and start/pause cycles. Familiarize yourself with its layout for optimal use.



Image 2.2: Close-up of the Midea MWMFL070HEF control panel, displaying the program selector dial, function buttons, and display area.

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washing machine. It is recommended to have the appliance installed by a qualified technician.

3.1 Unpacking

- Remove all packaging materials, including the transport bolts located at the rear of the machine.
- Ensure the included rat protection cover is installed as per the separate instructions provided.

3.2 Location Requirements

Place the washing machine on a solid, level floor. Avoid direct sunlight or extreme temperatures. Ensure adequate space around the machine for ventilation and maintenance.



Image 3.1: Side view of the Midea MWMFL070HEF washing machine illustrating its dimensions: 85 cm height, 59.5 cm width, and 47 cm depth.



Image 3.2: The Midea MWMFL070HEF washing machine positioned next to an average-height person, providing a visual reference for its size and height.

3.3 Water and Electrical Connections

- Connect the cold water inlet hose to a cold water tap with a 3/4-inch thread.
- Securely attach the drain hose to a standpipe or laundry tub, ensuring it is not kinked or blocked.
- Plug the power cord into a dedicated, grounded 230V, 50Hz electrical outlet.

3.4 Leveling the Machine

Use a spirit level to ensure the machine is perfectly level. Adjust the adjustable feet at the bottom of the machine as needed to prevent excessive vibration during operation.

4. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your Midea washing machine.

4.1 Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Open the door and load items loosely into the drum, ensuring not to overload. The maximum capacity is 7 kg.
- Close the door firmly until it clicks.

4.2 Adding Detergent and Additives

Pull out the detergent dispenser drawer and add appropriate amounts of detergent, fabric softener, and pre-wash agents to their respective compartments.

4.3 Selecting a Wash Program

Turn the program selector dial to choose one of the 23 available wash programs. Refer to the program guide (usually printed on the detergent drawer or inside the door) for details on each program.



Image 4.1: Side view of the Midea MWMFL070HEF washing machine, visually indicating key features such as 23 wash programs and the prewash function.

4.4 Adjusting Settings and Starting the Cycle

- After selecting a program, you can adjust options like temperature and spin speed (up to 1000 RPM) using the corresponding buttons.
- If your laundry is heavily soiled, consider activating the Prewash function.
- Press the 'Start/Pause' button to begin the wash cycle.

4.5 Using the In-Built Heater

The in-built heater automatically activates with programs that require higher water temperatures, ensuring effective cleaning and sterilization. No manual activation is typically required.

5. MAINTENANCE

Regular maintenance helps prolong the life of your washing machine and ensures optimal performance.

5.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent detergent residue buildup. Rinse it under running water and dry before reinserting.

5.2 Cleaning the Drum and Exterior

Wipe the exterior of the machine with a soft, damp cloth. For the drum, run a 'Drum Clean' cycle (if available) or a hot wash with no laundry and a cup of white vinegar or a washing machine cleaner.

5.3 Cleaning the Filter

Locate and clean the drain pump filter regularly (usually at the bottom front of the machine) to remove lint, coins, or other debris that may obstruct drainage.

5.4 Care for the Antibacterial Gasket

The antibacterial gasket helps prevent mold and mildew. After each wash, wipe the gasket dry with a cloth and leave the door slightly ajar to allow air circulation.

6. TROUBLESHOOTING

Before contacting service, refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, 'Start/Pause' not pressed.	Check power connection, ensure door is latched, press 'Start/Pause'.
Water not draining	Drain hose kinked/blocked, pump filter clogged.	Straighten drain hose, clean pump filter.
Excessive vibration	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed, redistribute laundry.
No water intake	Water tap closed, inlet hose kinked, water supply cut off.	Open water tap, straighten hose, check household water supply.

If the problem persists after attempting these solutions, please contact customer service.

7. SPECIFICATIONS

- **Model:** MWMFL070HEF
- **Capacity:** 7 Kilograms
- **Spin Speed:** 1000 RPM
- **Wash Programs:** 23
- **Access Location:** Front Load
- **Heater:** In-Built
- **Dimensions (H x W x D):** 85 x 59.5 x 47 Centimeters
- **Item Weight:** 26 kg 700 g
- **Color:** White
- **Special Features:** Prewash function, Antibacterial Gasket

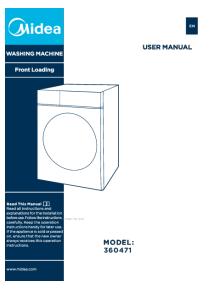
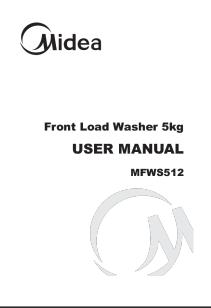
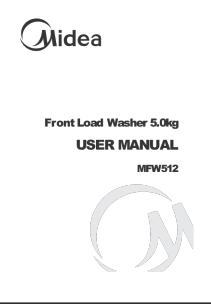
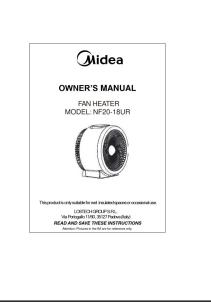
8. WARRANTY AND SUPPORT

Your Midea washing machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, service requests, or to inquire about spare parts, please contact Midea customer support. Contact details can typically be found on the warranty card or the official Midea website.

© 2023 Midea. All rights reserved.

Related Documents - MWMFL070HEF

	<p>Midea 7kg Front Load Washing Machine User Manual</p> <p>Comprehensive user manual for the Midea 7kg front load washing machine, model 360471. Includes safety instructions, installation guide, operation details, maintenance tips, and troubleshooting.</p>
	<p>Midea MFWS512 5kg Front Load Washer User Manual</p> <p>User manual for the Midea MFWS512 5kg front load washing machine, providing detailed instructions on installation, operation, safety precautions, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p>Midea MFW512 Front Load Washer 5.0kg User Manual</p> <p>Comprehensive user manual for the Midea MFW512 5.0kg front load washing machine, covering installation, operation, maintenance, troubleshooting, and specifications.</p>
	<p>Midea MFW1014 Front Load Washer 10kg User Manual - Installation, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for the Midea MFW1014 10kg front load washing machine. Includes safety information, installation instructions, control features, wash programs, maintenance tips, troubleshooting guide, and specifications.</p>
	<p>Midea NF20-18UR Fan Heater: Owner's Manual, Safety, and Specifications</p> <p>Comprehensive guide for the Midea NF20-18UR fan heater, covering safety warnings, operating instructions, troubleshooting, cleaning, storage, and detailed technical specifications. Essential information for safe and effective use.</p>



Washing Machine
OWNER'S MANUAL

MFE50-JU1012/C31E-AU(25)
MFE60-JU1212/C31E-AU(25)
MFE75-JS1412/C31E-AU(25)



[Midea Washing Machine Owner's Manual - Models MFE50, MFE60, MFE75](#)

Comprehensive owner's manual for Midea front-load washing machines (models MFE50-JU1012/C31E-AU(25), MFE60-JU1212/C31E-AU(25), MFE75-JS1412/C31E-AU(25)). Includes safety instructions, installation guide, operation details, maintenance procedures, technical specifications, and testing methods.