



[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic Remote Control Ceiling Fan F-56UPGAADSXG User Manual

Panasonic F-56UPGAADSXG

Panasonic Remote Control Ceiling Fan F-56UPGAADSXG User Manual

Model: F-56UPGAADSXG

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and operation. Retain this manual for future reference.

- **Electrical Safety:** Ensure the power supply is disconnected before installation, cleaning, or maintenance. All electrical work must be performed by a qualified electrician.
- **Installation:** The fan must be securely mounted to a ceiling joist or structure capable of supporting its weight. Ensure adequate clearance between the fan blades and any obstructions.
- **Operation:** Do not insert any objects into the path of the rotating blades. Keep children and pets away from the fan during operation.
- **Maintenance:** Only use recommended cleaning agents. Do not use abrasive materials or harsh chemicals.

2. PRODUCT OVERVIEW

The Panasonic F-56UPGAADSXG is a remote-controlled ceiling fan designed for efficient air circulation. It features a durable metal blade design and comprehensive safety features.



Figure 2.1: Panasonic F-56UPGAADSXG Ceiling Fan and Remote Control.

This image displays the Panasonic F-56UPGAADSXG ceiling fan, characterized by its black blades and a sleek black and gold motor housing. Positioned below the fan is its accompanying white remote control. The remote features clearly labeled buttons for power (ON/OFF), three-speed selection (1, 2, 3), timer settings (1, 3, 6 hours), and a dedicated sleep mode button.

Key Features:

- Blade length: 140cm
- Wireless Remote Control
- Elegant Design with Dynamic Metal Blades
- 3-speed Selection
- 1, 3, 6 Hours Timer
- Sleep Mode
- Comprehensive Safety Features
- Permanently Lubricated Double Ball Bearing
- Easy Installation

3. SETUP AND INSTALLATION

This section outlines the general steps for installing your Panasonic ceiling fan. It is highly recommended that installation be performed by a qualified professional to ensure safety and proper functioning.

Installation Steps (General Guide):

1. **Preparation:** Turn off power at the circuit breaker. Ensure the mounting location is structurally sound and can support the fan's weight.

2. **Mounting Bracket Installation:** Securely attach the mounting bracket to the ceiling outlet box or support structure.
3. **Wiring:** Connect the fan's electrical wires to the household wiring according to local electrical codes. Ensure all connections are secure.
4. **Fan Assembly:** Attach the fan motor assembly to the mounting bracket. Install the fan blades, ensuring they are securely fastened.
5. **Remote Receiver Installation:** Install the remote control receiver unit within the fan's canopy, ensuring it is properly connected to the fan's wiring.
6. **Power On:** Restore power at the circuit breaker and test the fan's operation.

Note: Detailed installation diagrams and specific wiring instructions are typically provided in a separate installation guide included with the product packaging.

4. OPERATING INSTRUCTIONS

Your Panasonic ceiling fan is operated using the included wireless remote control. Ensure batteries are correctly inserted into the remote control unit.

Remote Control Functions:

- **OFF/ON Button:** Press this button to turn the fan on or off.
- **Speed Buttons (1, 2, 3):** Select the desired fan speed. '1' is the lowest speed, and '3' is the highest speed.
- **Timer Buttons (1, 3, 6h):** Set the fan to operate for a specific duration (1, 3, or 6 hours) before automatically turning off. Press the corresponding button for the desired timer setting.
- **Sleep Mode Button:** Activates the sleep mode, which typically adjusts the fan speed to a lower, quieter setting for comfortable sleep.

Ensure the remote control is pointed towards the fan's receiver for optimal signal transmission.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan. Always disconnect power before performing any maintenance.

- **Cleaning:**
 - Wipe the fan blades and motor housing with a soft, damp cloth.
 - Do not use abrasive cleaners, solvents, or harsh chemicals as they may damage the finish.
 - Ensure the fan is completely dry before restoring power.
- **Lubrication:** The fan features permanently lubricated double ball bearings, meaning no additional lubrication is required throughout its lifespan.
- **Blade Tightness:** Periodically check that all blade screws are tight. Loose blades can cause wobbling and noise.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your ceiling fan.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Remote control batteries are dead; Remote control not paired.	Check circuit breaker; Replace remote batteries; Refer to pairing instructions (if applicable, usually in installation guide).
Fan wobbles.	Loose blade screws; Unbalanced blades; Improper mounting.	Tighten all blade screws; Check for bent blades and replace if necessary; Ensure fan is securely mounted to the ceiling.
Remote control not responding.	Dead batteries; Obstruction between remote and receiver; Remote out of range.	Replace batteries; Remove obstructions; Move closer to the fan.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model Number	F-56UPGAADSXG
Blade Length	140cm
Number of Speeds	3
Power Source	Electric
Controller Type	Remote Control
Material	Metal
Item Weight	6700 Grams (6.7 kg)
Package Dimensions	11 x 7 x 7 cm
Mounting Type	Ceiling Mount

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Panasonic website. Keep your purchase receipt as proof of purchase.

For technical support, troubleshooting assistance beyond this manual, or spare parts, please contact Panasonic customer service. Contact details can typically be found on the Panasonic official website or in your product packaging.

You may also visit the [Panasonic Store on Amazon](#) for more product information.

