

[Manuals.plus](#) /

› [Kärcher](#) /

› Kärcher FC 7 Cordless 2-in-1 Floor Cleaner User Manual

Kärcher 1.055-730.0

Kärcher FC 7 Cordless 2-in-1 Floor Cleaner User Manual

Model: 1.055-730.0

Brand: Kärcher

INTRODUCTION

Thank you for choosing the Kärcher FC 7 Cordless 2-in-1 Floor Cleaner. This innovative device is designed to simplify your floor cleaning routine by combining vacuuming and mopping in one efficient step. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

SAFETY INSTRUCTIONS

Always observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only Kärcher recommended cleaning agents.
- Do not use the appliance on wet carpets or rugs.
- Ensure the dirty water tank is properly secured before operation to prevent spills.
- Unplug the charger from the outlet when not in use and before cleaning.

PRODUCT OVERVIEW

The Kärcher FC 7 Cordless is a versatile floor cleaner designed for hard surfaces. It features a main unit with a handle, a cleaning head with four rotating microfiber rollers, a clean water tank, a dirty water tank, and a charging station.





Image: Kärcher FC 7 Cordless 2-in-1 Floor Cleaner, showing the main unit, charging station, cleaning brush, and a small bottle of cleaning solution. The device is yellow and grey, designed for efficient floor cleaning.

SETUP

1. Unpacking and Assembly

Carefully remove all components from the packaging. Assemble the handle to the main unit until it clicks into place. Ensure all parts are securely connected.

2. Charging the Battery

Place the FC 7 Cordless onto its charging station. Connect the charging station to a power outlet. The battery indicator will show the charging status. A full charge takes approximately 4 hours, providing up to 45 minutes of runtime.

3. Filling the Clean Water Tank

Remove the clean water tank from the device. Fill it with fresh tap water and, if desired, add a small amount of Kärcher floor cleaning solution. Do not exceed the maximum fill line. Reattach the tank securely.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button to turn the device on. The rollers will begin to rotate and moisten. Press the button again to turn off the device.

2. Selecting Cleaning Modes

The FC 7 Cordless offers three cleaning modes:

- **Level 1 (Parquet Mode):** Ideal for delicate wooden floors, with lower water flow and roller speed (450 rpm).
- **Level 2 (Stone/Tile Mode):** Suitable for general hard floors, with increased water flow and roller speed (490 rpm).
- **Boost Mode:** For stubborn dirt and heavily soiled areas, providing maximum water flow and roller speed (530 rpm).

Adjust the mode using the dedicated buttons on the handle.

3. Cleaning the Floor

Guide the device across the floor. The self-propelled rollers will assist in movement. The flexible head allows easy cleaning under furniture. The device simultaneously picks up dry debris and mops the floor, leaving it clean and dry within approximately 2 minutes.



Image: A woman is using the Kärcher FC 7 Cordless floor cleaner on a tiled floor in a living area. The device is actively cleaning, demonstrating its maneuverability and ease of use in a home environment.

4. Emptying the Dirty Water Tank

A visual and audible signal will indicate when the dirty water tank is full. Remove the tank and empty its contents into a drain. Rinse the tank with clean water before reattaching it.

5. Refilling the Clean Water Tank

When the clean water tank is empty, a signal will alert you. Refill the tank as described in the Setup section.

MAINTENANCE

1. Auto-Cleaning Function

After each use, place the device on its charging station and activate the auto-cleaning function. This will rinse the rollers and internal components, ensuring hygienic operation.

2. Cleaning the Rollers

The microfiber rollers can be removed and washed in a washing machine (follow care instructions on the rollers). For daily cleaning, rinse them under running water after the auto-cleaning cycle.

3. Cleaning the Dirty Water Tank and Filter

Regularly clean the dirty water tank and any associated filters to prevent odors and maintain suction performance. Rinse

thoroughly with water.

4. General Cleaning

Wipe down the exterior of the device with a damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on	Battery is empty; Device not properly assembled.	Charge the battery; Check all connections are secure.
Poor cleaning performance / Streaks	Dirty rollers; Dirty water tank full; Clean water tank empty; Incorrect cleaning mode.	Clean or replace rollers; Empty dirty water tank; Refill clean water tank; Select appropriate cleaning mode.
Dirty water tank difficult to remove	Possible slight suction or tight fit.	Apply firm, steady pressure while detaching. Ensure no debris is obstructing.
Rollers stop rotating / Blocked	Debris caught in rollers; Rollers not properly installed.	Remove debris; Reinstall rollers correctly.
Device leaves too much water on floor	Dirty water tank full; Rollers oversaturated.	Empty dirty water tank; Ensure rollers are clean and not excessively wet before starting.

SPECIFICATIONS

- **Model Number:** 1.055-730.0
- **Dimensions (L x W x H):** 31 x 23 x 121 cm
- **Weight:** 6.29 kg
- **Power:** 1000 Watts
- **Battery Runtime:** Up to 45 minutes (Level 2)
- **Charging Time:** 4 hours
- **Sound Level:** 71 dB
- **Cleaning Modes:** 3 (Parquet, Stone, Boost)
- **Working Width (Rollers):** 300 mm
- **Recommended Use:** Hard floors

WARRANTY AND SUPPORT

Kärcher products are built to high-quality standards. This product comes with a manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Kärcher website. For technical support, spare parts, or service inquiries, please contact Kärcher customer service or an authorized service center. Availability of spare parts is typically 5 years from the date of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08465S482>

More documents and user manuals: <https://manuals.plus/>