



[Manuals.plus](#) /

› [Paladone](#) /

› Paladone D20 Dice Light BDP Instruction Manual

Paladone PP6639DD

Paladone D20 Dice Light BDP Instruction Manual

Model: PP6639DD | Brand: Paladone

INTRODUCTION

This manual provides detailed instructions for the Paladone D20 Dice Light BDP, a USB-powered, color-changing mood light designed for decorative purposes. Please read this manual thoroughly before use to ensure proper operation and safety.



Image: The Paladone D20 Dice Light BDP in its unlit, white state.

SAFETY INFORMATION

- This product is intended for decorative use only and is **not a toy**. Keep out of reach of small children.
- Retain the original packaging as it contains important product information.
- Use only with a compatible USB power source (DC 5V).
- Do not expose the light to water, excessive moisture, or extreme temperatures.
- Do not attempt to disassemble, modify, or repair the product. Refer all servicing to qualified personnel.

PACKAGE CONTENTS

- 1 x Paladone D20 Dice Light BDP
- 1 x USB Power Cable

SETUP

1. Carefully unpack the D20 Dice Light and its USB cable from the packaging.

2. Locate the USB port on the D20 Dice Light.
3. Insert the small end of the provided USB cable into the D20 Dice Light's USB port.
4. Insert the larger end of the USB cable into a compatible USB power source (e.g., a USB wall adapter, computer USB port, or power bank).
5. Place the D20 Dice Light on a stable, flat surface.



Image: USB port for power connection.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the button located on the D20 Dice Light to turn the light on. Press it again to turn it off.
2. **Color Changing Mode:** When first turned on, the light will automatically cycle through its available colors: white, yellow, orange, lilac, and turquoise.
3. **Static Color Mode:** To select and hold a static color, press the button while the desired color is displayed during the cycling sequence. The light will then remain on that specific color.
4. **Return to Color Cycling:** To return to the automatic color cycling mode, turn the light off and then on again.

Your browser does not support the video tag.

Video: Demonstration of the Paladone D20 Dice Light being plugged in and cycling through its various colors.



Red Light



Yellow Light



Green Light



Turquoise Light

MAINTENANCE

- **Cleaning:** To clean the D20 Dice Light, gently wipe its surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or liquids, as these may damage the product.
- **Storage:** When not in use, store the light in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Light does not turn on.	<ul style="list-style-type: none">◦ Ensure the USB cable is securely connected to both the light and the power source.◦ Verify that the USB power source is functional. Try a different USB port or wall adapter.◦ Confirm the power button on the light has been pressed.

Problem	Solution
Light does not change color.	<ul style="list-style-type: none">◦ If the light is static, turn it off and then on again to reset it to color cycling mode.◦ Press the button firmly to cycle through colors or select a static color.

SPECIFICATIONS

- **Brand:** Paladone
- **Model Number:** PP6639DD
- **Dimensions:** 7.25 x 7.25 x 2.95 inches (approximately 18 cm tall)
- **Weight:** 0.3 Kilograms
- **Material:** BDP Plastic
- **Power Source:** USB (DC 5V)
- **Light Colors:** White, Yellow, Orange, Lilac, Turquoise

WARRANTY AND SUPPORT

This Paladone product comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the product packaging or contact Paladone customer support directly.

For further assistance, technical support, or any inquiries not covered in this manual, please visit the official Paladone website or contact their customer service department through the contact information provided on their website or product packaging.